

Issued by NMI Certin B.V.

In accordance with

- WELMEC 8.8 "General and Administrative Aspects of the Voluntary System of Modular Evaluation of Measuring instruments under the MID".
- OIML R117-1 Edition 2007 (E) "Dynamic measuring systems for liquids other than water".
- EN 12405-1/A2 Edition 2010 "Gas meters – Conversion devices – Part 1: Volume conversion".
- OIML R140-1 Edition 2007 (E) "Measuring systems for gaseous fuel".

Producer

Endress+Hauser Wetzer GmbH + Co. KG
Obere Wank 1
87484 Nesselwang
Germany

Part

A **temperature transducer** intended to be used as a part of a dynamic measuring system for liquids other than water.

Producer's mark or name : Endress+Hauser

Type designation : TR62; TR66; TR88; TM131

Accuracy class : 0,3

Further properties and test results are described in the annexes:

- Description TC8683 revision 3;
- Documentation folder TC8683-2.

Remarks

- This revision replaces the previous revisions;
- The documentation folder is not changed.

Issuing Authority

NMI Certin B.V., Notified Body number 0122
14 February 2020

Certification Board

NMI Certin B.V.
Thijsseweg 11
2629 JA Delft
The Netherlands
T +31 88 636 2332
certin@nmi.nl
www.nmi.nl

This document is issued under the provision that no liability is accepted and that the producer shall indemnify third-party liability.

Reproduction of the complete document only is permitted.

This document is digitally signed and sealed. The digital signature can be verified in the blue ribbon at the top of the electronic version of this certificate.

1 General information about the temperature transducer

Properties of this temperature transducer, whether mentioned or not, shall not conflict with the legislation.

This Parts Certificate is the positive result of the applied voluntary, modular approach, for a component of a measuring instrument, as described in WELMEC 8.8.

The complete measuring system must be covered by an EC-type examination certificate or an EU-type examination certificate.



Example of the convertor



Assembly with convertor and sensor

1.1 Essential parts

The temperature transducer can be composed of the following parts:

| Description | Manufacturer | Type | Remarks |
|--------------------|---|---------------|--|
| Temperature Sensor | Endress + Hauser Wetzer GmbH + Co. KG | TPR100 | |
| | | TPR300 | |
| | | TS111 | |
| | | TS211 | |
| Convertor | Endress + Hauser Wetzer GmbH + Co. KG | TMT82-xxxxx | |
| | | TMT182-x41Bxx | From January 2020 Type TMT 182 is no longer produced |

Remarks

The "x"-positions order codes are presented for various Ex types, fittings and name plate markings. Those type variations do not affect Weights & Measures applications.

See documentation number 8683/1-01, 02, 03 04 and 2-01 for overview of parts.

1.2 Essential characteristics

1.2.1 Measuring range

The temperature transducer has the following characteristics:

| Application | T _{min} [°C] | T _{max} [°C] | Sensor type |
|-------------|-----------------------|-----------------------|--------------------------------|
| Liquid | -30 | +120 | All described in paragraph 1.1 |
| Gas | -30 | +120 | |

1.2.2 Temperature range ambient

- -40°C / +85 °C
- -40°C / +70 °C

1.2.3 Environment classes

- M3 / E2 + E3

1.2.4 Power supply

The temperature transducer is powered in the range 11 - 42V DC.

1.2.5 Software specification (refer to WELMEC 7.2)

- Software type P;
- Risk Class C;
- Extension T,I2 and I5 while extensions S, L and D are not applicable.

| Software versions | CRC Checksum | Remarks |
|-------------------|--------------|---------|
| 01.01.08 | 9A014314 | |
| 01.01.10 | A11EAD81 | |
| 01.01.16 | C89BA929 | |
| 01.02.11 | C3A4A00D | |

The software version and checksum can be check via the HART terminal or calculating/ indicating device. The software is not separated in a legal part and a non-legal part, and as such can be considered as one essential part. The validity of the program and the parameters are continuously checked. If these checks fail, an alarm is generated.

1.2.6 Data communication

The following output(s) can be used for legally relevant data:

- 4...20 mA analog output;
- HART superimposed;

1.3 Essential shapes

1.3.1 Inscriptions

On the temperature transducer, clearly visible, at least the following is inscribed:

- Parts Certificate number TC8683;
- Name or trade mark of the producer;
- Type designation;
- Serial number and year of manufacture;
- Measuring range T_{min} and T_{max} ;
- Ambient temperature range;
- Output range of 4-20 mA (if applicable).

1.3.2 EMI protection measures

The following measures are taken for EMI protection:

- The shield of the cable shall be electrically connected to the housing of the instrument the temperature probe is connected to.

1.4 Conditional parts

1.4.1 Housing

The housing of the temperature transducer is made of aluminium.

1.4.2 Transducer assembly

The transducer may have different assembly. See table below for the various assemblies of the transducer:

| Part | Documentation |
|-------------------------------------|---------------|
| Connection head assembly type TS111 | 8683/2-01 |
| Connection head assembly type TS211 | 8683/2-01 |
| Connection head assembly type TM131 | 8683/2-01 |
| Connection head assembly type TR62 | 8683/2-01 |

1.5 Conditional characteristics

1.5.1 Programming

Weights & Measures parameters can be changed after opening to housing, thus breaking a seal, and connecting to the transducer with the Endress+Hauser "FieldCare" tool. After setting the parameters the transducer must be set to "write protect".

Setting of parameters with a remote HART terminal is also possible only when the transducer is set to "write protect off" with the "FieldCare" tool.

Detail parameter setting information can be found in the user manual; this information is part of the documentation folder see documentation no. 8683/1-05.

1.5.2 Parameter settings

The legally relevant settings, which cannot be altered anymore after putting the device into Custody Transfer Mode as follows:

| Parameter | Setting |
|--|--|
| Setup / unit | °C or K |
| Setup / Sensor type and connection type | 4 wire Pt100 |
| Setup / lower range and upper range value | To be specified and clarified by the user or manufacturer. |
| Setup / Advanced setup / Sensor / Sensor offset | Correct setting. |
| Setup / Advanced setup / Current output / Current trimming 4 mA and Current trimming 20 mA | Correct settings. |
| Setup / Advanced setup / Display / Decimal places | At least two. |
| Setup / Advanced setup / SIL / SIL option | Yes |
| Setup / Advanced setup / SIL / SIL parameters | To be specified and clarified by the user or manufacturer. |
| Expert / System / Damping | To be specified and clarified by the user or manufacturer. |
| Expert / System / Sensor trimming | Only allowed before and / or during verification |
| Expert / Communication / HART configuration / HART address | Correct setting |

- All parameter settings may be read out and displayed:
 - by the electronic calculating/indicating device connected to the temperature transducer, or
 - for example via a computer (HART terminal) temporarily connected to the temperature transducer;

1.5.3 Alarm handling

Under the following conditions the temperature transducer generates an accountable alarm:

- if the meter is in the test mode or in the maintenance mode;
- if the flow rate is outside certain pre-programmed limits;

2 Seals

The following seals are applied:

- The inscriptions are fixed to the temperature transducer and secured against removal by seal or it will be destroyed when removed.
- The housing of the temperature transducer is sealed against opening after the temperature transducer is set to Custody Transfer mode.

3 Conditions for conformity assessment

- Other parties may use this Parts Certificate without the written permission of the producer.
- The temperature probe must be constructed in accordance with the description.
- Before taken into use, the temperature transducer shall be calibrated over the operational measuring range.
- The calibration can be performed on site or at a test laboratory. In the latter case the relevant parameter settings have to be registered and checked at the initial verification on site.

4 Reports

An overview of performed tests is given in the reports:

- No. NMI- SO14204888;
- No. NMI-16200238-01;
- No. NMI-16200238-02;
- No. NMI-16200238-03;
- No. NMI-16200238-04;
- No. NMI-1902357-01;
- No. NMI-1902357-02;
- No. NMI-1902357-03;

A report can be a test report, an evaluation report, a type evaluation report and/or a pattern evaluation report.