

Safety Instructions

Proline Prosonic Flow B 200

NEPSI: Zone 1
Ex d version



Document: XA01068D
Safety instructions for electrical apparatus for explosion-hazardous areas →  3

Proline Prosonic Flow B 200

Table of contents

Associated documentation	4
Manufacturer's certificates	4
Manufacturer address	4
Extended order code	5
Safety instructions: General	7
Safety instructions: Installation	7
Temperature tables	9
Connection data: Signal circuits	10

Associated documentation

All documentation is available:

- On the CD-ROM supplied (not included in the delivery for all device versions).
- Available for all device versions via:
 - Internet: www.endress.com/deviceviewer
 - Smart phone/tablet: *Endress+Hauser Operations App*
- In the Download Area of the Endress+Hauser web site: www.endress.com → Download

This document is an integral part of the following Operating Instructions:

Measuring device	Documentation code
	HART
Prosonic Flow B 200	BA01031D

Additional documentation

Contents	Document type	Documentation code
Remote display FHX50	Special documentation	SD01007F
	Safety Instructions Zone 0, Zone 21; Ex ia	XA01076F
Explosion Protection	Brochure	CP00021Z/11

Please note the documentation associated with the device.

Manufacturer's certificates**NEPSI Declaration of Conformity**

Certificate number:

GYJ18.1096X

Affixing the certificate number certifies conformity with the following standards (depending on the device version):

- GB3836.1-2010
- GB3836.2-2010
- GB3836.4-2010

Manufacturer address

Endress+Hauser Flowtec AG
Kägenstrasse 7
4153 Reinach BL
Switzerland

Extended order code

The extended order code is indicated on the nameplate, which is affixed to the device in such a way that it is clearly visible. Additional information about the nameplate is provided in the associated Operating Instructions.

Structure of the extended order code

*****	_	***** ... *****	+	A*B*C*D*E*F*G*...
<i>(Device type)</i>		<i>(Basic specifications)</i>		<i>(Optional specifications)</i>

* = Placeholder
At this position, an option (number or letter) selected from the specification is displayed instead of the placeholders.

Device type

The device and the device design is defined in the "Device type" section (Product root).

Basic specifications

The features that are absolutely essential for the device (mandatory features) are specified in the basic specifications. The number of positions depends on the number of features available. The selected option of a feature can consist of several positions.

Optional specifications

The optional specifications describe additional features for the device (optional features). The number of positions depends on the number of features available. The features have a 2-digit structure to aid identification (e.g. JA). The first digit (ID) stands for the feature group and consists of a number or a letter (e.g. J = Test, Certificate). The second digit constitutes the value that stands for the feature within the group (e.g. A = 3.1 material (wetted parts), inspection certificate).

More detailed information about the device is provided in the following tables. These tables describe the individual positions and IDs in the extended order code which are relevant to hazardous locations.

Device type

Position	Order code for	Option selected	Description
1	Instrument family	9	Ultrasonic transit time flowmeter
2	Sensor	B	Sensor type
3	Transmitter	2	Transmitter type: 2-wire, compact version

Position	Order code for	Option selected	Description
4	Generation index	B	Platform generation
5, 6	Nominal diameter	DN 50 to 200	Nominal diameter of sensor

Basic specifications

Position	Order code	Selected option	Description
1, 2	Approval	NJ	Ex d ia IIC T1 ~ T6 Gb
3	Output	A	4-20mA HART
		B	4-20mA HART, Pulse/frequency/switch output
		C	4-20mA HART + 4-20mA analog
		D	4-20mA HART, pulse/frequency/switch output, 4-20mA input
4	Display; Operation	A	W/o; via communication
		C	SD02 4-line; push buttons + data backup function
		E	SD03 4-line, illum.; touch control + data backup function
		L	Prepared for display FHX50 + M12 connection ¹⁾
		M	Prepared for display FHX50 + custom connection ¹⁾

1) FHX50 is approved according to GYJ13.1123X.

Optional specifications

No options specific to hazardous locations are available.

Safety instructions:
General

- Staff must meet the following conditions for mounting, electrical installation, commissioning and maintenance of the device:
 - Be suitably qualified for their role and the tasks they perform.
 - Be trained in explosion protection.
 - Be familiar with national regulations (e.g. GB3836.15-2000).
- Install the device according to the manufacturer's instructions and the following standards:
 - GB50257-2014 "Code for construction and acceptance of electric device for explosive atmospheres and fire hazard electrical equipment installation engineering"
 - GB3836.13-2013 "Explosive atmospheres - Part 13: Equipment repair, overhaul and reclamation".
 - GB3836.15-2000 "Electrical apparatus for explosive gas atmospheres – Part 15: Electrical installations in hazardous area (other than mines)"
 - GB3836.16-2006 "Electrical apparatus for explosive gas atmospheres – Part 16: Inspection and maintenance of electrical installation (other than mines)"
 - GB3836.18-2010 "Explosive atmospheres-Part 18: Intrinsically safe system
- Do not operate the device outside the specified electrical, thermal and mechanical parameters.
- Only use the device in media to which the wetted materials have sufficient durability.
- Refer to the temperature tables for the relationship between the permitted ambient temperature for the sensor and/or transmitter, depending on the range of application, and the temperature classes.
- Modifications to the device can affect the explosion protection and must be carried out by staff authorized to perform such work by Endress+Hauser.
- Observe all the technical data of the device (see nameplate).
- When using in hybrid mixtures (gas and dust occurring simultaneously), additional measures should be taken. Please see approval body.
- The suffix "X" placed after the certificate number indicates that this product is subject to a special condition for safe use, that is: For information on the dimensions of the flameproof joints contact the manufacturer.

Safety instructions:
Installation

In the event of potentially explosive vapor/air mixtures, only operate the device under atmospheric conditions.

- Temperature: -20 to +60 °C
- Pressure: 80 to 110 kPa (0.8 to 1.1 bar)
- Air with normal oxygen content, usually 21 % (V/V)

If no potentially explosive mixtures are present, or if additional protective measures have been taken, the device may also be operated


under non-atmospheric conditions in accordance with the manufacturer's specifications.

- Continuous service temperature of the connecting cable:
–40 to +80 °C; in accordance with the range of service temperature taking into account additional influences of the process conditions ($T_{a,min}$ and $T_{a,max} + 20$ K).
- Only use certified cable entries suitable for the application. Observe selection criteria as per GB3836.15-2000.
Accordingly, the connection terminal does not include any ignition sources.
- When the measuring device is connected, attention must be paid to explosion protection at the transmitter.
- Suitable certified cable entry and blanking plug for unused holes approved by ExTL according to GB3836.1-2010 and GB3836.2-2010 with Ex marking "Ex d IIC" shall be used and correctly installed (for terminal compartment).
- The external earth connection facility of the enclosure shall be connected reliably.
- In potentially explosive atmospheres:
 - Do not disconnect the electrical connection of the power supply circuit when energized.
 - Do not open the connection compartment cover when energized.
- When connecting through a conduit entry approved for this purpose, mount the associated sealing unit directly at the housing.
- Seal unused entry glands with approved sealing plugs that correspond to the type of protection. The plastic transport sealing plug supplied does not meet this requirement and must therefore be replaced during installation.
- Only use certified sealing plugs. The metal sealing plugs supplied meet this requirement.

Intrinsic safety

- The device can be connected to the Endress+Hauser FXA291 service tool: refer to the Operating Instructions.
- The device can be connected to the remote display FHX50 with Ex ia explosion protection; refer to the Special Documentation and Ex documentation.

Potential equalization

- Integrate the device into the local potential equalization →  10.
- If the ground connection has been established via the pipe as specified, it is also possible to integrate the sensor into the potential equalization system via the pipe.

Temperature tables

Ambient temperature

Minimum ambient temperature

Basic specification, position 3 (Output; input) = A, B, C, D:

$$T_a = -40\text{ °C}$$

Maximum ambient temperature:

$T_a = +60\text{ °C}$ depending on the medium temperature and temperature class

Medium temperature

Minimum medium temperature

$$T_m = 0\text{ °C}$$

Maximum medium temperature

T_m for T1 ~ T6 depending on the maximum ambient temperature T_a

Compact version

Basic specification, position 3 (Output; Input) = A

T_a [°C]	T6 [85 °C]	T5 [100 °C]	T4 [135 °C]	T3 [200 °C]	T2 [300 °C]	T1 [450 °C]
40	60	80	80	80	80	80
50	-	80	80	80	80	80
60	-	80	80	80	80	80

Basic specification, position 3 (Output; Input) = B

T_a [°C]	T6 [85 °C]	T5 [100 °C]	T4 [135 °C]	T3 [200 °C]	T2 [300 °C]	T1 [450 °C]
40	- ¹⁾	80	80	80	80	80
50	-	60 ²⁾	80	80	80	80
60	-	-	80	80	80	80

1) $T_m = 60\text{ °C}$ for pulse/frequency/switch output $P_i \leq 0.85\text{ W}$

2) $T_m = 80\text{ °C}$ for pulse/frequency/switch output $P_i \leq 0.85\text{ W}$

Basic specification, position 3 (Output; Input) = C

T _a [°C]	T6 [85 °C]	T5 [100 °C]	T4 [135 °C]	T3 [200 °C]	T2 [300 °C]	T1 [450 °C]
40	60	80	80	80	80	80
50	-	80	80	80	80	80
60	-	55	80	80	80	80


Basic specification, position 3 (Output; Input) = D

T _a [°C]	T6 [85 °C]	T5 [100 °C]	T4 [135 °C]	T3 [200 °C]	T2 [300 °C]	T1 [450 °C]
35	60	80	80	80	80	80
50	-	80	80	80	80	80
60	-	-	80	80	80	80

**Connection data:
Signal circuits**

The following tables contain specifications which are dependent on the transmitter type and its input and output assignment. Compare the following specifications with those on the nameplate of the transmitter.

Connecting the transmitter

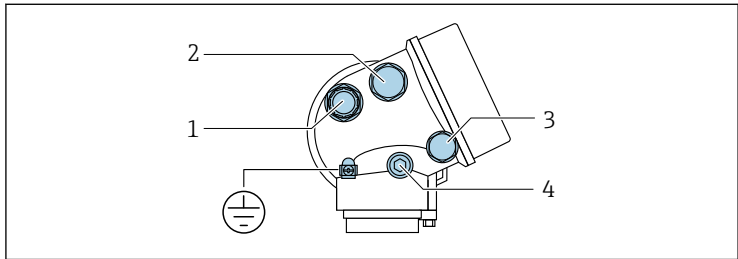

A0023831

Position		Basic specification, position 1, 2: Approval	Type of protection used for cable entry	Description
1	Cable entry for output 1	NJ	Ex d	<p>Plastic sealing plugs act as safeguards during transportation and must be replaced by individually approved installation material.</p> <p>The metal extensions and dummy plugs supplied are tested and certified as part of the housing for explosion protection Ex d IIC. The various threaded versions are labeled as follows for identification purposes:</p> <ul style="list-style-type: none"> ▪ Md: M20 x 1.5 ▪ NPTd: NPT ½" ▪ Gd: G ½"
2	Cable entry for output 2	NJ	Ex d	<p>Plastic sealing plugs act as safeguards during transportation and must be replaced by suitable, individually approved installation material.</p> <p>The metal extensions and dummy plugs supplied are tested and certified as part of the housing for explosion protection Ex d IIC. The various threaded versions are labeled as follows for identification purposes:</p> <ul style="list-style-type: none"> ▪ Md: M20 x 1.5 ▪ NPTd: NPT ½" ▪ Gd: G ½"
3	Cable entry of the remote display and operating module FHX50	NJ	Ex ia	–
Position		Description		
4	Pressure compensation plug	<p>NOTICE</p> <p>Housing degree of protection voided due to insufficient sealing of the housing.</p> <p>▶ Do not open - not a cable entry.</p>		
⊖	Potential equalization	<p>NOTICE</p> <p>Terminal for connection to potential equalization.</p> <p>▶ Pay attention to the grounding concept of the facility.</p>		

Terminal assignment

Transmitter



The order code is part of the extended order code. Detailed information on the features of the device and on the structure of the extended order code → 5.

Connection versions

Order code for "Output"	Terminal numbers					
	Output 1		Output 2		Input	
	1 (+)	2 (-)	3 (+)	4 (-)	5 (+)	6 (-)
Option A	4-20mA HART (passive)		-		-	
Option B ¹⁾	4-20mA HART (passive)		Pulse/frequency/switch output (passive)		-	
Option C	4-20mA HART (passive)		4-20mA analog (passive)		-	
Option D ²⁾	4-20mA HART (passive)		Pulse/frequency/switch output (passive)		4-20mA current input (passive)	

- 1) Output 1 must always be used; output 2 is optional.
- 2) The integrated overvoltage protection is not used with option D: Terminals 5 and 6 (current input) are not protected against overvoltage.

Intrinsically safe values



The order code is part of the extended order code. Detailed information on the features of the device and on the structure of the extended order code → 5.

Safety-related values



The order code is part of the extended order code. Detailed information on the features of the device and on the structure of the extended order code → 5.

Type of protection Ex d

Order code for "Output"	Output type	Safety-related values
Option A	4-20mA HART	$U_{nom} = DC\ 35\ V$ $U_{max} = 250\ V$
Option B	4-20mA HART	$U_{nom} = DC\ 35\ V$ $U_{max} = 250\ V$

Order code for "Output"	Output type	Safety-related values
	Pulse/frequency/switch output	$U_{nom} = DC\ 35\ V$ $U_{max} = 250\ V$ $P_{max} = 1\ W^{1)}$
Option C	4-20mA HART	$U_{nom} = DC\ 30\ V$
	4-20mA analog	$U_{max} = 250\ V$
Option D	4-20mA HART	$U_{nom} = DC\ 35\ V$ $U_{max} = 250\ V$
	Pulse/frequency/switch output	$U_{nom} = DC\ 35\ V$ $U_{max} = 250\ V$ $P_{max} = 1\ W^{1)}$
	4 to 20 mA current input	$U_{nom} = DC\ 35\ V$ $U_{max} = 250\ V$

1) Internal circuit limited by $R_i = 760.5\ \Omega$

Remote display FHX50

Basic specification, position 1, 2 Approval	Cable specification	Basic specification, position 4 Display; operation Option L, M
Option NJ	Max. cable length: 60 m (196.85 ft)	$U_o = 7.3\ V$
		$I_o = 327\ mA$
		$P_o = 362\ mW$
		$L_o = 149\ \mu H$
		$C_o = 388\ nF$
		$C_c \leq 125\ nF$
		$L_c \leq 149\ \mu H$

www.addresses.endress.com
