

# Safety Instructions

## Prosonic S

### FDU90, FDU91, FDU91F, FDU92

II 2 G Ex ma IIC T5 Gb

II 2 G Ex ma IIC T6 Gb





# Prosonic S FDU90, FDU91, FDU91F, FDU92

## Table of contents

Associated documentation .....	4
Supplementary documentation .....	4
Manufacturer's certificates .....	4
Manufacturer address .....	4
Other standards .....	4
Extended order code .....	5
Safety instructions: General .....	6
Safety instructions: Special conditions .....	6
Safety instructions: Installation .....	7
Temperature tables .....	9
Connection data .....	10

<b>Associated documentation</b>	<p>This document is an integral part of the following Operating Instructions: TI00396F/00</p>
<b>Supplementary documentation</b>	<p>Explosion-protection brochure: CP00021Z/11 The Explosion-protection brochure is available:</p> <ul style="list-style-type: none"><li>■ In the download area of the Endress+Hauser website: <a href="http://www.endress.com">www.endress.com</a> -&gt; Downloads -&gt; Brochures and Catalogs -&gt; Text Search: CP00021Z</li><li>■ On the CD for devices with CD-based documentation</li></ul>
<b>Manufacturer's certificates</b>	<p><b>UK Declaration of Conformity</b></p> <p>Declaration Number: UK_00233</p> <p>The UK Declaration of Conformity is available: In the download area of the Endress+Hauser website: <a href="http://www.endress.com">www.endress.com</a> -&gt; Downloads -&gt; Declaration -&gt; Type: UKCA Declaration -&gt; Product Code: ...</p> <p><b>UKCA type-examination certificate</b></p> <p>Certificate number: CML 21UKEX5460</p> <p>List of applied standards: See UK Declaration of Conformity.</p>
<b>Manufacturer address</b>	<p>Endress+Hauser SE+Co. KG Hauptstraße 1 79689 Maulburg, Germany Address of the manufacturing plant: See nameplate.</p>
<b>Other standards</b>	<p>Among other things, the following standards shall be observed in their current version for proper installation:</p> <ul style="list-style-type: none"><li>■ IEC/EN 60079-14: "Explosive atmospheres - Part 14: Electrical installations design, selection and erection"</li><li>■ EN 1127-1: "Explosive atmospheres - Explosion prevention and protection - Part 1: Basic concepts and methodology"</li></ul>

## Extended order code

The extended order code is indicated on the nameplate, which is affixed to the device in such a way that it is clearly visible. Additional information about the nameplate is provided in the associated Operating Instructions.

### Structure of the extended order code

FDU9x	–	*****	+	A*B*C*D*E*F*G*..
<i>(Device type)</i>		<i>(Basic specifications)</i>		<i>(Optional specifications)</i>

\* = Placeholder

At this position, an option (number or letter) selected from the specification is displayed instead of the placeholders.

#### *Basic specifications*

The features that are absolutely essential for the device (mandatory features) are specified in the basic specifications. The number of positions depends on the number of features available. The selected option of a feature can consist of several positions.

#### *Optional specifications*

The optional specifications describe additional features for the device (optional features). The number of positions depends on the number of features available. The features have a 2-digit structure to aid identification (e.g. JA). The first digit (ID) stands for the feature group and consists of a number or a letter (e.g. J = Test, Certificate). The second digit constitutes the value that stands for the feature within the group (e.g. A = 3.1 material (wetted parts), inspection certificate).

More detailed information about the device is provided in the following tables. These tables describe the individual positions and IDs in the extended order code which are relevant to hazardous locations.

### Extended order code: Prosonic S



The following specifications reproduce an extract from the product structure and are used to assign:

- This documentation to the device (using the extended order code on the nameplate).
- The device options cited in the document.

#### *Device type*

FDU90, FDU91, FDU91F, FDU92

*Basic specifications*

Position 1 (Approval)		
Selected option		Description
FDU90	6	UK Ex II 2 G Ex ma IIC T5 Gb
FDU91 FDU91F FDU92	6	UK Ex II 2 G Ex ma IIC T6 Gb

Position 4 (Heater)		
Selected option		Description
FDU90	A	W/o
FDU91	B	Connection to 24VDC Note Technical Information FMU90! (Temperature compensation)

*Optional specifications*

No options specific to hazardous locations are available.

**Safety instructions:**  
**General**

- Comply with the installation and safety instructions in the Operating Instructions.
- Staff must meet the following conditions for mounting, electrical installation, commissioning and maintenance of the device:
  - Be suitably qualified for their role and the tasks they perform
  - Be trained in explosion protection
  - Be familiar with national regulations
- Install the device according to the manufacturer's instructions and national regulations.
- Do not operate the device outside the specified electrical, thermal and mechanical parameters.
- Only use the device in media to which the wetted materials have sufficient durability.
- Avoid electrostatic charging:
  - Of plastic surfaces (e.g. enclosure, sensor element, special varnishing, attached additional plates, ..)
  - Of isolated capacities (e.g. isolated metallic plates)


**Safety instructions:**  
**Special conditions**

In the event of additional or alternative special varnishing on the enclosure or other metal parts:

- Observe the danger of electrostatic charging and discharge.
- Do not rub surfaces with a dry cloth.

## Safety instructions: Installation

Electric connection of the sensor Prosonic FDU9x to the analysing unit Prosonic S

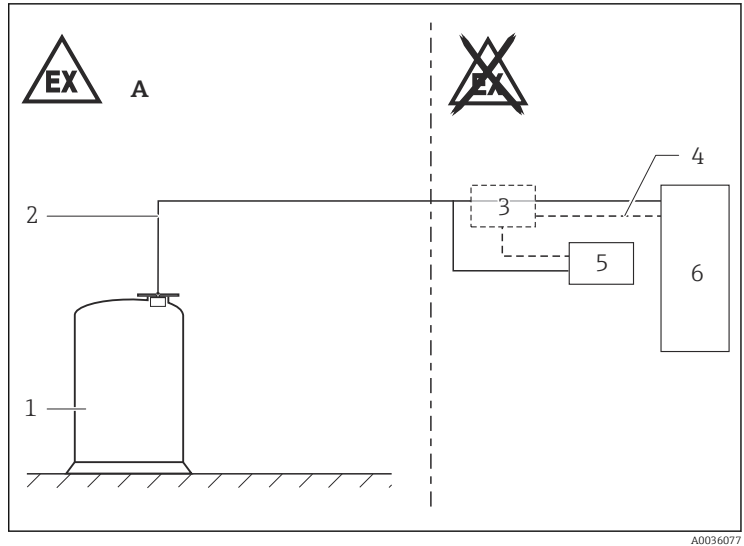


A0036077

1

- A Zone 1
- 1 Tank, hazardous area Zone 1
- 2 Electric connection
- 3 Optional: Terminal box (applied by user)
- 4 connected directly or via terminal box
- 5 External power supply  
(only Device type FDU90, FDU91 with Basic specification, Position 4 = B)
- 6 Analysing and controlling unit

## Electric connection of two sensors Prosonic FDU9x to the analysing unit Prosonic S

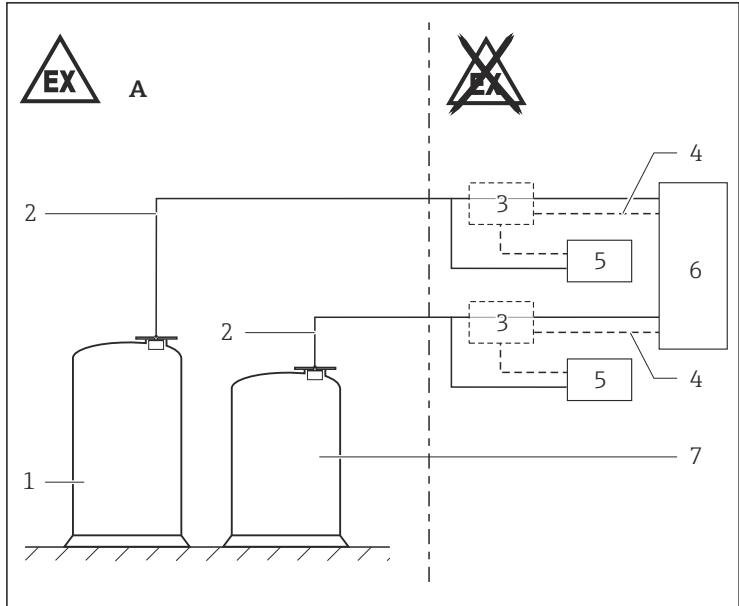

A0036078



- A Zone 1
- 1 Tank, hazardous area Zone 1
- 2 Electric connection
- 3 Optional: Terminal box (applied by user)
- 4 connected directly or via terminal box
- 5 External power supply  
(only Device type FDU90, FDU91 with Basic specification, Position 4 = B)
- 6 Analysing and controlling unit
- 7 Tank, hazardous area Zone 1

- The sensor can be mounted using the alignment device FAU40.
- When using plastic accessories check the suitability for explosion hazardous areas. Observe the instructions concerning electrostatic charging.
- Versions with NPT adapter are intended for connection to a conduit which is suited for the type of protection. The adapter has to be connected to the local grounding system either directly via the metallic conduit or by other measures.



## Device Type FDU90

### *Device group IIC/IIB*

For usage of the sensor in explosion hazardous areas due to combustible gases, mists or vapours: Avoid electrostatic charging of the sensor.

## Device Type FDU91

The sensor must be mounted in a protected position, if mechanical stress is to be expected.

## Device Type FDU91F

Sensor enclosure consists of conductive material and is connected as well as the membrane and the mounting connection to the earth lead of the sensor cable, which must be connected to the local grounding system of the plant.

## Device Type FDU92

The sensor must be mounted in a protected position, if mechanical stress is to be expected.

### *Device group IIC*

For usage of the sensor in explosion hazardous areas due to combustible gases, mists or vapours: Avoid electrostatic charging of the sensor.

## Temperature tables

	Device type			
	FDU90	FDU91	FDU91F	FDU92
Process temperature $T_p$ (process)	max. +60 °C	max. +80 °C	max. +80 °C	max. +80 °C

Temperature class	Permitted ambient temperature range			
	Device type			
	FDU90	FDU91 with Basic specification, Position 4 =	FDU91F FDU92	
		A	B	
T6	–	–40 to +60 °C	–40 to +40 °C	–40 to +60 °C
T5	–40 to +60 °C	–40 to +80 °C	–40 to +60 °C	–40 to +80 °C
T4	–40 to +80 °C	–40 to +80 °C	–40 to +80 °C	–40 to +80 °C
T3	–40 to +80 °C	–40 to +80 °C	–40 to +80 °C	–40 to +80 °C

## Connection data      Performance limits

	Device type			
	FDU90	FDU91	FDU91F	FDU92
Max. working pressure <sup>1)</sup>	0.4 MPa	0.4 MPa	0.4 MPa	0.4 MPa

1) outside explosion hazard atmospheres at 20 °C

### Emmission/signal circuit (FMU90, FMU95 to FDU9x)

	Device type			
	FDU90	FDU91	FDU91F	FDU92
Transmission voltage	$\leq 55 V_{\text{eff}}$	$\leq 55 V_{\text{eff}}$	$\leq 55 V_{\text{eff}}$	$\leq 55 V_{\text{eff}}$
Sending frequency (20 °C)	90.0 kHz	43.0 kHz	42.0 kHz	30.5 kHz
Max. power consumption (eff. long-term power)	0.9 W	0.4 W	0.9 W	0.9 W

### NTC power supply (FMU90, FMU95 to FDU9x)

	Device type			
	FDU90	FDU91	FDU91F	FDU92
Power supply	$\leq 12 V$	$\leq 12 V$	$\leq 12 V$	$\leq 12 V$
Max. power consumption (eff. long-term power)	$\leq 0.4 \text{ mW}$	$\leq 0.4 \text{ mW}$	$\leq 0.4 \text{ mW}$	$\leq 0.4 \text{ mW}$
External power supply for heating circuit	$\leq 26.4 V_{\text{AC}}$ or $V_{\text{DC}}$	$\leq 26.4 V_{\text{AC}}$ or $V_{\text{DC}}$	–	–





71541476

[www.addresses.endress.com](http://www.addresses.endress.com)

---