

Safety Instructions

Cerabar M PMP51, PMP55

4-20 mA HART, PROFIBUS PA,
FOUNDATION Fieldbus

II 1/2 G Ex ia IIC Ga/Gb
II 2 G Ex db IIC Gb



Cerabar M PMP51, PMP55

4-20 mA HART, PROFIBUS PA, FOUNDATION Fieldbus

Table of contents

About this document	4
Associated documentation	4
Supplementary documentation	4
General notes: Combined approval	4
Manufacturer's certificates	5
Manufacturer address	5
Other standards	6
Extended order code	6
Safety instructions: General	8
Safety instructions: Special conditions	8
Intrinsic safety	9
Safety instructions: Installation	9
Temperature tables	10
Connection data	10
Flameproof enclosure	11
Safety instructions: Installation	11
Safety instructions: Ex d joints	12
Temperature tables	12
Connection data	12

About this document



This document has been translated into several languages. Legally determined is solely the English source text.

The document translated into EU languages is available:

- In the download area of the Endress+Hauser website:
www.endress.com -> Downloads -> Manuals and Datasheets -> Type: Ex Safety Instruction (XA) -> Text Search: ...
- In the Device Viewer: www.endress.com -> Product tools -> Access device specific information -> Check device features



If not yet available, the document can be ordered.

Associated documentation

This document is an integral part of the following Operating Instructions:

HART
BA00382P/00

PROFIBUS PA
BA00383P/00

FOUNDATION Fieldbus
BA00384P/00

Supplementary documentation

Explosion-protection brochure: CP00021Z/11

The Explosion-protection brochure is available:

- In the download area of the Endress+Hauser website:
www.endress.com -> Downloads -> Brochures and Catalogs -> Text Search: CP00021Z
- On the CD for devices with CD-based documentation

General notes: Combined approval

The device is suitable for installation with explosion protection "Intrinsic safety Ex ia" or "Flameproof enclosure Ex db".


- Before initial commissioning, specify the type of protection.
- It is not permitted to change the type of protection after initial commissioning as this can jeopardize the explosion protection.

For aluminum enclosures:

Void out the explosion protection that is not used on the nameplate.

For stainless steel enclosures:


Using a striking tool, mark the explosion protection used, or void out the explosion protection that is not used.

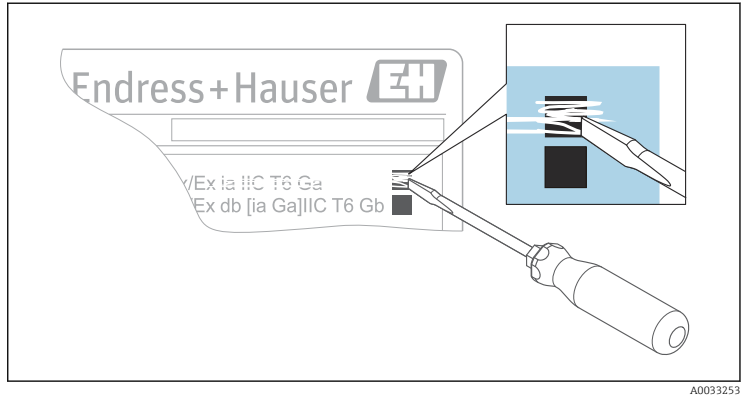

A0033253



1

 Depending on the type of protection used: Observe the safety instructions for installation with explosion protection "Intrinsic safety Ex ia" or "Flameproof enclosure Ex db".

Manufacturer's certificates

EU Declaration of Conformity

Declaration Number:
EG10006

The EU Declaration of Conformity is available:
In the download area of the Endress+Hauser website:
www.endress.com -> Downloads -> Declaration ->
Type: EU Declaration -> Product Code: ...

EU type-examination certificate

Certificate number:
KEMA 10 ATEX 0042 X

List of applied standards: See EU Declaration of Conformity.

Manufacturer address

Endress+Hauser SE+Co. KG
Hauptstraße 1
79689 Maulburg, Germany

Address of the manufacturing plant: See nameplate.

- Other standards** Among other things, the following standards shall be observed in their current version for proper installation:
- IEC/EN 60079-14: "Explosive atmospheres - Part 14: Electrical installations design, selection and erection"
 - EN 1127-1: "Explosive atmospheres - Explosion prevention and protection - Part 1: Basic concepts and methodology"

Extended order code The extended order code is indicated on the nameplate, which is affixed to the device in such a way that it is clearly visible. Additional information about the nameplate is provided in the associated Operating Instructions.

Structure of the extended order code

PMP5x	–	*****	+	A*B*C*D*E*F*G*..
<i>(Device type)</i>		<i>(Basic specifications)</i>		<i>(Optional specifications)</i>

* = Placeholder

At this position, an option (number or letter) selected from the specification is displayed instead of the placeholders.

Basic specifications

The features that are absolutely essential for the device (mandatory features) are specified in the basic specifications. The number of positions depends on the number of features available.

The selected option of a feature can consist of several positions.

Optional specifications

The optional specifications describe additional features for the device (optional features). The number of positions depends on the number of features available. The features have a 2-digit structure to aid identification (e.g. JA). The first digit (ID) stands for the feature group and consists of a number or a letter (e.g. J = Test, Certificate). The second digit constitutes the value that stands for the feature within the group (e.g. A = 3.1 material (wetted parts), inspection certificate).

More detailed information about the device is provided in the following tables. These tables describe the individual positions and IDs in the extended order code which are relevant to hazardous locations.

Extended order code: Cerabar M



The following specifications reproduce an extract from the product structure and are used to assign:

- This documentation to the device (using the extended order code on the nameplate).
- The device options cited in the document.

Device type

PMP51, PMP55

Basic specifications

Position 1, 2 (Approval)		
Selected option		Description
PMP5x	B2	ATEX II 1/2 G Ex ia IIC T6 Ga/Gb ATEX II 2 G Ex db IIC T6 Gb
	8A	ATEX Ex ia / Ex db + FM/CSA IS + XP ATEX II 1/2 G Ex ia IIC T6 + ATEX II 2 G Ex db IIC T6 + FM/CSA IS + XP Cl. I, II, Div. 1, Gr. A-G/B-G FM/CSA: Zone 1, 2

Position 3 (Output)		
Selected option		Description
PMP5x	2	4-20 mA HART
	3	PROFIBUS PA
	4	FOUNDATION Fieldbus

Optional specifications


No options specific to hazardous locations are available.

**Safety instructions:
General**

- The device is intended to be used in explosive atmospheres as defined in the scope of EN IEC 60079-0 or equivalent national standards. If no potentially explosive atmospheres are present or if additional protective measures have been taken: The device may be operated according to the manufacturer's specifications.
- Staff must meet the following conditions for mounting, electrical installation, commissioning and maintenance of the device:
 - Be suitably qualified for their role and the tasks they perform
 - Be trained in explosion protection
 - Be familiar with national regulations
- Comply with the installation and safety instructions in the Operating Instructions.
- Install the device according to the manufacturer's instructions and national regulations.
- Only use the device in media to which the wetted materials have sufficient durability.
- Avoid electrostatic charging:
 - Of plastic surfaces (e.g. enclosure, sensor element, special varnishing, attached additional plates, ..)
 - Of isolated capacities (e.g. isolated metallic plates)
- Modifications to the device can affect the explosion protection and must be carried out by staff authorized to perform such work by Endress+Hauser.

**Safety instructions:
Special conditions**

- In the case of process connections made of polymeric material or with polymeric coatings, avoid electrostatic charging of the plastic surfaces.
- For light metal flanges or flange faces (e.g. titanium, zirconium), avoid sparks caused by impact and friction.
- To avoid electrostatic charging: Do not rub surfaces with a dry cloth.
- In the event of additional or alternative special varnishing on the enclosure or other metal parts or for adhesive plates:
 - Observe the danger of electrostatic charging and discharge.
 - Do not install in the vicinity of processes (≤ 0.5 m) generating strong electrostatic charges.

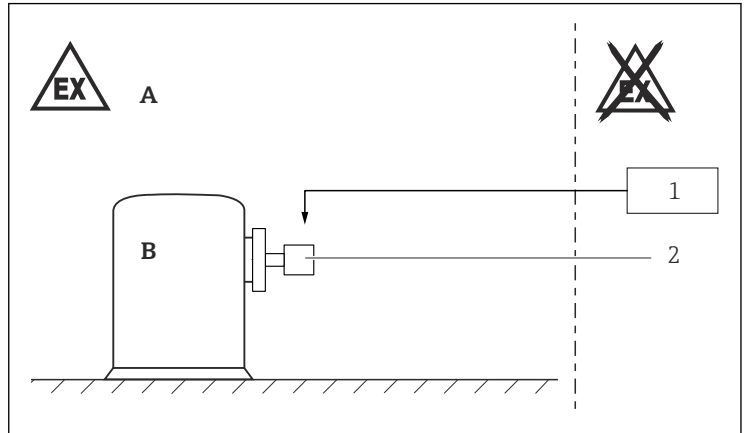Intrinsic safety**Explosion protection "Intrinsic safety Ex ia"****Safety instructions:
Installation**

A0041997

- A Zone 1, Electronic
 B Zone 0, Process
 1 Certified associated apparatus
 2 PMP51, PMP55

After aligning (rotating) the enclosure, retighten the fixing screw.

Intrinsic safety

- When the device is connected to an intrinsically safe circuit Ex ib, the type of protection changes to Ex ib. Do not operate intrinsically safe circuits Ex ib in Zone 0.
- When the device is connected to an intrinsically safe circuit Ex ic, the type of protection changes to Ex ic. Do not operate intrinsically safe circuits Ex ic in Zone 0 or Zone 1.
- The intrinsically safe input power circuit of the device is isolated from ground. The dielectric strength is at least 500 V_{rms}.

Service connection

Basic specification, Position 3 = 2

- For service operations: connect the Commubox FXA195 (from Endress+Hauser) to the display socket.
- Observe the safety instructions of the Commubox.

Temperature tables

Temperature class	Process temperature T_p (process)	Ambient temperature range
T6	$\leq 80\text{ }^\circ\text{C}$	$-40\text{ }^\circ\text{C} \leq T_a \leq +40\text{ }^\circ\text{C}$
T4	$\leq 125\text{ }^\circ\text{C}$	$-40\text{ }^\circ\text{C} \leq T_a \leq +70\text{ }^\circ\text{C}$



- The specified ambient and process temperature ranges exclusively refer to the explosion protection and must not be exceeded. Operationally permitted ambient temperature ranges can be restricted depending on the version: See Operating Instructions.
- Do not exceed the max. ambient temperature at the enclosure.

Device type PMP51

The process temperatures refer to the temperature at the separation membrane.

Device type PMP55

Higher temperatures are permitted depending on the type of diaphragm seal.

Connection data

Basic specification, Position 3 = 2

Power supply
$U_i \leq 30\text{ V}_{\text{DC}}$ $I_i \leq 300\text{ mA}$ $P_i \leq 1\text{ W}$ $C_i \leq 10\text{ nF}$ $L_i = 0$


Basic specification, Position 3 = 3, 4

Power supply	
FISCO	Entity
$U_i \leq 17.5\text{ V}_{\text{DC}}$ $I_i \leq 500\text{ mA}$ $P_i \leq 5.5\text{ W}$ $C_i \leq 5\text{ nF}$ $L_i \leq 10\text{ }\mu\text{H}$	$U_i \leq 24\text{ V}_{\text{DC}}$ $I_i \leq 250\text{ mA}$ $P_i \leq 1.2\text{ W}$ $C_i \leq 5\text{ nF}$ $L_i \leq 10\text{ }\mu\text{H}$

Flameproof enclosure

Explosion protection "Flameproof enclosure Ex db"

Safety instructions: Installation

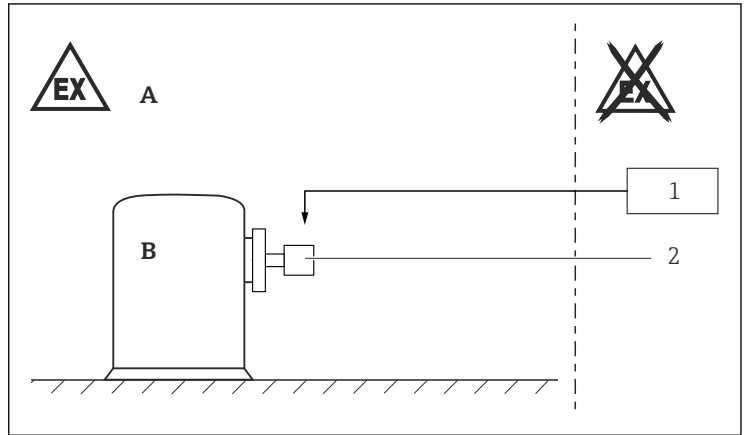

A0041997

- A Zone 1, Electronic
 B Zone 1, Process
 1 Power supply
 2 PMP51, PMP55

- After aligning (rotating) the enclosure, retighten the fixing screw.
- In potentially explosive atmospheres: Do not open the connection compartment cover and the electronics compartment cover when energized.
- Before operation:
 - Screw in the cover all the way.
 - Tighten the securing clamp on the cover.
- Connect the device:
 - Using suitable cable and wire entries of protection type "Flameproof Enclosure (Ex db)".
 - Using piping systems of protection type "Flameproof Enclosure (Ex db)".
- When connecting through a conduit entry approved for this purpose, mount the associated sealing unit directly at the enclosure.
- For ambient temperatures higher than +70 °C, use suitable heat resisting cables or wires.
- Seal unused entry glands with supplied metal blind plug. Alternative use only suitable, separate approved Ex db blanking elements.
- The plastic sealing plug is used only as transport protection.

Safety instructions: Ex d joints

- If required or if in doubt: ask manufacturer for specifications.
- Flameproof joints are not intended to be repaired.

Temperature tables

Temperature class	Process temperature T_p (process)	Ambient temperature T_a (ambient): enclosure
T6	$\leq 80\text{ °C}$	$-40\text{ °C} \leq T_a \leq +75\text{ °C}$
T4	$\leq 120\text{ °C}$	$-40\text{ °C} \leq T_a \leq +75\text{ °C}$



Do not exceed the max. ambient temperature at the enclosure.

Device type PMP51

The process temperatures refer to the temperature at the separation membrane.

Device type PMP55

Higher temperatures are permitted depending on the type of diaphragm seal.

Connection data

Basic specification, Position 3 = 2

Power supply
$U \leq 45\text{ V}_{DC}$ $P \leq 1.1\text{ W}$

Basic specification, Position 3 = 3, 4

Power supply
$U \leq 32\text{ V}_{DC}$ $P \leq 1.25\text{ W}$



71553629

www.addresses.endress.com
