



Füllstand



Druck



Durchfluss



Temperatur



Flüssigkeits-
analyse



Registrierung



Systeme
Komponenten



Services




Solutions

Austausch der Deckel-Dichtung am Edelstahlgehäuse F15



Das Gerät darf nur von Fachpersonal repariert und gewartet werden. Dabei sind die Gerätedokumentation, die einschlägigen Normen, die gesetzlichen Vorschriften und die Zertifikate zu beachten!
Es dürfen nur modulare Baugruppen gegen identische original Endress+Hauser Ersatzteile ausgetauscht werden !

Profil-Dichtung 67,5 x 2,9/1,5, aus Silikon mit aufvulkanisierter PTFE-Folie
Teile-Nummer: 5202 8179 (5 Stück)

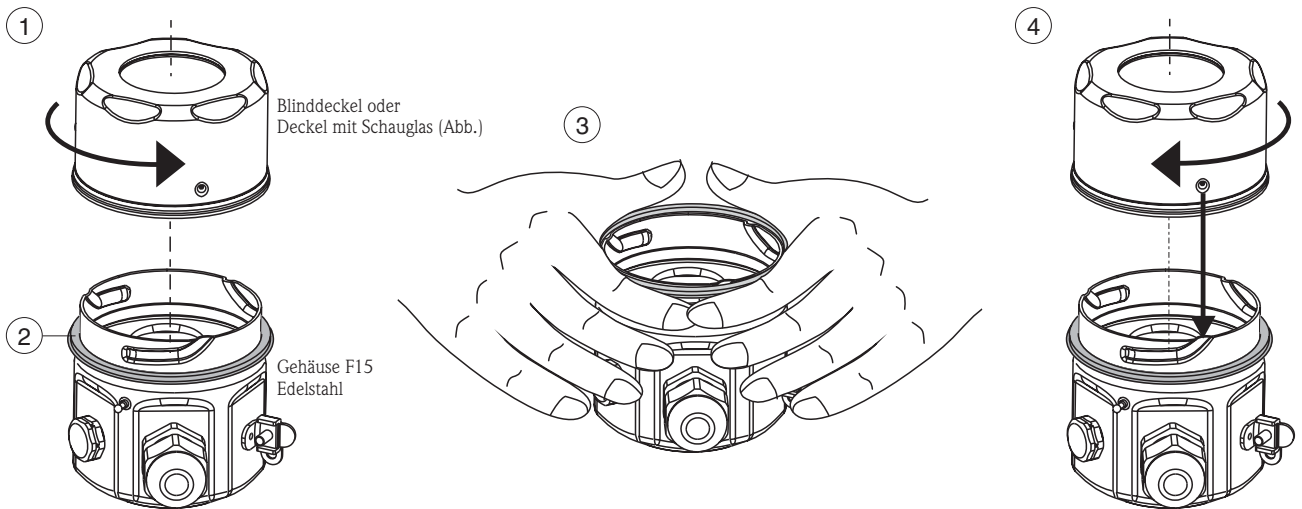

① Deckel etwas nach links drehen und nach oben abheben.

② Alte Dichtung entfernen.

③ Neue Dichtung ungeweitet über den Gehäuserand drücken und vorsichtig nach unten in die Mulde schieben.

Achtung:

- Die Dichtung darf bei der Montage nicht gedehnt werden!
Bei gedehnter Dichtung bitte einige Minuten warten bis sich diese selbstständig zurückgebildet hat.
- Fett am Gehäuse und Deckel entfernen.
Dichtung nicht einfetten

④ Deckel auf das Gehäuse aufsetzen, die Körnung im Deckel muss in eine Nut am Gehäuse passen, Deckel nach rechts zudrehen.



Level



Pressure



Flow



Temperature



Liquid Analysis



Registration



Systems Components



Services



Solutions


Exchange of gasket for cover of stainless steel housing F15



The instrument may only be maintained and repaired by qualified personnel. The device documentation, applicable standards and legal requirements as well as any certificates have to be observed!

Only modular assemblies may be exchanged against identical, original Endress+Hauser spare parts !

Profil gasket 67.5 x 2.9/1.5, silicone with PTFE film
Part number: 5202 8179 (5 pieces)

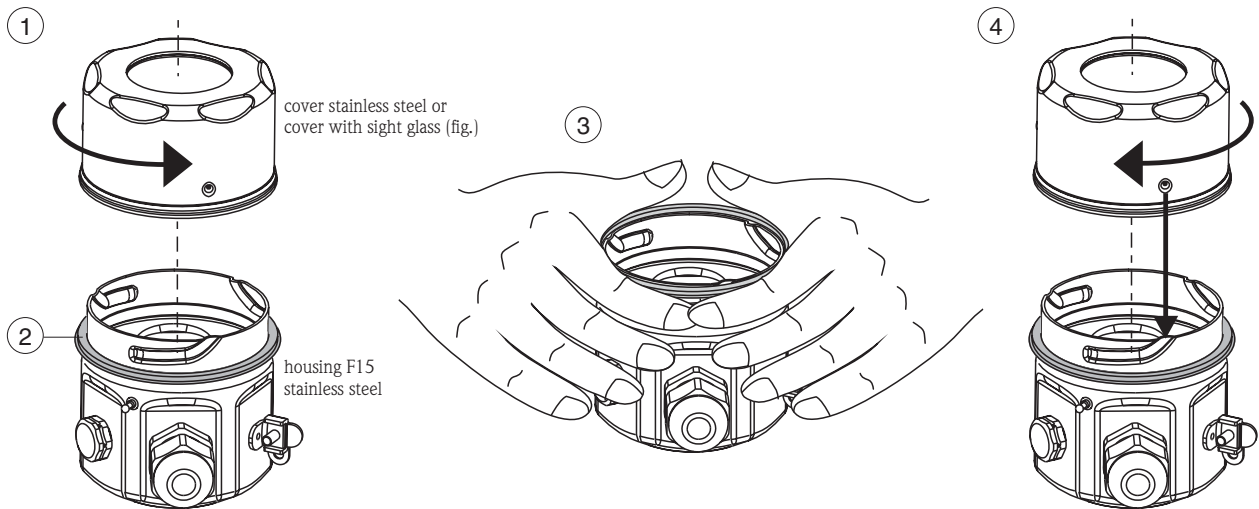

① Turn cover counter clockwise and lift it up.

② Remove old gasket from housing.

③ Attach the new gasket carefully to the seam of housing and slide it down into the groove.

Attention:

- Take care not to expand the gasket! However, if the gasket is expanded, please wait some minutes till it contracts itself (memory effect).
- Clean the housing and cover from grease. Do not grease the gasket!

④ Position cover on the housing, the punch has to fit into the groove of the housing. Press down the cover and turn it clockwise