

Safety Instructions

Deltabar PMD75B, PMD78B

ATEX: II 1/2 G Ex ia IIC T6...T1 Ga/Gb
II 2 G Ex db IIC T6...T1 Gb
II 1/2 D Ex ta/tb IIIC Da/Db
IECEX: Ex ia IIC T6...T1 Ga/Gb
Ex db IIC T6...T1 Gb
Ex ta/tb IIIC Da/Db



Document: XA01879P-A
Safety instructions for electrical apparatus for explosion-
hazardous areas →  3

Deltabar PMD75B, PMD78B

Table of contents

About this document	4
Associated documentation	4
Supplementary documentation	4
General notes: Combined approval	4
Manufacturer's certificates	5
Manufacturer address	6
Other standards	6
Extended order code	7
Safety instructions: General	9
Safety instructions: Special conditions	9
Ex ia IIC T6...T1 Ga/Gb, Ex ia IIC T6...T1 Gb	11
Safety instructions: Installation	11
Safety instructions: Zone 0	12
Temperature tables	12
Connection data	13
Ex db IIC T6...T1 Gb	14
Safety instructions: Installation	14
Safety instructions: Ex d joints	15
Temperature tables	15
Connection data	16
Ex ta/tb IIIC Txxx°C Da/Db, Ex tb IIIC Txxx°C Db	17
Safety instructions: Installation	17
Temperature tables	18
Connection data	20

About this document



This document has been translated into several languages. Legally determined is solely the English source text.

The document translated into EU languages is available:

- In the download area of the Endress+Hauser website:
www.endress.com -> Downloads -> Manuals and Datasheets -> Type: Ex Safety Instruction (XA) -> Text Search: ...
- In the Device Viewer: www.endress.com -> Product tools -> Access device specific information -> Check device features

Associated documentation

This document is an integral part of the following Operating Instructions:

PMD75B
BA02014P/00, TI01511P/00
PMD78B
BA02015P/00, TI01512P/00

Supplementary documentation

Explosion-protection brochure: CP00021Z/11

The Explosion-protection brochure is available:

- In the download area of the Endress+Hauser website:
www.endress.com -> Downloads -> Brochures and Catalogs -> Text Search: CP00021Z
- On the CD for devices with CD-based documentation

General notes: Combined approval

The device is suitable for installation with explosion protection "Intrinsic safety Ex ia" or "Flameproof enclosure Ex db" or "Equipment dust ignition protection by enclosure Ex t".

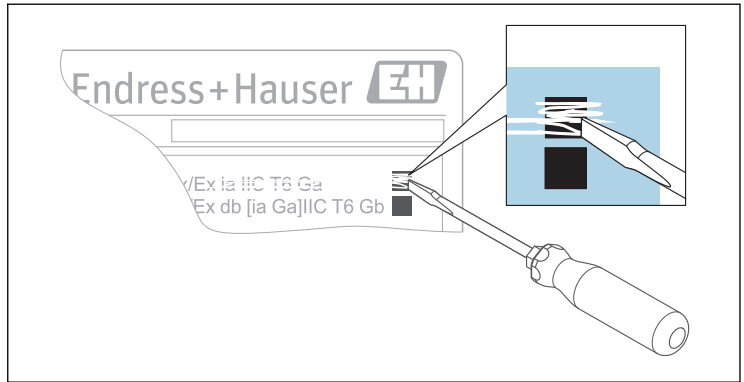
- Before initial commissioning, specify the type of protection.
- It is not permitted to change the type of protection after initial commissioning as this can jeopardize the explosion protection.

For aluminum housings:

Void out the explosion protection that is not used on the nameplate.

For stainless steel housings:

Using a striking tool, mark the explosion protection used, or void out the explosion protection that is not used.



A003253



1

i Depending on the type of protection used: Observe the safety instructions for installation with explosion protection "Intrinsic safety Ex ia", "Flameproof enclosure Ex db" or "Equipment dust ignition protection by enclosure Ex t".

Ex ia IIC		Ex db IIC		Ex ta/tb IIIC	
Zone 0	Zone 1	Zone 1	Zone 1	Zone 20	Zone 21
or				or	
Zone 1				Zone 21	

The device is designed for operation in explosive gas or explosive dust atmosphere as shown in the sketch above. In the event of potentially explosive gas-air and dust-air mixtures occurring simultaneously: Suitability requires further assessment.

Manufacturer's certificates

EU Declaration of Conformity

Declaration Number: EC_00843 and EC_00845

The EU Declaration of Conformity is available:

In the download area of the Endress+Hauser website:

www.endress.com -> Downloads -> Declaration ->

Type: EU Declaration -> Product Code: ...

EU type-examination certificate

Certificate number:

SEV20ATEX0387 X (Ex ia)

KIWA20ATEX0031 X (Ex db, Ex ta/tb, Ex tb)

List of applied standards: See EU Declaration of Conformity.

IEC Declaration of Conformity

Certificate number:

IECEx SEV20.0009 X (Ex ia)

IECEx KIWA 20.0011 X (Ex db, Ex ta/tb, Ex tb)

Affixing the certificate number certifies conformity with the following standards (depending on the device version):

- IEC 60079-0 : 2017
- IEC 60079-1 : 2014
- IEC 60079-11 : 2011
- IEC 60079-26 : 2014
- IEC 60079-31 : 2013

Manufacturer address

Endress+Hauser SE+Co. KG
Hauptstraße 1
79689 Maulburg, Germany

Address of the manufacturing plant: See nameplate.

Other standards

Among other things, the following standards shall be observed in their current version for proper installation:

- IEC/EN 60079-14: "Explosive atmospheres - Part 14: Electrical installations design, selection and erection"
- EN 1127-1: "Explosive atmospheres - Explosion prevention and protection - Part 1: Basic concepts and methodology"

Extended order code

The extended order code is indicated on the nameplate, which is affixed to the device in such a way that it is clearly visible. Additional information about the nameplate is provided in the associated Operating Instructions.

Structure of the extended order code

PMD7xB	–	*****	+	A*B*C*D*E*F*G*..
<i>(Device type)</i>		<i>(Basic specifications)</i>		<i>(Optional specifications)</i>

* = Placeholder

At this position, an option (number or letter) selected from the specification is displayed instead of the placeholders.

Basic specifications

The features that are absolutely essential for the device (mandatory features) are specified in the basic specifications. The number of positions depends on the number of features available.

The selected option of a feature can consist of several positions.

Optional specifications

The optional specifications describe additional features for the device (optional features). The number of positions depends on the number of features available. The features have a 2-digit structure to aid identification (e.g. JA). The first digit (ID) stands for the feature group and consists of a number or a letter (e.g. J = Test, Certificate). The second digit constitutes the value that stands for the feature within the group (e.g. A = 3.1 material (wetted parts), inspection certificate).

More detailed information about the device is provided in the following tables. These tables describe the individual positions and IDs in the extended order code which are relevant to hazardous locations.

Extended order code: Deltabar*Device type*

PMD75B, PMD78B

Basic specifications

Position 1, 2 (Approval)		
Selected option		Description
PMD75B	BN	ATEX II 1/2 G Ex ia IIC T6...T1 Ga/Gb
PMD78B		ATEX II 2 G Ex ia IIC T6...T1 Gb
		ATEX II 2 G Ex db IIC T6...T1 Gb
		ATEX II 1/2 D Ex ta/tb IIIC Txxx°C Da/Db
		ATEX II 2 D Ex tb IIIC Txxx°C Db
		IECEX Ex ia IIC T6...T1 Ga/Gb
		IECEX Ex ia IIC T6...T1 Gb
		IECEX Ex db IIC T6...T1 Gb
		IECEX Ex ta/tb IIIC Txxx°C Da/Db
		IECEX Ex tb IIIC Txxx°C Db

Position 6 (Housing, Material)			
Selected option		Description	
PMD75B	B	Single compartment; Alu, coated	
PMD75B		J	Dual compartment; Alu, coated
PMD78B		K	Dual compartment; 316L
		M	Dual compartment L-shape; Alu, coated

Position 7 (Electrical Connection)			
Selected option		Description	
PMD75B	F	Thread M20, IP66/68 NEMA Type 4X/6P	
PMD78B		G	Thread G1/2, IP66/68 NEMA Type 4X/6P
		H	Thread NPT1/2, IP66/68 NEMA Type 4X/6P

Optional specifications

ID Nx, Ox (Accessory Mounted)		
Selected option		Description
PMD75B	NA	Overvoltage protection ¹⁾
PMD78B		

- 1) Only in connection with Position 6 (Housing; Material) = J, K, M

ID Px, Rx (Accessory Enclosed)	
Selected option	Description
PMD75B PA PMD78B	Weather protection cover, 316L ¹⁾

1) Only in connection with Position 6 (Housing; Material) = J, K

Safety instructions: General

- Devices suitable for zone separation (marked Ga/Gb or Da/Db) are always suitable for installation in the less critical zone (Gb or Db). Due to space limitations the corresponding marking maybe not indicated on the nameplate.
- Comply with the installation and safety instructions in the Operating Instructions.
- Staff must meet the following conditions for mounting, electrical installation, commissioning and maintenance of the device:
 - Be suitably qualified for their role and the tasks they perform
 - Be trained in explosion protection
 - Be familiar with national regulations
- Install the device according to the manufacturer's instructions and national regulations.
- Do not operate the device outside the specified electrical, thermal and mechanical parameters.
- Only use the device in media to which the wetted materials have sufficient durability.
- Avoid electrostatic charging:
 - Of plastic surfaces (e.g. housing, sensor element, special varnishing, attached additional plates, ..)
 - Of isolated capacities (e.g. isolated metallic plates)
- Modifications to the device can affect the explosion protection and must be carried out by staff authorized to perform such work by Endress+Hauser.

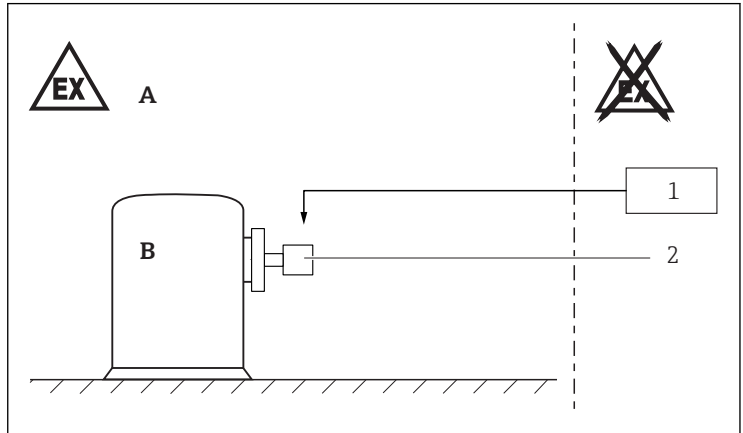
Safety instructions: Special conditions

- In the case of process connections made of polymeric material or with polymeric coatings, avoid electrostatic charging of the plastic surfaces.
- For light metal flanges or flange faces (e.g. titanium, zirconium), avoid sparks caused by impact and friction.
- To avoid electrostatic charging: Do not rub surfaces with a dry cloth.
- In the event of additional or alternative special varnishing on the housing or other metal parts or for adhesive plates:
 - Observe the danger of electrostatic charging and discharge.
 - Do not install in the vicinity of processes (≤ 0.5 m) generating strong electrostatic charges.
- Avoid sparks caused by impact and friction.

Optional specification, ID Px, Rx (Accessory Enclosed) = PA
Connect the weather protection cover to the local potential equalization.

**Ex ia IIC T6...T1 Ga/Gb,
Ex ia IIC T6...T1 Gb**

**Safety
instructions:
Installation**



A0041997

- A Zone 1, Electronic
 B Zone 0 or Zone 1, Process
 1 Associated intrinsically safe power supply units
 2 PMD75B, PMD78B

- After aligning (rotating) the housing, retighten the fixing screw.
- When the device is connected to certified intrinsically safe circuits of Category Ex ib for Equipment Groups IIC and IIB, the type of protection changes to Ex ib IIC and Ex ib IIB. Do not operate the sensor in Zone 0 if connecting to an intrinsically safe circuit of Category Ex ib.
- Continuous service temperature of the connecting cable: $\geq T_a + 20 \text{ K}$.
- Observe the pertinent guidelines when interconnecting intrinsically safe circuits.
- Observe the maximum process conditions according to the manufacturer's Operating Instructions.
- Install the device to exclude any mechanical damage or friction during the application. Pay particular attention to flow conditions and tank fittings.

Intrinsic safety

- The device is only suitable for connection to certified, intrinsically safe equipment with explosion protection Ex ia / Ex ib.
- The intrinsically safe input power circuit of the device is isolated from ground. The dielectric strength is at least $500 V_{\text{rms}}$.

Optional specification, ID Nx, Ox (Accessory Mounted) = NA

The intrinsically safe input power circuit of the device is isolated from ground. The dielectric strength is at least $290 V_{\text{rms}}$.


Potential equalization

Integrate the device into the local potential equalization.

Safety instructions: Zone 0

- In the event of potentially explosive vapor/air mixtures, only operate the device under atmospheric conditions.
 - Temperature: -20 to $+60$ °C
 - Pressure: 80 to 110 kPa (0.8 to 1.1 bar)
 - Air with normal oxygen content, usually 21 % (V/V)
- If no potentially explosive mixtures are present, or if additional protective measures have been taken, the device may also be operated under non-atmospheric conditions in accordance with the manufacturer's specifications.
- Only use the device in media to which the wetted materials have sufficient durability (e.g. process connection seal).

Temperature tables

- 
 - The specified ambient and process temperature ranges exclusively refer to the explosion protection and must not be exceeded. Operationally permitted ambient temperature ranges can be restricted depending on the version: See Operating Instructions.
 - Do not exceed the max. ambient temperature at the housing.
 - The process temperatures refer to the temperature at the separation membrane.

Device Type PMD75B

Temperature class	Process temperature range	Ambient temperature range
T6	$-40\text{ °C} \leq T_p \leq +80\text{ °C}$	$-40\text{ °C} \leq T_a \leq +50\text{ °C}$
T4...T1	$-40\text{ °C} \leq T_p \leq +100\text{ °C}$	$-40\text{ °C} \leq T_a \leq +55\text{ °C}$
	$-40\text{ °C} \leq T_p \leq +85\text{ °C}$	$-40\text{ °C} \leq T_a \leq +60\text{ °C}$
	$-40\text{ °C} \leq T_p \leq +60\text{ °C}$	$-40\text{ °C} \leq T_a \leq +60\text{ °C}$

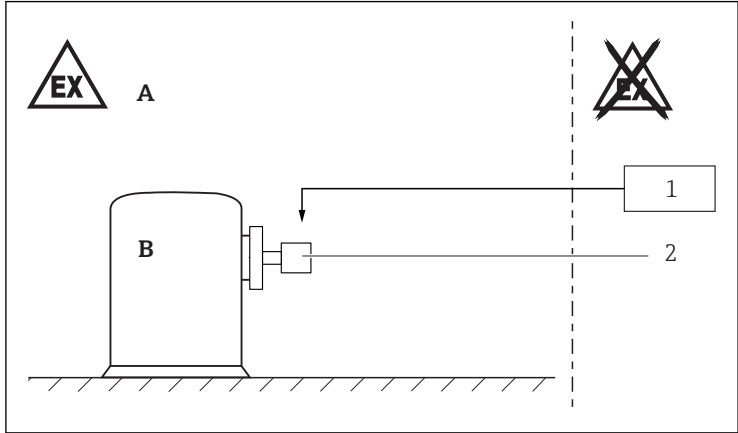
Device Type PMD78B

Temperature class	Process temperature range	Ambient temperature range
T6	$-40\text{ °C} \leq T_p \leq +80\text{ °C}$	$-40\text{ °C} \leq T_a \leq +50\text{ °C}$
T4	$-40\text{ °C} \leq T_p \leq +130\text{ °C}$	$-40\text{ °C} \leq T_a \leq +70\text{ °C}$
T3	$-40\text{ °C} \leq T_p \leq +190\text{ °C}$	
T2	$-40\text{ °C} \leq T_p \leq +285\text{ °C}$	
T1	$-40\text{ °C} \leq T_p \leq +400\text{ °C}$	

Connection data

Power supply
$U_i \leq 30\text{ V}_{DC}$ $I_i \leq 300\text{ mA}$ $P_i \leq 1\text{ W}$ $C_i \leq 10\text{ nF}$ $L_i = 0$

Ex db IIC T6...T1 Gb

Safety
instructions:
Installation

A0041997

- A Zone 1, Electronic
 B Zone 1, Process
 1 Power supply
 2 PMD75B, PMD78B

- After aligning (rotating) the housing, retighten the fixing screw.
- In potentially explosive atmospheres: Do not open the connection compartment cover and the electronics compartment cover when energized.
- Before operation:
 - Screw in the cover all the way.
 - Tighten the securing screw on the cover.
- Connect the device:
 - Using suitable cable and wire entries of protection type "Flameproof Enclosure (Ex db)".
 - Using piping systems of protection type "Flameproof Enclosure (Ex db)".
- When connecting through a conduit entry approved for this purpose, mount the associated sealing unit directly at the housing.
- Seal unused entry glands with approved sealing plugs that correspond to the type of protection. The plastic transport sealing plug does not meet this requirement and must therefore be replaced during installation.
- Only use certified cable entries or sealing plugs. The metal sealing plugs supplied meet this requirement.
- Only use genuine spare parts from Endress+Hauser which are specified for the device.

Basic specification, Position 7 (Electrical Connection) = G

Flameproof equipment with G threaded entry holes is not intended for new installations but only for replacement of equipment in existing installations. Application of this equipment shall comply with the local installation requirements.

Safety instructions:
Ex d joints

- Flameproof joints are not intended to be repaired.
- If required or if in doubt: ask manufacturer for specifications.

Temperature tables



- The specified ambient and process temperature ranges exclusively refer to the explosion protection and must not be exceeded. Operationally permitted ambient temperature ranges can be restricted depending on the version: See Operating Instructions.
- Do not exceed the max. ambient temperature at the housing.
- The process temperatures refer to the temperature at the separation membrane.

For detailed information see Technical Information.

Device Type PMD75B

Temperature class	Process temperature range	Ambient temperature range
T6	$-40\text{ °C} \leq T_p \leq +80\text{ °C}$	$-40\text{ °C} \leq T_a \leq +60\text{ °C}$
T4...T1	$-40\text{ °C} \leq T_p \leq +85\text{ °C}$	$-40\text{ °C} \leq T_a \leq +65\text{ °C}$
	$-40\text{ °C} \leq T_p \leq +100\text{ °C}$	$-40\text{ °C} \leq T_a \leq +60\text{ °C}$

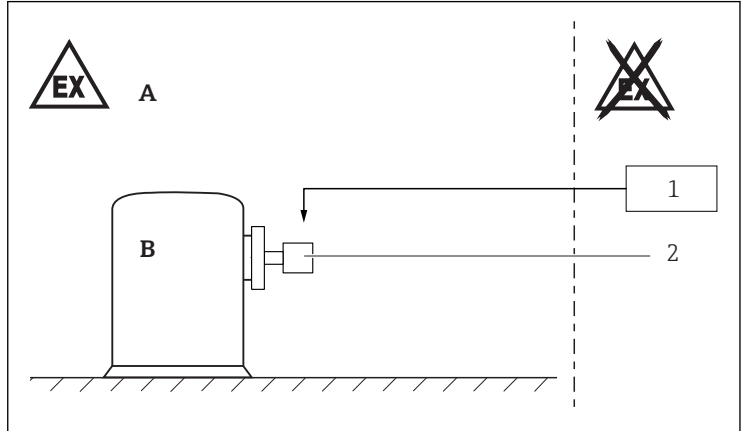
Device Type PMD78B

Temperature class	Process temperature range	Ambient temperature range
T6	$-40\text{ °C} \leq T_p \leq +80\text{ °C}$	$-40\text{ °C} \leq T_a \leq +60\text{ °C}$
T4	$-40\text{ °C} \leq T_p \leq +125\text{ °C}$	$-40\text{ °C} \leq T_a \leq +70\text{ °C}$
T3	$-40\text{ °C} \leq T_p \leq +190\text{ °C}$	
T2	$-40\text{ °C} \leq T_p \leq +290\text{ °C}$	
T1	$-40\text{ °C} \leq T_p \leq +400\text{ °C}$	

Connection data**Power supply** $U \leq 35 \text{ V}_{\text{DC}}$
 $P \leq 1 \text{ W}$

**Ex ta/tb IIIC T_{xxx}°C Da/Db,
Ex tb IIIC T_{xxx}°C Db**

**Safety
instructions:
Installation**

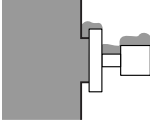
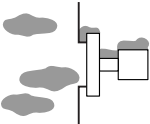


A0041997

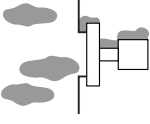
- A Zone 21, Electronic*
B Zone 20 or Zone 21, Process
1 Power supply
2 PMD75B, PMD78B

- After aligning (rotating) the housing, retighten the fixing screw.
- Do not open in a potentially explosive dust atmosphere.
- Seal unused entry glands with approved sealing plugs that correspond to the type of protection. The plastic transport sealing plug does not meet this requirement and must therefore be replaced during installation.
- Seal the cable entry or piping tight (see ingress protection of housing in the "Temperature tables" chapter).
- Before operation:
 - Screw in the cover all the way.
 - Tighten the securing screw on the cover.

*Permitted ambient conditions***Ex ta/tb IIIC Txxx°C Da/Db**

Process Zone 20		Housing Zone 21
Continuous dust submersion		Dust accumulation or temporary explosive dust atmosphere
Continuous explosive dust atmosphere and deposits		Dust accumulation or temporary explosive dust atmosphere

Ex tb IIIC Txxx°C Db

Process Zone 21		Housing Zone 21
Continuous dust deposits or temporary explosive dust atmosphere		Dust accumulation or temporary explosive dust atmosphere

Temperature tables

- The specified surface temperature takes into account all direct heat influences from process heat and self-heating at the housing.
- Surface temperatures at the process side maybe higher and must be considered by the user (e.g. at high temperature process connections).
- The T-marking is based on the process temperature of the compact designs.
- The specified ambient and process temperature ranges exclusively refer to the explosion protection and must not be exceeded. Operationally permitted ambient temperature ranges can be restricted depending on the version: See Operating Instructions.
- Do not exceed the max. ambient temperature at the housing.
- The process temperatures refer to the temperature at the separation membrane.

For detailed information see Technical Information.



Basic specification, Position 6 (Housing; Material) = K

When using the stainless steel housing: Reduce the admissible ambient temperature by 5 K.



Ingress protection of housing: IP66/67

Device Type PMD75B

Ex ta/tb IIIC T₂₀₀ 100°C Da/Db

Ex tb IIIC T_L 100°C Db

Maximum surface temperature	Process temperature range	Ambient temperature range
T100 °C	-40 °C ≤ T _p ≤ +85 °C	-40 °C ≤ T _a ≤ +65 °C
	-40 °C ≤ T _p ≤ +100 °C	-40 °C ≤ T _a ≤ +60 °C

Specific conditions of use:

- The surface temperature is
 - for equipment protection level (EPL) Da: T₂₀₀ 100 °C (with 200 mm dust deposit)
 - and equipment protection level (EPL) Db: T_L 100 °C (with dust accumulation T_L)
- The surface temperature is for equipment protection level (EPL) Db: T_L 100 °C (with dust accumulation T_L)



T_L marking:

The assigned surface temperature without dust layer is the same.

Device Type PMD78B

Ex ta/tb IIIC T₂₀₀ 100°C Da/Db

Ex tb IIIC T_L 100°C Db

Maximum surface temperature	Process temperature range	Ambient temperature range
T100 °C	-40 °C ≤ T _p ≤ +85 °C	-40 °C ≤ T _a ≤ +65 °C
	-40 °C ≤ T _p ≤ +100 °C	-40 °C ≤ T _a ≤ +60 °C
	-40 °C ≤ T _p ≤ +200 °C	-40 °C ≤ T _a ≤ +70 °C
	-40 °C ≤ T _p ≤ +300 °C	
	-40 °C ≤ T _p ≤ +400 °C	

Specific conditions of use:

- The surface temperature is
 - for equipment protection level (EPL) Da: T_{200} 100 °C (with 200 mm dust deposit)
 - and equipment protection level (EPL) Db: T_L 100 °C (with dust accumulation T_L)
- The surface temperature is for equipment protection level (EPL) Db: T_L 100 °C (with dust accumulation T_L)



T_L marking:

The assigned surface temperature without dust layer is the same.

Connection data

Power supply
$U \leq 35 V_{DC}$ $P \leq 1 W$



71492422

www.addresses.endress.com
