

Safety Instructions

Liquiphant FTL62

4-20 mA HART

ATEX, IECEx: Ex ia IIC/IIB T6 Ga/Gb
Ex ia IIC/IIB T6 Gb
Ex ia IIIC Txxx°C Da/Db
Ex ia IIIC Txxx°C Db




Liquiphant FTL62

4-20 mA HART

Table of contents


About this document	4
Associated documentation	4
Supplementary documentation	4
General notes: Combined approval	4
Manufacturer's certificates	5
Manufacturer address	5
Other standards	6
Extended order code	6
Safety instructions: General	9
Safety instructions: Special conditions	9
Safety instructions: Installation	11
Safety instructions: Zone 0	13
Safety instructions: Zone separation Zone 0, Zone 1	13
Temperature tables	13
Connection data	16

About this document

 This document has been translated into several languages. Legally determined is solely the English source text.

The document translated into EU languages is available:

- In the download area of the Endress+Hauser website:
www.endress.com -> Downloads -> Manuals and Datasheets -> Type: Ex Safety Instruction (XA) -> Text Search: ...
- In the Device Viewer: www.endress.com -> Product tools -> Access device specific information -> Check device features

 If not yet available, the document can be ordered.

Associated documentation

This document is an integral part of the following Operating Instructions:

BA02214F/00

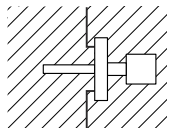
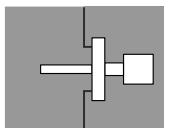
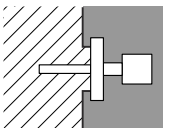
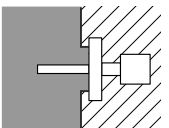
Supplementary documentation

Explosion-protection brochure: CP00021Z/11

The Explosion-protection brochure is available:

- In the download area of the Endress+Hauser website:
www.endress.com -> Downloads -> Brochures and Catalogs -> Text Search: CP00021Z
- On the CD for devices with CD-based documentation

**General notes:
Combined approval**

							
Ex ia IIC	Zone 1	Ex ia IIC	Zone 21	Ex ia IIC	Zone 21	Ex ia IIC	Zone 1
Zone 0 or Zone 1		Zone 20 or Zone 21		Zone 0 or Zone 1		Zone 20 or Zone 21	

The device is designed for operation in explosive gas or explosive dust atmosphere as shown in the sketch above. In the event of potentially

explosive gas-air and dust-air mixtures occurring simultaneously:
Suitability requires further assessment.



A sequential change between gas and dust explosion protection is only possible if:

- A period with non-explosive atmosphere is realized during the transition or
- Special examinations are done which are not covered by the certificate

Manufacturer's certificates

EU Declaration of Conformity

Declaration Number:
EU_00970

The EU Declaration of Conformity is available:
In the download area of the Endress+Hauser website:
www.endress.com -> Downloads -> Declaration ->
Type: EU Declaration -> Product Code: ...

EU type-examination certificate

Certificate number:
DEKRA 22ATEX0008 X

List of applied standards: See EU Declaration of Conformity.

IEC Declaration of Conformity

Certificate number:
IECEX DEK 22.0008X

Affixing the certificate number certifies conformity with the following standards (depending on the device version):

- IEC 60079-0 : 2017
- IEC 60079-11 : 2011
- IEC 60079-26 : 2021

Manufacturer address

Endress+Hauser SE+Co. KG
Hauptstraße 1
79689 Maulburg, Germany

Address of the manufacturing plant: See nameplate.

- Other standards** Among other things, the following standards shall be observed in their current version for proper installation:
- IEC/EN 60079-14: "Explosive atmospheres - Part 14: Electrical installations design, selection and erection"
 - EN 1127-1: "Explosive atmospheres - Explosion prevention and protection - Part 1: Basic concepts and methodology"

Extended order code The extended order code is indicated on the nameplate, which is affixed to the device in such a way that it is clearly visible. Additional information about the nameplate is provided in the associated Operating Instructions.

Structure of the extended order code

FTL62	-	*****	+	A*B*C*D*E*F*G*..
<i>(Device type)</i>		<i>(Basic specifications)</i>		<i>(Optional specifications)</i>

* = Placeholder

At this position, an option (number or letter) selected from the specification is displayed instead of the placeholders.

Basic specifications

The features that are absolutely essential for the device (mandatory features) are specified in the basic specifications. The number of positions depends on the number of features available.

The selected option of a feature can consist of several positions.

Optional specifications

The optional specifications describe additional features for the device (optional features). The number of positions depends on the number of features available. The features have a 2-digit structure to aid identification (e.g. JA). The first digit (ID) stands for the feature group and consists of a number or a letter (e.g. J = Test, Certificate). The second digit constitutes the value that stands for the feature within the group (e.g. A = 3.1 material (wetted parts), inspection certificate).

More detailed information about the device is provided in the following tables. These tables describe the individual positions and IDs in the extended order code which are relevant to hazardous locations.

Extended order code: Liquiphant



The following specifications reproduce an extract from the product structure and are used to assign:

- This documentation to the device (using the extended order code on the nameplate).
- The device options cited in the document.

Device type

FTL62

Basic specifications

Position 1, 2 (Approval)		
Selected option		Description
FTL62	BK	ATEX II 1/2 G Ex ia IIC/IIB T6...T1 Ga/Gb ATEX II 2 G Ex ia IIC/IIB T6...T1 Gb ATEX II 1/2 D Ex ia IIIC Txxx°C Da/Db ATEX II 2 D Ex ia IIIC Txxx°C Db IECEX Ex ia IIC/IIB T6...T1 Ga/Gb IECEX Ex ia IIC/IIB T6...T1 Gb IECEX Ex ia IIIC Txxx°C Da/Db IECEX Ex ia IIIC Txxx°C Db

Position 3, 4 (Output)		
Selected option		Description
FTL62	BA	FEL60H, 2-wire 4...20 mA HART+test button

Position 5 (Display, Operation)		
Selected option		Description
FTL62	A	W/o; switch
	E	Graphic display with touch control
	F	Graphic display with touch control+Bluetooth

Position 6 (Housing, Material)		
Selected option		Description
FTL62	B	Single compartment; Alu, coated
	M	Dual compartment L-shape; Alu, coated
	N	Dual compartment L-shape; 316L

Position 7 (Electrical Connection)		
Selected option		Description
FTL62	B	Gland M20, brass nickel plated, IP66/68 NEMA Type 4X/6P
	C	Gland M20, 316L, IP66/68 NEMA Type 4X/6P
	F	Thread M20, IP66/68 NEMA Type 4X/6P
	G	Thread G1/2, IP66/68 NEMA Type 4X/6P
	H	Thread NPT1/2, IP66/68 NEMA Type 4X/6P

Position 9 (Surface Refinement)		
Selected option		Description
FTL62	N	Coating ECTFE
	P	Coating PFA (Edlon)
	Q	Coating PFA (RubyRed)
	R	Coating PFA (conductive)
	T	Coating Enamel

Optional specifications

ID Jx, Kx (Test, Certificate, Declaration)		
Selected option		Description
FTL62	JL	Ambient temperature -50°C/-58°F
	JN	Ambient temperature -52°C/-62°F

ID Mx (Sensor Design)		
Selected option		Description
FTL62	MR	Temperature separator
	MS	Pressure tight feed through (Second line of defence)

ID Nx, Ox (Accessory Mounted)		
Selected option		Description
FTL62	NA ¹⁾	Overvoltage protection

- 1) Only in connection with Position 6 = M, N

ID Px, Rx (Accessory Enclosed)		
Selected option		Description
FTL62	PA ¹⁾	Weather protection cover, 316L
	PB ²⁾	Weather protection cover, plastic


- 1) Only in connection with Position 6 = M, N
 2) Only in connection with Position 6 = B

Safety instructions:
General

- The device is intended to be used in explosive atmospheres as defined in the scope of IEC 60079-0 or equivalent national standards. If no potentially explosive atmospheres are present or if additional protective measures have been taken: The device may be operated according to the manufacturer's specifications.
- Devices suitable for zone separation (marked Ga/Gb or Da/Db) are always suitable for installation in the less critical zone (Gb or Db). Due to space limitations the corresponding marking maybe not indicated on the nameplate.
- Staff must meet the following conditions for mounting, electrical installation, commissioning and maintenance of the device:
 - Be suitably qualified for their role and the tasks they perform
 - Be trained in explosion protection
 - Be familiar with national regulations
- Comply with the installation and safety instructions in the Operating Instructions.
- Install the device according to the manufacturer's instructions and national regulations.
- Do not operate the device outside the specified electrical, thermal and mechanical parameters.
- Only use the device in media to which the wetted materials have sufficient durability.
- Avoid electrostatic charging:
 - Of plastic surfaces (e.g. enclosure, sensor element, special varnishing, attached additional plates, ..)
 - Of isolated capacities (e.g. isolated metallic plates)
- Refer to the temperature tables for the relationship between the permitted ambient temperature for the sensor and/or transmitter, depending on the range of application and the temperature class.
- Modifications to the device can affect the explosion protection and must be carried out by staff authorized to perform such work by Endress+Hauser.

Safety instructions:
Special conditions

Permitted ambient temperature range at the electronics enclosure:
 $-40\text{ °C} \leq T_a \leq +70\text{ °C}$

- Limitations of the maximum ambient temperature at the electronics enclosure may be required dependent on device configuration, process temperatures and temperature classification.
- Details of limitations: →  13, "Temperature tables".
- To avoid electrostatic charging: Do not rub surfaces with a dry cloth.
- In the event of additional or alternative special varnishing on the enclosure or other metal parts or for adhesive plates:
 - Observe the danger of electrostatic charging and discharge.
 - Do not install in the vicinity of processes (≤ 0.5 m) generating strong electrostatic charges.
- Avoid sparks caused by impact and friction.

Optional specification, ID Px, Rx = PA

Connect the weather protection cover to the local potential equalization.

Optional specification, ID Px, Rx = PB

Avoid electrostatic charging of the weather protection cover (e.g. friction, cleaning, maintenance, strong medium flow).

Device group IIC/IIB and Device group III

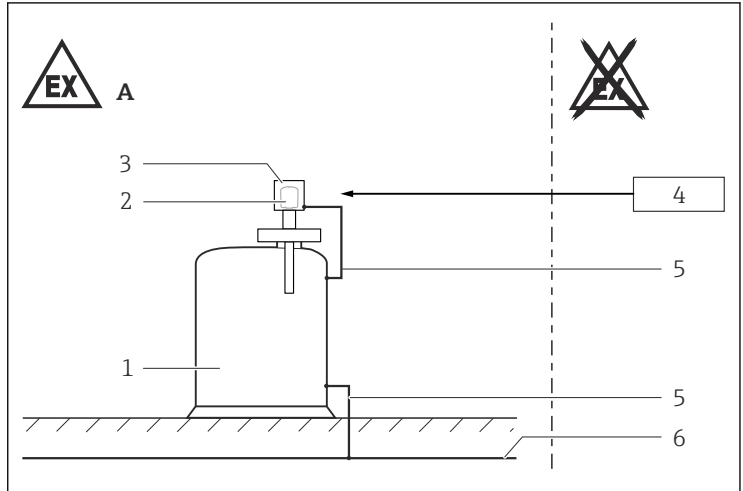
Basic specification, Position 9 = N, P, Q

- Probes can be used in gases of Group IIC or dust Group III if avoiding electrostatic charging (e.g. through friction, cleaning, maintenance, strong medium flow). These probes are marked by the warning sign "Avoid Electrostatic Charge".
- If electrostatic charging cannot be avoided:
 - Probe can be used in gases of Group IIB.
 - Probe must not be used in dust Group III.

Basic specification, Position 9 = R, T

- Due to the surface resistance $1 \text{ G}\Omega$ ([R] PFA-conductive) or the enamel (glass) surface [T], these coatings are suitable without restrictions.
- Prevent damage to the conductive surface layer (e.g. by abrasion).

Safety instructions: Installation



A0025536

1

- A Zone 1, Zone 21
- 1 Tank; Zone 0, Zone 1, Zone 20, Zone 21
- 2 Electronic insert
- 3 Enclosure
- 4 Associated intrinsically safe power supply units
- 5 Potential equalization line
- 6 Local potential equalization

- After aligning (rotating) the enclosure, retighten the fixing screw.
- Connect the device using suitable cable and wire entries of protection type "Intrinsic safety (Ex i)". An ingress protection of at least IP54 must be achieved.
- When the device is connected to certified intrinsically safe circuits of Category Ex ib for Equipment Groups IIC and IIB, the type of protection changes to Ex ib IIC and Ex ib IIB. Do not operate the sensor in Zone 0 if connecting to an intrinsically safe circuit of Category Ex ib.
- When the device is connected to certified intrinsically safe circuits of Category Ex ib for Equipment Groups IIIC and IIIB, the type of protection changes to Ex ib IIIC and Ex ib IIIB. Do not operate the sensor in Zone 20 if connecting to an intrinsically safe circuit of Category Ex ib.
- Continuous service temperature of the connecting cable: $\geq T_a + 20 \text{ K}$.
- Perform the following to achieve the degree of protection IP66/67:
 - Screw the cover tight.
 - Mount the cable entry correctly.

- Seal unused entry glands with approved sealing plugs that correspond to the type of protection.
- Observe the pertinent guidelines when interconnecting intrinsically safe circuits.
- Observe the maximum process conditions according to the manufacturer's Operating Instructions.
- At high medium temperatures, note flange pressure load capacity as a factor of temperature.
- Install the device to exclude any mechanical damage or friction during the application. Pay particular attention to flow conditions and tank fittings.
- Support extension tube of the device if a dynamic load is expected.
- Only use genuine spare parts from Endress+Hauser which are specified for the device.

Device group III, Application in dust

- To ensure the ingress protection IP66/67: Only use the unit-mounted cable entries, sealing plugs and O-rings.
- Supplied cable glands and metallic sealing plugs comply with the requirements of type of protection marked on the nameplate.

Permitted ambient conditions

Ex ia IIIC Txxx°C Da/Db

Process Zone 20	Enclosure Zone 21
Continuous dust submersion	Dust accumulation or temporary explosive dust atmosphere
Continuous explosive dust atmosphere and deposits	Dust accumulation or temporary explosive dust atmosphere

Ex ia IIIC Txxx°C Db

Process Zone 21	Enclosure Zone 21
Continuous dust deposits or temporary explosive dust atmosphere	Dust accumulation or temporary explosive dust atmosphere

Intrinsic safety

- The device is only suitable for connection to certified, intrinsically safe equipment with explosion protection Ex ia / Ex ib.
- The intrinsically safe input power circuit of the device is isolated from ground. The dielectric strength is at least $500 V_{\text{rms}}$.

Optional specification, ID Nx, Ox = NA

The intrinsically safe input power circuit of the device is isolated from ground. The dielectric strength is at least $290 V_{\text{rms}}$.

Potential equalization

Integrate the device into the local potential equalization.

Optional specification, ID Px, Rx = PA

Connect the weather protection cover to the local potential equalization.

Safety instructions: Zone 0

When using under non-atmospheric pressures and non-atmospheric temperatures: The sensor part of the device approved for Zone 0 does not cause any ignition hazards.

Safety instructions: Zone separation Zone 0, Zone 1

The zone separation wall of the device is made of stainless steel or high corrosion-resistant alloy of thickness ≥ 1 mm.

Temperature tables



Optional specification, ID Jx, Kx = JL

Lower limit of the ambient temperature for explosion protection changes to -50 °C.

Optional specification, ID Jx, Kx = JN

Lower limit of the ambient temperature for explosion protection changes to -52 °C.

Optional specification, ID Px, Rx = PB

When using the weather protection cover: Reduce the admissible ambient temperature by 10 K.

Ex ia IIC T6...T1 Ga/Gb



- The specified ambient and process temperature ranges exclusively refer to the explosion protection and must not be exceeded. Operationally permitted ambient temperature ranges can be restricted depending on the version: See Operating Instructions.
- Do not exceed the max. ambient temperature at the enclosure.

Basic specification, Position 5 = A

Temperature class	Process temperature range	Ambient temperature range
T6	$-40\text{ °C} \leq T_p \leq +75\text{ °C}$ $-40\text{ °C} \leq T_p \leq +60\text{ °C}$	$-40\text{ °C} \leq T_a \leq +50\text{ °C}$ $-40\text{ °C} \leq T_a \leq +55\text{ °C}$
T5	$-40\text{ °C} \leq T_p \leq +90\text{ °C}$	$-40\text{ °C} \leq T_a \leq +55\text{ °C}$
T4...T1	$-40\text{ °C} \leq T_p \leq +120\text{ °C}$	$-40\text{ °C} \leq T_a \leq +50\text{ °C}$

with Optional specification, ID Mx = MR, MS

Temperature class	Process temperature range	Ambient temperature range
T6	$-40\text{ °C} \leq T_p \leq +75\text{ °C}$	$-40\text{ °C} \leq T_a \leq +60\text{ °C}$
T5	$-40\text{ °C} \leq T_p \leq +90\text{ °C}$	$-40\text{ °C} \leq T_a \leq +65\text{ °C}$
T4	$-40\text{ °C} \leq T_p \leq +125\text{ °C}$ $-40\text{ °C} \leq T_p \leq +120\text{ °C}^{1)}$	$-40\text{ °C} \leq T_a \leq +65\text{ °C}$ $-40\text{ °C} \leq T_a \leq +65\text{ °C}$
T3...T1	$-40\text{ °C} \leq T_p \leq +150\text{ °C}$ $-40\text{ °C} \leq T_p \leq +120\text{ °C}^{1)}$	$-40\text{ °C} \leq T_a \leq +65\text{ °C}$ $-40\text{ °C} \leq T_a \leq +65\text{ °C}$

- 1) Only in connection with Position 9 = N

Basic specification, Position 5 = E, F

Temperature class	Process temperature range	Ambient temperature range
T6	$-40\text{ °C} \leq T_p \leq +75\text{ °C}$ $-40\text{ °C} \leq T_p \leq +60\text{ °C}$	$-40\text{ °C} \leq T_a \leq +45\text{ °C}$ $-40\text{ °C} \leq T_a \leq +50\text{ °C}$
T5	$-40\text{ °C} \leq T_p \leq +90\text{ °C}$	$-40\text{ °C} \leq T_a \leq +50\text{ °C}$
T4...T1	$-40\text{ °C} \leq T_p \leq +120\text{ °C}$	$-40\text{ °C} \leq T_a \leq +45\text{ °C}$

with Optional specification, ID Mx = MR, MS

Temperature class	Process temperature range	Ambient temperature range
T6	$-40\text{ °C} \leq T_p \leq +75\text{ °C}$	$-40\text{ °C} \leq T_a \leq +55\text{ °C}$
T5	$-40\text{ °C} \leq T_p \leq +90\text{ °C}$	$-40\text{ °C} \leq T_a \leq +60\text{ °C}$
T4	$-40\text{ °C} \leq T_p \leq +125\text{ °C}$ $-40\text{ °C} \leq T_p \leq +120\text{ °C}^{1)}$	$-40\text{ °C} \leq T_a \leq +55\text{ °C}$ $-40\text{ °C} \leq T_a \leq +55\text{ °C}$
T3...T1	$-40\text{ °C} \leq T_p \leq +150\text{ °C}$ $-40\text{ °C} \leq T_p \leq +120\text{ °C}^{1)}$	$-40\text{ °C} \leq T_a \leq +55\text{ °C}$ $-40\text{ °C} \leq T_a \leq +55\text{ °C}$

- 1) Only in connection with Position 9 = N

Ex ia IIIC T_{xxx}°C Da/Db

- The specified surface temperature takes into account all direct heat influences from process heat and self-heating at the enclosure.
- The T-marking is based on the process temperature of the compact designs.
- The specified ambient and process temperature ranges exclusively refer to the explosion protection and must not be exceeded. Operationally permitted ambient temperature ranges can be restricted depending on the version: See Operating Instructions.
- Do not exceed the max. ambient temperature at the enclosure.

For detailed information see Technical Information.

Ex ia IIIC T₂₀₀ 135 °C / 155 °C Da/Db

Ex ia IIIC T_L 135 °C / 155 °C Db

Basic specification, Position 5 = A

Maximum surface temperature	Process temperature range	Ambient temperature range
T135 °C	-40 °C ≤ T _p ≤ +80 °C	-40 °C ≤ T _a ≤ +60 °C
	-40 °C ≤ T _p ≤ +100 °C	-40 °C ≤ T _a ≤ +55 °C
	-40 °C ≤ T _p ≤ +120 °C	-40 °C ≤ T _a ≤ +50 °C

with Optional specification, ID Mx = MR, MS

Maximum surface temperature	Process temperature range	Ambient temperature range
T155 °C	-40 °C ≤ T _p ≤ +130 °C	-40 °C ≤ T _a ≤ +65 °C
	-40 °C ≤ T _p ≤ +120 °C ¹⁾	-40 °C ≤ T _a ≤ +65 °C
	-40 °C ≤ T _p ≤ +150 °C	-40 °C ≤ T _a ≤ +65 °C
	-40 °C ≤ T _p ≤ +120 °C ¹⁾	-40 °C ≤ T _a ≤ +65 °C

1) Only in connection with Position 9 = N

Basic specification, Position 5 = E, F

Maximum surface temperature	Process temperature range	Ambient temperature range
T135 °C	-40 °C ≤ T _p ≤ +80 °C	-40 °C ≤ T _a ≤ +50 °C
	-40 °C ≤ T _p ≤ +100 °C	-40 °C ≤ T _a ≤ +45 °C
	-40 °C ≤ T _p ≤ +120 °C	-40 °C ≤ T _a ≤ +45 °C

with Optional specification, ID Mx = MR, MS

Maximum surface temperature	Process temperature range	Ambient temperature range
T155 °C	-40 °C ≤ T _p ≤ +130 °C -40 °C ≤ T _p ≤ +120 °C ¹⁾	-40 °C ≤ T _a ≤ +55 °C -40 °C ≤ T _a ≤ +55 °C
	-40 °C ≤ T _p ≤ +150 °C -40 °C ≤ T _p ≤ +120 °C ¹⁾	-40 °C ≤ T _a ≤ +55 °C -40 °C ≤ T _a ≤ +55 °C

1) Only in connection with Position 9 = N

Specific conditions of use:

- The surface temperature is
 - for equipment protection level (EPL) Da: T₂₀₀ 135 °C / 155 °C (with 200 mm dust deposit)
 - and equipment protection level (EPL) Db: T_L 135 °C / 155 °C (with dust accumulation T_L)
- The surface temperature is
 - for equipment protection level (EPL) Db: T_L 135 °C / 155 °C (with dust accumulation T_L)



T_L marking:

The assigned surface temperature without dust layer is the same.

Connection data

Power supply
U _I ≤ 30 V _{DC} I _I ≤ 300 mA P _I ≤ 1 W C _I ≤ 10 nF L _I = 0

Cable entry parameters

Ex ia IIC

Not relevant.

Ex ia IIIC

Cable gland: *Basic specification, Position 7 = B*

mandatory for Position 6 = B, M

Thread	Clamping range	Material	Sealing insert	O-ring
M20x1,5	ø 8 to 10.5 mm ¹⁾ (ø 6.5 to 13 mm) ²⁾	Ms, nickel-plated	Silicone	EPDM (ø 17x2)

1) Standard

2) Separate clamping inserts available

Cable gland: *Basic specification, Position 7 = C*

preferably for Position 6 = N and possible for Position 6 = B, M

Thread	Clamping range	Material	Sealing insert	O-ring
M20x1,5	ø 7 to 12 mm	1.4404	NBR	EPDM (ø 17x2)



- The tightening torque refers to cable glands installed by the manufacturer:
 - Recommended torque to connect the cable gland into the enclosure: 3.75 Nm
 - Recommended torque to tighten the cable into the cable gland: 3.5 Nm
 - Maximum torque to tighten the cable into the cable gland: 10 Nm
 - This value may be different depending on the type of cable. However, the maximum value must not be exceeded.
- Only suitable for fixed installation. The operator must pay attention to a suitable strain relief of the cable.
- To maintain the ingress protection of the enclosure: Install the enclosure cover, cable glands and blind plugs correctly.
- The cable glands are suitable for a low risk of mechanical danger (4 Joule) and must be mounted in a protected position if larger impact energy levels are expected.



71565137

www.addresses.endress.com
