

Brief Operating Instructions

Liquiline Compact CM82

Compact multi-parameter transmitter for
Memosens sensors



These instructions are Brief Operating Instructions; they are not a substitute for the Operating Instructions pertaining to the device.

Detailed information on the device can be found in the Operating Instructions and in the other documentation available at:

- www.endress.com/device-viewer
- Smart phone/tablet: Endress+Hauser Operations App







A0023555

Table of contents








1	About this document	4
1.1	Warnings	4
1.2	Symbols	4
1.3	Symbols on the device	5
1.4	Documentation	5
2	Basic safety instructions	5
2.1	Requirements for personnel	5
2.2	Intended use	5
2.3	Workplace safety	6
2.4	Operational safety	6
2.5	Product safety	6
3	Product description	7
3.1	Product design	7
4	Incoming acceptance and product identification	7
4.1	Incoming acceptance	7
4.2	Product identification	8
5	Electrical connection	9
5.1	Environment	9
6	System integration	10
6.1	Integrating the measuring device into the system	10
7	Commissioning	12
7.1	Function check	12
7.2	Setting the operating language	13

1 About this document


1.1 Warnings

Structure of information	Meaning
 <p>Causes (/consequences) If necessary, Consequences of non-compliance (if applicable) ▶ Corrective action</p>	<p>This symbol alerts you to a dangerous situation. Failure to avoid the dangerous situation will result in a fatal or serious injury.</p>
 <p>Causes (/consequences) If necessary, Consequences of non-compliance (if applicable) ▶ Corrective action</p>	<p>This symbol alerts you to a dangerous situation. Failure to avoid the dangerous situation can result in a fatal or serious injury.</p>
 <p>Causes (/consequences) If necessary, Consequences of non-compliance (if applicable) ▶ Corrective action</p>	<p>This symbol alerts you to a dangerous situation. Failure to avoid this situation can result in minor or more serious injuries.</p>
 <p>Cause/situation If necessary, Consequences of non-compliance (if applicable) ▶ Action/note</p>	<p>This symbol alerts you to situations which may result in damage to property.</p>

1.2 Symbols

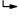Symbol	Meaning
	Additional information, tips
	Permitted or recommended
	Not permitted or not recommended
	Reference to device documentation
	Reference to page
	Reference to graphic
	Result of a step

1.3 Symbols on the device

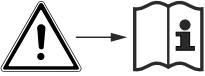Symbol	Meaning
	Reference to device documentation

1.4 Documentation

The following instructions complement these Brief Operating Instructions and are available on the product pages on the Internet:


Operating Instructions Memosens, BA01245C

- Software description for Memosens inputs
- Calibration of Memosens sensors
- Sensor-specific diagnostics and troubleshooting

2 Basic safety instructions

2.1 Requirements for personnel

- Installation, commissioning, operation and maintenance of the measuring system may be carried out only by specially trained technical personnel.
- The technical personnel must be authorized by the plant operator to carry out the specified activities.
- The electrical connection may be performed only by an electrical technician.
- The technical personnel must have read and understood these Operating Instructions and must follow the instructions contained therein.
- Faults at the measuring point may only be rectified by authorized and specially trained personnel.

 Repairs not described in the Operating Instructions provided must be carried out only directly at the manufacturer's site or by the service organization.

2.2 Intended use

The Liquiline CM72 Liquiline CM82 is a transmitter for connecting digital sensors with Memosens technology, configurable, with 4..20 mA/HART communication and optional operation via smartphone or other mobile devices via Bluetooth.

The device is designed for use in the following industries:

- Life science
- Chemical industry
- Water and wastewater
- Food and beverages
- Power stations
- Other industrial applications

2.3 Workplace safety

As the user, you are responsible for complying with the following safety conditions:

- Installation guidelines
- Local standards and regulations
- Regulations for explosion protection

Electromagnetic compatibility

- The product has been tested for electromagnetic compatibility in accordance with the applicable international standards for industrial applications.
- The electromagnetic compatibility indicated applies only to a product that has been connected in accordance with these Operating Instructions.

2.4 Operational safety

Before commissioning the entire measuring point:

1. Verify that all connections are correct.
2. Ensure that electrical cables and hose connections are undamaged.
3. Do not operate damaged products, and protect them against unintentional operation.
4. Label damaged products as defective.

During operation:

- ▶ If faults cannot be rectified:
products must be taken out of service and protected against unintentional operation.

CAUTION

Cleaning not switched off during calibration or maintenance activities

Risk of injury due to medium or cleaning agent!

- ▶ If a cleaning system is connected, switch it off before removing a sensor from the medium.
- ▶ If you wish to check the cleaning function and have therefore not switched off the cleaning system, wear protective clothing, goggles and gloves or take other appropriate measures.


2.5 Product safety

2.5.1 State-of-the-art technology

The product is designed to meet state-of-the-art safety requirements, has been tested, and left the factory in a condition in which it is safe to operate. The relevant regulations and international standards have been observed.

3 Product description

3.1 Product design

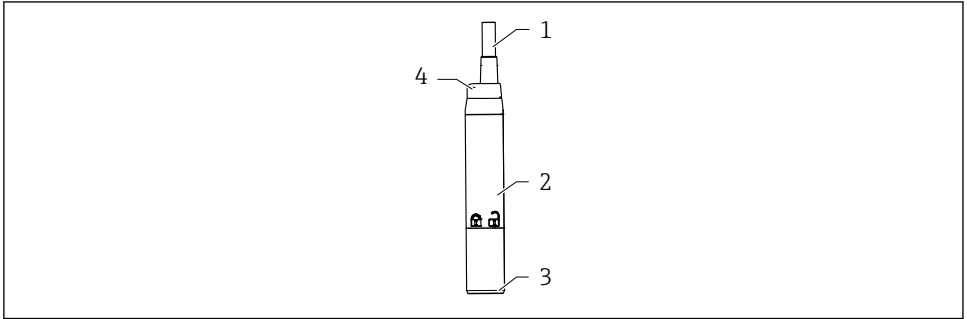

A0036216

1 Transmitter design

- 1 Cable
- 2 Housing
- 3 Memosens connection
- 4 LED, for optical signaling of operating statuses of measuring point

3.1.1 Measuring parameters

The transmitter is designed for digital Memosens sensors with inductive plug-in head:

- pH, ORP, pH/ORP combined sensors
- Conductive conductivity
- Dissolved oxygen

4 Incoming acceptance and product identification

4.1 Incoming acceptance

1. Verify that the packaging is undamaged.
 - ↳ Notify the supplier of any damage to the packaging.
Keep the damaged packaging until the issue has been resolved.
2. Verify that the contents are undamaged.
 - ↳ Notify the supplier of any damage to the delivery contents.
Keep the damaged goods until the issue has been resolved.
3. Check that the delivery is complete and nothing is missing.
 - ↳ Compare the shipping documents with your order.

4. Pack the product for storage and transportation in such a way that it is protected against impact and moisture.
 - ↳ The original packaging offers the best protection.
Make sure to comply with the permitted ambient conditions.

If you have any questions, please contact your supplier or your local Sales Center.

4.2 Product identification

4.2.1 Nameplate

The nameplate provides you with the following information on your device:

- Manufacturer identification
 - Order code
 - Extended order code
 - Serial number
 - Firmware version
 - Ambient and process conditions
 - Input and output values
 - Safety information and warnings
 - Approvals as per version ordered
- Compare the data on the nameplate with your order.

4.2.2 Product identification

Product page

www.endress.com/CM82

Manufacturer address

Endress+Hauser Conducta GmbH+Co. KG
Dieselstraße 24
D-70839 Gerlingen

Scope of delivery

The scope of delivery includes:

- CM82
 - Brief Operating Instructions
- If you have any queries:
Please contact your supplier or local sales center.

5 Electrical connection


⚠ WARNING

Device is live!

Incorrect connection may result in injury or death!

- ▶ The electrical connection may be performed only by an electrical technician.
- ▶ The electrical technician must have read and understood these Operating Instructions and must follow the instructions contained therein.
- ▶ **Prior** to commencing connection work, ensure that no voltage is present on any cable.

Supply voltage:	12.6 to 30 VDC (when error current > 20 mA) 14 to 30 VDC (if the error current is set to 3.6 mA.)
Cable length:	3 m (10 ft) 7 m (23 ft) 15 m (46 ft)
Signal output:	4 to 20 mA
Signal on alarm:	Configurable

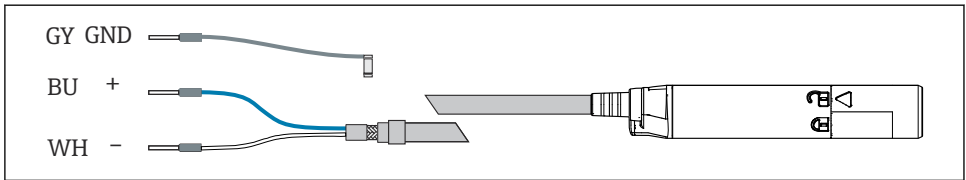

A003282

2 Electrical connection

- ▶ Connect ferrules as specified in the table:

Cable	Function
Gray (GY)	Grounding, GND
BU (blue)	4 to 20 mA +
White (WH)	4 to 20 mA -

The ground cable must be provided by the customer.

5.1 Environment

Degree of pollution of entire device:	Pollution level 4
Degree of internal pollution:	Pollution level 2
Installation category:	Installation category 1
Max. height:	2000 m (6561.68 ft)

Degree of protection:	NEMA Type 6 IP 67 IP 68
Ambient temperature range:	-20°C to 85°C (-4 to 185 °F)
Storage temperature:	-40 ... +85 °C (-40 ... 185 °F)
Relative humidity:	5 ... 95 %

6 System integration


6.1 Integrating the measuring device into the system

Interfaces for measured value transmission:

- 4 to 20 mA
- Bluetooth® LE wireless technology
- HART

6.1.1 Bluetooth® wireless technology

With the Bluetooth® LE wireless technology (energy-efficient wireless transmission) option that can be ordered, the device can be controlled via mobile terminals.

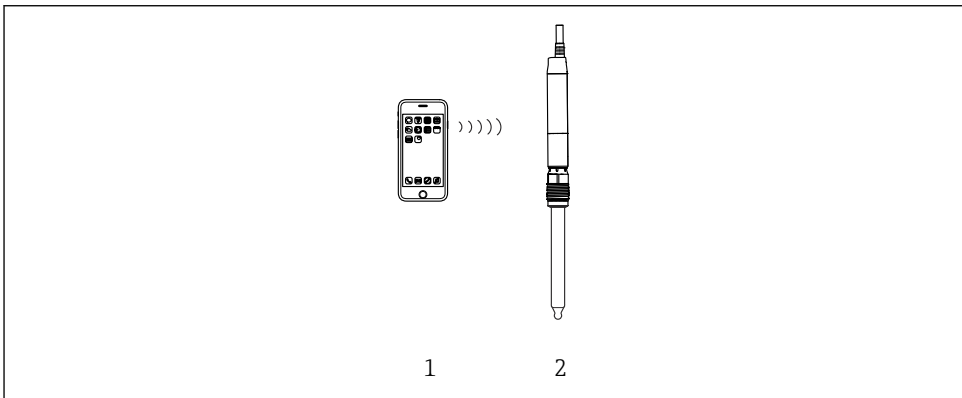

A0036075

3 Options for remote operation via Bluetooth® LE wireless technology

- 1 Smartphone / tablet with SmartBlue (app)
- 2 Transmitter with Bluetooth® LE wireless technology


6.1.2 HART

In addition to the analog 4 to 20 mA signal, other measured values as well as the device status can be transmitted digitally via the HART protocol.

Configuration is also possible using an additional operating device and an appropriate driver.

HART operation is possible via the following hosts (at least):

- Fieldcare and compatible DTM hosts
- Emerson TREX
- Emerson AMS
- Siemens PDM
- ABB FIM
- Honeywell FDM
- Yokogawa PRM

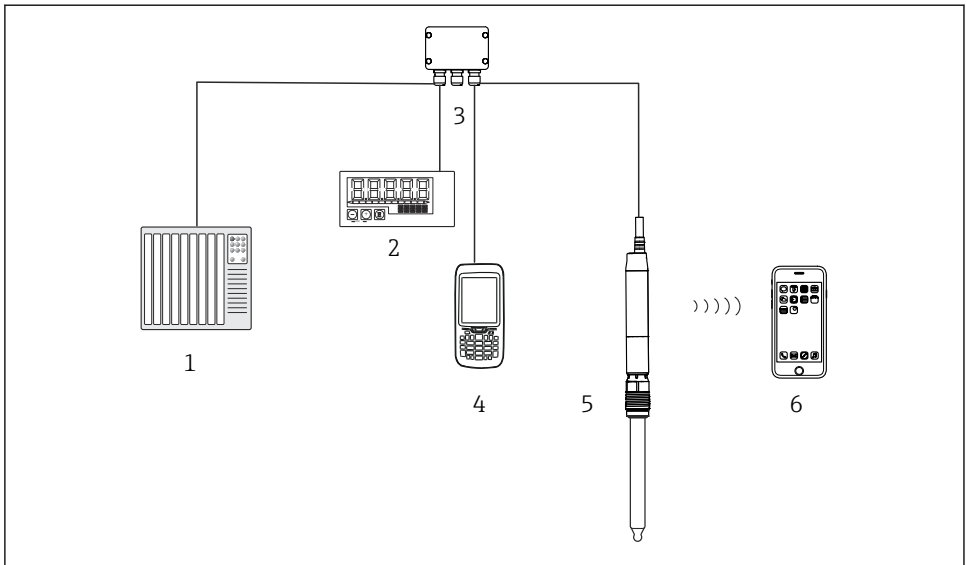

A0036740

4 Wiring options for remote operation via HART protocol

- 1 PLC (programmable logic controller)
- 2 RIA15 loop-powered process indicator, optional
- 3 Junction box
- 4 HART operating device (e.g. SFX350), optional
- 5 Transmitter with Bluetooth® LE wireless technology
- 6 Optional: Smartphone / tablet with SmartBlue (app)

7 Commissioning

7.1 Function check

WARNING

Incorrect connection, incorrect supply voltage

Safety risks for staff and device malfunctions!

- ▶ Check that all connections have been established correctly in accordance with the wiring diagram.
- ▶ Ensure that the supply voltage matches the voltage indicated on the nameplate.

Familiarize yourself with the operation of the device before it is first switched on. In particular, please read the "Basic safety instructions" sections. After power-up, the device performs a self-test and then goes to the measuring mode.

7.1.1 Switching on the device

Once connected to the correct supply voltage, the device starts and is operational. The LED display indicates the status.

To operate via the SmartBlue, the Bluetooth® LE signal on the smartphone or tablet must be switched on.

1. Download and install SmartBlue.
2. Start SmartBlue.
3. Select the device from the displayed livelist. All available devices are displayed.
4. Enter username -> admin
5. Enter initial password -> instrument serial number
6. After the first login it is recommended to change your username and password.

7.1.2 LED display

LED messages signal the status of the device and sensor.

LED behavior	Status
Green Flashes quickly	Everything OK Device starting up
Green Flashes twice	Everything OK Read out Memosens sensor information from sensor to transmitter (sensor type, calibration data, etc.)
Green Flashes slowly	Everything OK Sensor and device OK and functioning correctly.
Green Flashes quickly three times	Everything OK Measured value at PLC in automatic HOLD. If the "Sensor replacement alarm delay" is exceeded, the device transmits a signal on alarm. The automatic hold is set to 30 seconds but can be configured to suit the customer's needs.

LED behavior	Status
Red Flashes quickly	Failure of device or sensor Fault state as per NAMUR NE107
Red, green Three red flashes alternating with three green flashes	Squawk Squawk is signaled briefly while the connection is established. Squawk can also be activated via the app. This makes it possible to locate the device more quickly, e. g. when several devices are installed, you can see which one the connection is established with.

7.2 Setting the operating language

You can change the operating language in the app settings:

Settings/User interface/Language



71535164

www.addresses.endress.com
