

Operating Instructions

Indumax CLS50D/CLS50

Inductive conductivity sensor for standard, Ex and high-temperature applications
Digital sensor with Memosens protocol or analog sensor







Table of contents








1	About this document	3	10.2	Performance characteristics	20
1.1	Warnings	3	10.3	Environment	20
1.2	Symbols	3	10.4	Process	21
1.3	Symbols on the device	3	10.5	Mechanical construction	23
1.4	Documentation	4			
2	Basic safety instructions	4	Index		26
2.1	Requirements for the personnel	4			
2.2	Intended use	4			
2.3	Workplace safety	5			
2.4	Operational safety	5			
2.5	Product safety	5			
3	Incoming acceptance and product identification	5			
3.1	Incoming acceptance	5			
3.2	Product identification	6			
3.3	Scope of delivery	7			
4	Mounting	7			
4.1	Mounting requirements	7			
4.2	Mounting the sensor	9			
4.3	Post-mounting check	12			
5	Electrical connection	12			
5.1	Connecting the sensor	13			
5.2	Ensuring the degree of protection	14			
5.3	Post-connection check	14			
6	Commissioning	15			
7	Maintenance	15			
8	Repair	16			
8.1	General notes	16			
8.2	Spare parts	17			
8.3	Return	17			
8.4	Disposal	17			
9	Accessories	17			
9.1	Measuring cable	17			
9.2	Assemblies	18			
9.3	Calibration solutions	19			
10	Technical data	19			
10.1	Input	19			

1 About this document



1.1 Warnings

Structure of information	Meaning
<p> DANGER</p> <p>Causes (/consequences) If necessary, Consequences of non-compliance (if applicable)</p> <ul style="list-style-type: none"> ▶ Corrective action 	<p>This symbol alerts you to a dangerous situation. Failure to avoid the dangerous situation will result in a fatal or serious injury.</p>
<p> WARNING</p> <p>Causes (/consequences) If necessary, Consequences of non-compliance (if applicable)</p> <ul style="list-style-type: none"> ▶ Corrective action 	<p>This symbol alerts you to a dangerous situation. Failure to avoid the dangerous situation can result in a fatal or serious injury.</p>
<p> CAUTION</p> <p>Causes (/consequences) If necessary, Consequences of non-compliance (if applicable)</p> <ul style="list-style-type: none"> ▶ Corrective action 	<p>This symbol alerts you to a dangerous situation. Failure to avoid this situation can result in minor or more serious injuries.</p>
<p> NOTICE</p> <p>Cause/situation If necessary, Consequences of non-compliance (if applicable)</p> <ul style="list-style-type: none"> ▶ Action/note 	<p>This symbol alerts you to situations which may result in damage to property.</p>

1.2 Symbols

	Additional information, tips
	Permitted or recommended
	Not permitted or not recommended
	Reference to device documentation
	Reference to page
	Reference to graphic
	Result of a step

1.3 Symbols on the device

	Reference to device documentation
	Do not dispose of products bearing this marking as unsorted municipal waste. Instead, return them to the manufacturer for disposal under the applicable conditions.

1.4 Documentation

The following manuals, which complement these Operating Instructions, can be found on the product pages on the Internet:



Technical Information Indumax CLS50D/CLS50, TI00182C

In addition to the Operating Instructions, an XA with "Safety instructions for electrical apparatus in the hazardous area" is also included with sensors for use in the hazardous area.

- ▶ Please follow instructions on use in the hazardous area carefully.

2 Basic safety instructions

2.1 Requirements for the personnel

- Installation, commissioning, operation and maintenance of the measuring system may be carried out only by specially trained technical personnel.
- The technical personnel must be authorized by the plant operator to carry out the specified activities.
- The electrical connection may be performed only by an electrical technician.
- The technical personnel must have read and understood these Operating Instructions and must follow the instructions contained therein.
- Faults at the measuring point may only be rectified by authorized and specially trained personnel.



Repairs not described in the Operating Instructions provided must be carried out only directly at the manufacturer's site or by the service organization.

2.2 Intended use

Indumax CLS50D or CLS50 sensor is particularly suitable for use in the chemical and process technology sectors. The six-decade measuring range and the excellent chemical resistance properties of the materials in contact with the medium (PFA or PEEK) make it possible to use this sensor in a wide range of applications, such as:

- Concentration measurement of acids and bases
- Quality monitoring of chemical products in tanks and pipes
- Phase separation of product/product mixtures

The digital sensor CLS50D is used in conjunction with the Liquiline CM44x/R or Liquiline M CM42, while the analog sensor CLS50 is used with the Liquiline M CM42 or Liquisys CLM223/253.

Use of the device for any purpose other than that described, poses a threat to the safety of people and of the entire measuring system and is therefore not permitted.

The manufacturer is not liable for damage caused by improper or non-designated use.

2.3 Workplace safety

As the user, you are responsible for complying with the following safety conditions:

- Installation guidelines
- Local standards and regulations
- Regulations for explosion protection

Electromagnetic compatibility

- The product has been tested for electromagnetic compatibility in accordance with the applicable international standards for industrial applications.
- The electromagnetic compatibility indicated applies only to a product that has been connected in accordance with these Operating Instructions.

2.4 Operational safety

Before commissioning the entire measuring point:

1. Verify that all connections are correct.
2. Ensure that electrical cables and hose connections are undamaged.
3. Do not operate damaged products, and protect them against unintentional operation.
4. Label damaged products as defective.

During operation:

- ▶ If faults cannot be rectified:
products must be taken out of service and protected against unintentional operation.

2.5 Product safety

The product is designed to meet state-of-the-art safety requirements, has been tested, and left the factory in a condition in which it is safe to operate. The relevant regulations and international standards have been observed.

3 Incoming acceptance and product identification

3.1 Incoming acceptance

1. Verify that the packaging is undamaged.
 - ↳ Notify the supplier of any damage to the packaging.
Keep the damaged packaging until the issue has been resolved.
2. Verify that the contents are undamaged.
 - ↳ Notify the supplier of any damage to the delivery contents.
Keep the damaged goods until the issue has been resolved.
3. Check that the delivery is complete and nothing is missing.
 - ↳ Compare the shipping documents with your order.

4. Pack the product for storage and transportation in such a way that it is protected against impact and moisture.
 - ↳ The original packaging offers the best protection.
Make sure to comply with the permitted ambient conditions.

If you have any questions, please contact your supplier or your local Sales Center.

3.2 Product identification

3.2.1 Nameplate

The nameplate provides you with the following information on your device:

- Manufacturer identification
 - Extended order code
 - Serial number
 - Safety information and warnings
- Compare the information on the nameplate with the order.

3.2.2 Product identification

Product page

www.endress.com/cls50d

www.endress.com/cls50

Interpreting the order code

The order code and serial number of your product can be found in the following locations:

- On the nameplate
- In the delivery papers

Obtaining information on the product

1. Go to www.endress.com.
2. Page search (magnifying glass symbol): Enter valid serial number.
3. Search (magnifying glass).
 - ↳ The product structure is displayed in a popup window.
4. Click the product overview.
 - ↳ A new window opens. Here you fill information pertaining to your device, including the product documentation.

Manufacturer address

Endress+Hauser Conducta GmbH+Co. KG
Dieselstraße 24
D-70839 Gerlingen

3.3 Scope of delivery

The scope of delivery includes:


- Sensor in the version ordered
- Operating Instructions
- ▶ If you have any queries:
Please contact your supplier or local sales center.

4 Mounting

4.1 Mounting requirements

4.1.1 Orientation

- ▶ When installing, align the sensor in such a way that the medium flows through the flow opening of the sensor in the direction of medium flow.
 - ↳ The sensor head must be completely immersed in the medium.

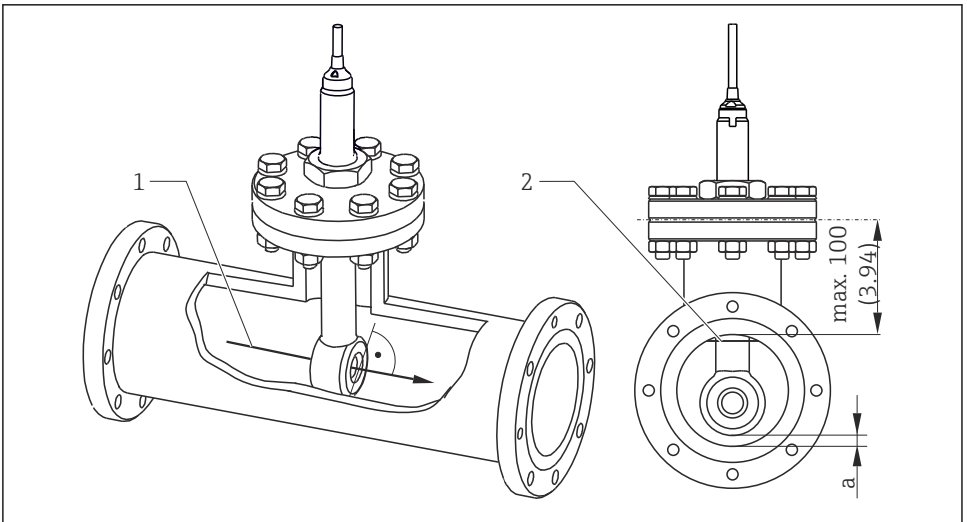

A0036463

1 Sensor orientation, dimensions in mm (in)


1 Direction of medium flow

2 Minimum water level in the pipe

a Distance from pipe wall

4.1.2 Installation factor

In confined installation conditions, the conductivity measurement is affected by the pipe walls. The installation factor compensates for this effect. The transmitter corrects the cell constant by multiplying by the installation factor. The value of the installation factor depends on the diameter and the conductivity of the pipe nozzle as well as the sensor's distance to the wall. The installation factor f can be disregarded ($f = 1.00$) if the distance to the wall is sufficient ($a > 15 \text{ mm}$ (0.59"), from DN 80). If the distance to the wall is smaller, the installation factor increases for electrically insulating pipes ($f > 1$) and decreases for electrically conductive pipes ($f < 1$). It can be measured using calibration solutions, or a close approximation determined from the following diagram.

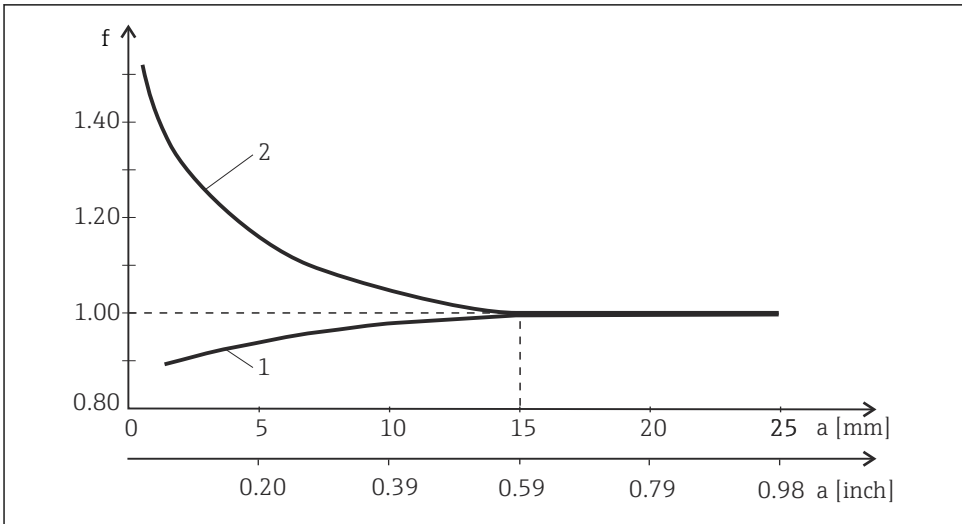

A0034874

2 Relationship between installation factor f and wall distance

- 1 Electrically conductive pipe wall
- 2 Electrically insulating pipe wall

4.1.3 Air set

CLS50D

The digital sensor has already been adjusted at the factory. Onsite compensation is not required.

CLS50

To compensate residual coupling in the cable and between the two sensor coils, zero adjustment in air ("air set") must be performed before installing the sensor. Follow the instructions provided in the Operating Instructions of the transmitter used.

4.2 Mounting the sensor

4.2.1 Installation with flange

The sensor is suitable for installation in T-pieces \geq DN 80, with the outgoing diameter reduced to \geq DN 50.


⚠ WARNING

Leakage

Risk of injury if medium escapes!

- ▶ Tighten sensor nut using a torque of 20 Nm.
- ▶ To avoid leakages, regularly check the tightness of the nut.

Flange, not in contact with medium

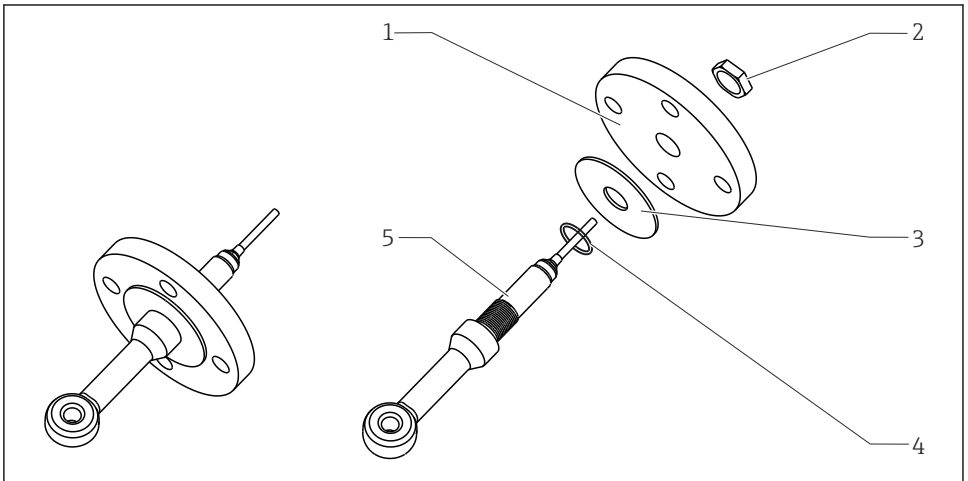


A0024949

3 Fixed flange, not in contact with medium (for order option: "Process connection" = 5, 6, 7)

- 1 Flange (stainless steel)
- 2 Nut
- 3 Sealing disk (GYLON)
- 4 O-ring
- 5 Sensor


Flange, in contact with medium

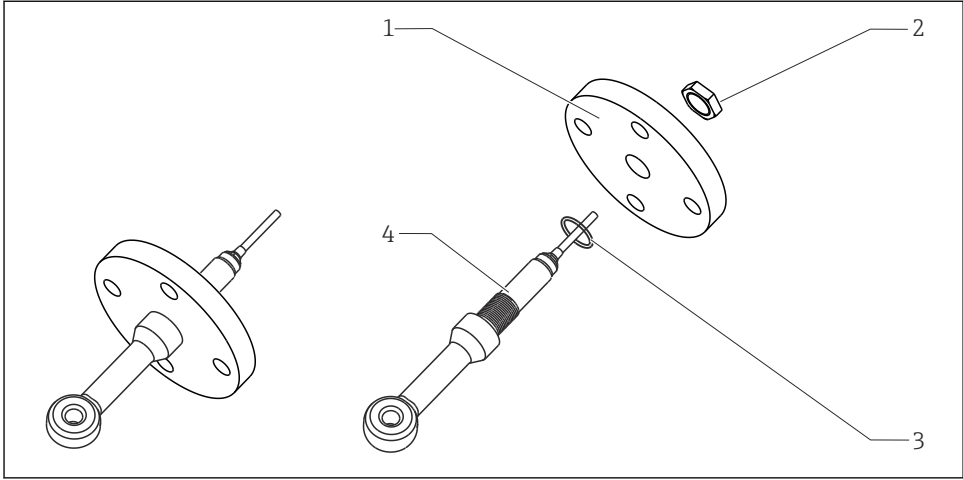

A0024953

▣ 4 Fixed flange, in contact with medium (for order option: "Process connection" = 3, 4)

- 1 Flange (stainless steel)
- 2 Nut
- 3 O-ring
- 4 Sensor

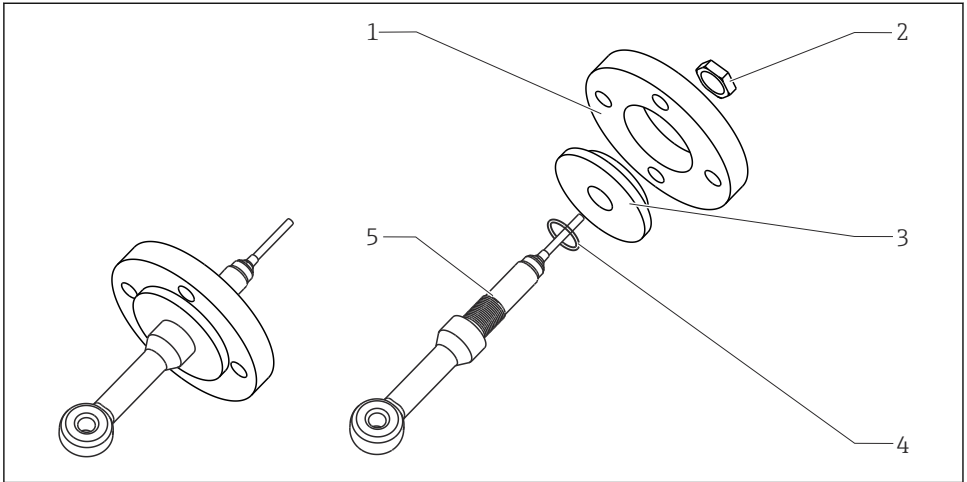
Lap joint flange, not in contact with medium

A0024954

☒ 5 *Lap joint flange, not in contact with medium (for order option: "Process connection" = A, B, C)*

- 1 *Lap joint flange (PP-GF)*
- 2 *Nut (stainless steel)*
- 3 *Flange (PVDF)*
- 4 *O-ring*
- 5 *Sensor*

4.2.2 Installation in assembly

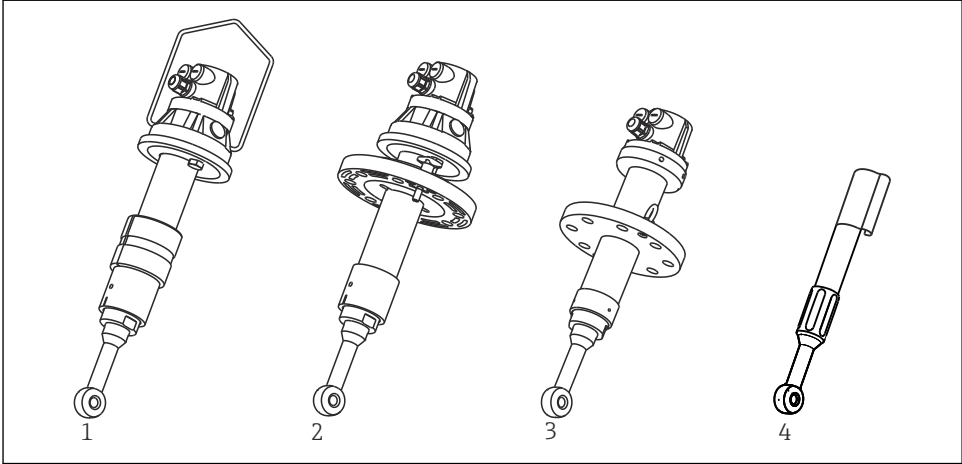

A0024960

6 Installation of sensor with assembly

- 1 CLA111 with suspension bracket
- 2 CLA111 with flange connection
- 3 CLA140 with flange connection
- 4 CYA112

4.3 Post-mounting check

Put the sensor into operation only if you can answer yes to the following questions:

1. Are the sensor and cable undamaged?
2. Is the orientation correct (arrow on threaded sleeve=flow direction=installation direction)?
3. Has the sensor been installed in the process connection, and does not suspend freely from the cable?

5 Electrical connection

⚠ WARNING


Device is live!

Incorrect connection may result in injury or death!

- ▶ The electrical connection may be performed only by an electrical technician.
- ▶ The electrical technician must have read and understood these Operating Instructions and must follow the instructions contained therein.
- ▶ **Prior** to commencing connection work, ensure that no voltage is present on any cable.


5.1 Connecting the sensor

5.1.1 Direct connection, e.g. to CM42

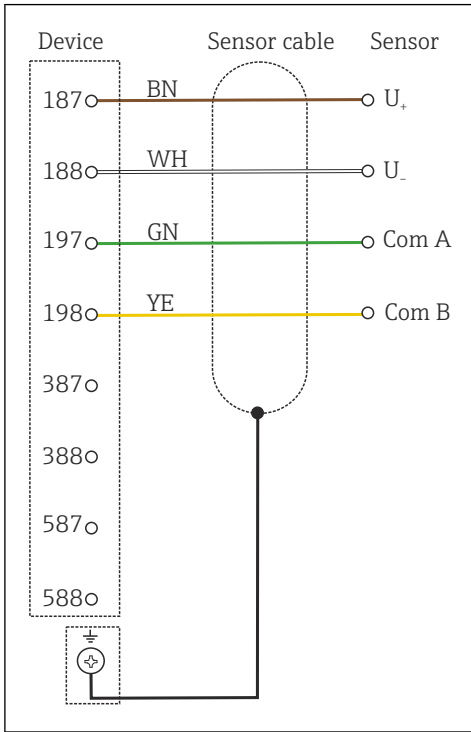

A0001078

7 CLS50D to CM42

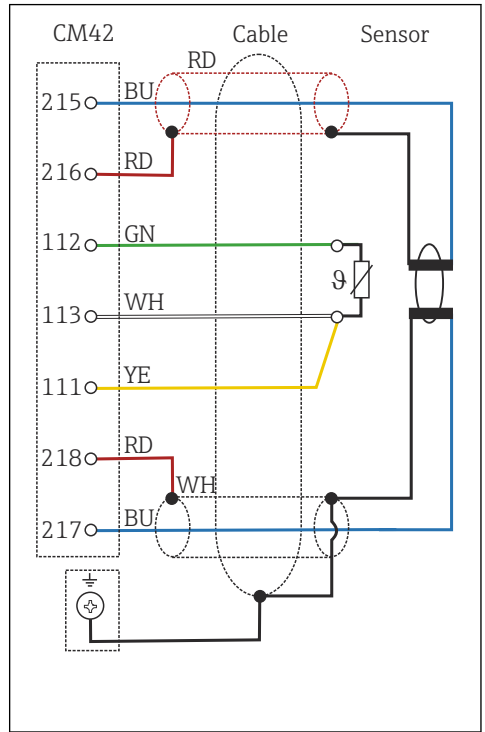


A0001082

8 CLS50 to CM42


5.1.2 Cable extension

The sensor is supplied with a fixed cable. The cable between the sensor and transmitter can be extended using the CYK11 (CLS50D) or CLK6 (CLS50) measuring cable (does not apply for use in a hazardous environment).

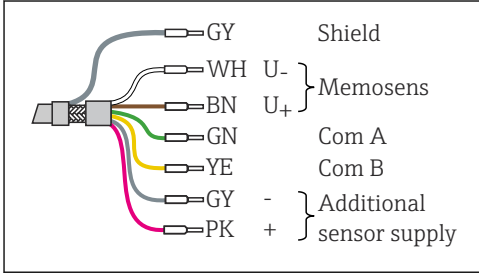

9 CYK11 for extension of CLS50D

Total cable length (max.): 100 m (330 ft)

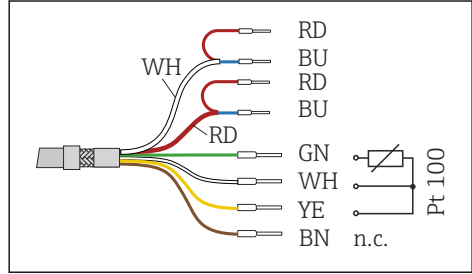

10 CLK6 for extension of CLS50

Total cable length (max.): 55 m (180 ft)

i CLS50 only:
The residual coupling of the sensor increases when the fixed cable is extended.

5.2 Ensuring the degree of protection

Only the mechanical and electrical connections which are described in these instructions and which are necessary for the required, designated use, may be carried out on the device delivered.

► Exercise care when carrying out the work.

Otherwise, the individual types of protection (Ingress Protection (IP), electrical safety, EMC interference immunity) agreed for this product can no longer be guaranteed due, for example to covers being left off or cable (ends) that are loose or insufficiently secured.

5.3 Post-connection check

Device health and specifications	Action
Is the outside of the sensor, assembly or cable free from damage?	► Perform a visual inspection.
Electrical connection	Action
Are the mounted cables strain-relieved and not twisted?	► Perform a visual inspection. ► Untwist the cables.
Is a sufficient length of the cable cores stripped, and are the cores positioned in the terminal correctly?	► Perform a visual inspection. ► Pull gently to check they are seated correctly.
Are all screw terminals tightened?	► Tighten the screw terminals.

Device health and specifications	Action
Are all cable entries mounted, firmly tightened and leak-tight?	▶ Perform a visual inspection. In the case of lateral cable entries:
Are all cable entries mounted on the side or pointing downwards?	▶ Point cable loops downward so that water can drip off.

6 Commissioning

Prior to initial commissioning, ensure that:

- The sensor is correctly installed
- The electrical connection is correct



Operating Instructions of the transmitter being used, e.g. BA01245C if using Liquiline CM44x or CM44xR.

WARNING

Escaping process medium

Risk of injury from high pressure, high temperatures or chemical hazards!

- ▶ Before applying pressure to an assembly with cleaning system, ensure that the system has been connected correctly.
- ▶ If you cannot reliably establish the correct connection, do not install the assembly in the process.

If using an assembly with automatic cleaning function:

1. Check that the cleaning medium (water or air, for example) is connected correctly.
2. At the transmitter, enter all the settings specific to the parameters and measuring point.
3. Following commissioning:
Maintain the sensor at regular intervals.
 - ↳ This is the only way to ensure reliable measurements.

7 Maintenance

WARNING

Thiocarbamide

Harmful if swallowed! Limited evidence of carcinogenicity! Possible risk of harm to the unborn child! Dangerous for the environment with long-term effects!

- ▶ Wear protective goggles, protective gloves and appropriate protective clothing.
- ▶ Avoid all contact with the eyes, mouth and skin.
- ▶ Avoid discharge into the environment.

⚠ CAUTION**Corrosive chemicals**

Risk of chemical burns to the eyes and skin and risk of damage to clothing and equipment!

- ▶ It is absolutely essential to protect the eyes and hands properly when working with acids, alkalis and organic solvents!
- ▶ Wear protective goggles and safety gloves.
- ▶ Clean away splashes on clothes and other objects to prevent any damage.
- ▶ Comply with instructions in the safety data sheets for the chemicals used.

Clean away fouling on the sensor as follows depending on the type of fouling:

1. Oily and greasy films:

Clean with a grease remover, e.g. alcohol, or hot water and a surfactant-containing (basic) agent (e.g. washing-up liquid).

2. Lime and metal hydroxide buildup and low solubility (lyophobic) organic buildup:

Dissolve buildup with diluted hydrochloric acid (3 %) and then rinse thoroughly with plenty of clear water.

3. Sulfidic buildup (from flue gas desulfurization or wastewater treatment plants):

Use a mixture of hydrochloric acid (3 %) and thiocarbamide (commercially available) and then rinse thoroughly with plenty of clear water.

4. Buildup containing protein (e.g. in the food industry):

Use a mixture of hydrochloric acid (0.5 %) and pepsin (commercially available) and then rinse thoroughly with plenty of clear water.

5. Readily soluble biological buildup:

Rinse with pressurized water.

After cleaning, rinse the sensor thoroughly with plenty of water.

8 Repair

8.1 General notes

The repair and conversion concept provides for the following:

- The product has a modular design
- Spare parts are grouped into kits which include the associated kit instructions
- Only use original spare parts from the manufacturer
- Repairs are carried out by the manufacturer's Service Department or by trained users
- Certified devices can only be converted to other certified device versions by the manufacturer's Service Department or at the factory
- Observe applicable standards, national regulations, Ex documentation (XA) and certificates

1. Carry out the repair according to the kit instructions.**2.** Document the repair and conversion and enter, or have entered, in the Life Cycle Management tool (W@M).

8.2 Spare parts

Device spare parts that are currently available for delivery can be found on the website:

www.endress.com/device-viewer

- ▶ Quote the serial number of the device when ordering spare parts.

8.3 Return

The product must be returned if repairs or a factory calibration are required, or if the wrong product was ordered or delivered. As an ISO-certified company and also due to legal regulations, Endress+Hauser is obliged to follow certain procedures when handling any returned products that have been in contact with medium.

To ensure the swift, safe and professional return of the device:

- ▶ Refer to the website www.endress.com/support/return-material for information on the procedure and conditions for returning devices.

8.4 Disposal



If required by the Directive 2012/19/EU on waste electrical and electronic equipment (WEEE), the product is marked with the depicted symbol in order to minimize the disposal of WEEE as unsorted municipal waste. Do not dispose of products bearing this marking as unsorted municipal waste. Instead, return them to the manufacturer for disposal under the applicable conditions.

9 Accessories

The following are the most important accessories available at the time this documentation was issued.

- ▶ For accessories not listed here, please contact your Service or Sales Center.

9.1 Measuring cable

9.1.1 For CLS50D

Memosens data cable CYK11

- Extension cable for digital sensors with Memosens protocol
- Product Configurator on the product page: www.endress.com/cyk11



Technical Information TI00118C

9.1.2 For CLS50

Measuring cable CLK6

- Extension cable for inductive conductivity sensors, for extension via VBM junction box
- Sold by the meter, order number: 71183688

VBM

- Junction box for cable extension
- 10 terminal strips
- Cable entries: 2 x Pg 13.5 or 2 x NPT ½"
- Material: aluminum
- Degree of protection: IP 65
- Order numbers
 - Cable entries Pg 13.5 : 50003987
 - Cable entries NPT ½": 51500177

9.2 Assemblies

Dipfit CLA111

- Immersion assembly for open and closed vessels with flange DN 100
- Product Configurator on the product page: www.products.endress.com/cla111



Technical Information TI00135C

Dipfit CLA140

- For the CLS50/CLS50D inductive sensor
- Immersion assembly with flange connection for very demanding processes
- Product Configurator on the product page: www.products.endress.com/cla140



Technical Information TI00196C

Flexdip CYA112

- Immersion assembly for water and wastewater
- Modular assembly system for sensors in open basins, channels and tanks
- Material: PVC or stainless steel
- Product Configurator on the product page: www.endress.com/cya112



Technical Information TI00432C

9.3 Calibration solutions

Conductivity calibration solutions CLY11

Precision solutions referenced to SRM (Standard Reference Material) by NIST for qualified calibration of conductivity measuring systems in accordance with ISO 9000

- CLY11-B, 149.6 $\mu\text{S}/\text{cm}$ (reference temperature 25 °C (77 °F)), 500 ml (16.9 fl.oz)
Order No. 50081903
- CLY11-C, 1.406 mS/cm (reference temperature 25 °C (77 °F)), 500 ml (16.9 fl.oz)
Order No. 50081904
- CLY11-D, 12.64 mS/cm (reference temperature 25 °C (77 °F)), 500 ml (16.9 fl.oz)
Order No. 50081905
- CLY11-E, 107.00 mS/cm (reference temperature 25 °C (77 °F)), 500 ml (16.9 fl.oz)
Order No. 50081906



Technical Information TI00162C

10 Technical data

10.1 Input

10.1.1 Measured variables

- Conductivity
- Temperature

10.1.2 Measuring range

Conductivity	2 $\mu\text{S}/\text{cm}$ to 2000 mS/cm (uncompensated)
Temperature	-20 to +180 °C (-4 to +350 °F)

10.1.3 Cell constant

$k = 1.98 \text{ cm}^{-1}$

10.1.4 Measuring frequency

2 kHz

10.1.5 Temperature measurement

CLS50D

Pt1000 (Class A according to IEC 60751)

CLS50

Pt100 (Class A according to IEC 60751)

10.2 Performance characteristics

10.2.1 Conductivity response time

$t_{95} \leq 2 \text{ s}$

10.2.2 Temperature response time

PEEK version: $t_{90} \leq 7 \text{ min}$

PFA version: $t_{90} \leq 11 \text{ min}$

10.2.3 Maximum measured error

-20 to 100 °C (-4 to 212 °F): $\pm(5 \mu\text{S/cm} + 0.5 \% \text{ of reading})$

> 100 °C (212 °F): $\pm(10 \mu\text{S/cm} + 0.5 \% \text{ of reading})$

10.2.4 Repeatability

For $T < 100 \text{ °C}$ (212 °F): 0.2 % of reading + 1 $\mu\text{S/cm}$

For $T > 100 \text{ °C}$ (212 °F): 0.2 % of reading + 2 $\mu\text{S/cm}$

10.2.5 Linearity

1.9 % (only applies in the 1 to 20 mS/cm measuring range)

10.3 Environment

10.3.1 Ambient temperature

CLS50D

-10 to +60 °C (+10 to +140 °F)

CLS50

-10 to +70 °C (+10 to +160 °F)

10.3.2 Storage temperature

-20 to +80 °C (0 to +180 °F)

10.3.3 Degree of protection

IP 68 / NEMA type 6 (sensor in installed state with genuine seal)

10.4 Process

10.4.1 Process temperature

Sensor material	CLS50D-*1/2 Without flange	CLS50D-*3/4/5/6/8 DN50, ANSI 2"	CLS50D-*7 JIS	CLS50D-*A/B/C PVDF lap joint flange
PEEK	-20 to 125 °C (-4 to 260 °F)	-20 to 125 °C (-4 to 260 °F)	-20 to 125 °C (-4 to 260 °F)	-20 to 125 °C (-4 to 260 °F)
PFA	-20 to 110 °C (-4 to 230 °F)	-20 to 110 °C (-4 to 230 °F)	-20 to 110 °C (-4 to 230 °F)	-20 to 110 °C (-4 to 230 °F)

CLS50


Sensor material	CLS50-*1/2 Without flange	CLS50-*3/4/5/6/8 DN50, ANSI 2"	CLS50-*7 JIS	CLS50-*A/B/C PVDF lap joint flange
PEEK	-20 to 180 °C (-4 to 360 °F)	-20 to 180 °C (-4 to 360 °F)	-20 to 180 °C (-4 to 360 °F)	-20 to 125 °C (-4 to 260 °F)
PFA	-20 to 125 °C (-4 to 260 °F)	-20 to 125 °C (-4 to 260 °F)	-20 to 125 °C (-4 to 260 °F)	-20 to 125 °C (-4 to 260 °F)

10.4.2 Process pressure (absolute)

Max. 21 bar (305 psi), depending on the sensor version, see pressure-temperature ratings

10.4.3 Pressure/temperature ratings

CLS50D

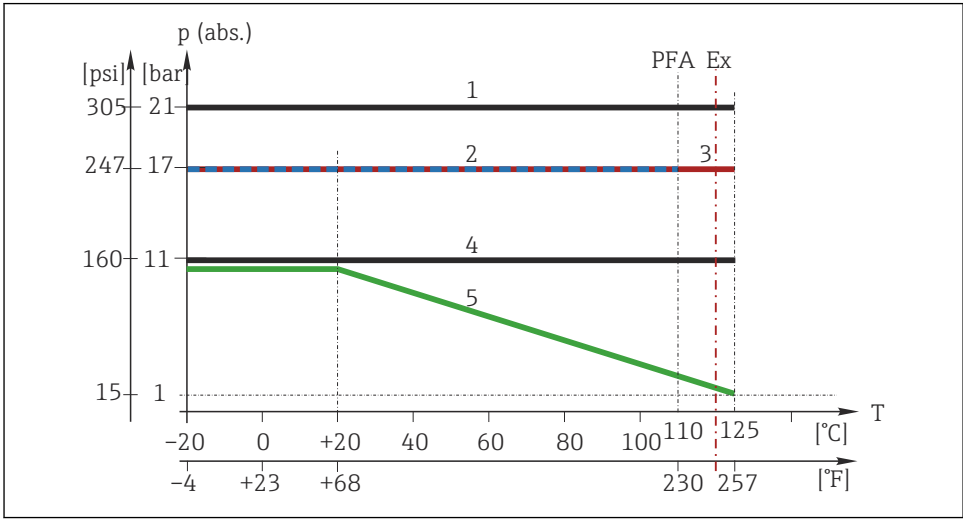


A0024981

11 Pressure-temperature ratings

- 1 PEEK sensor, without a flange
- 2 PFA sensor, without a flange (blue line)
- 3 PEEK or PFA sensor, with DN50/ANSI 2" flange (red line)
- 4 PEEK or PFA sensor, with JIS flange
- 5 PEEK or PFA sensor, with PVDF lap joint flange (green line)

CLS50

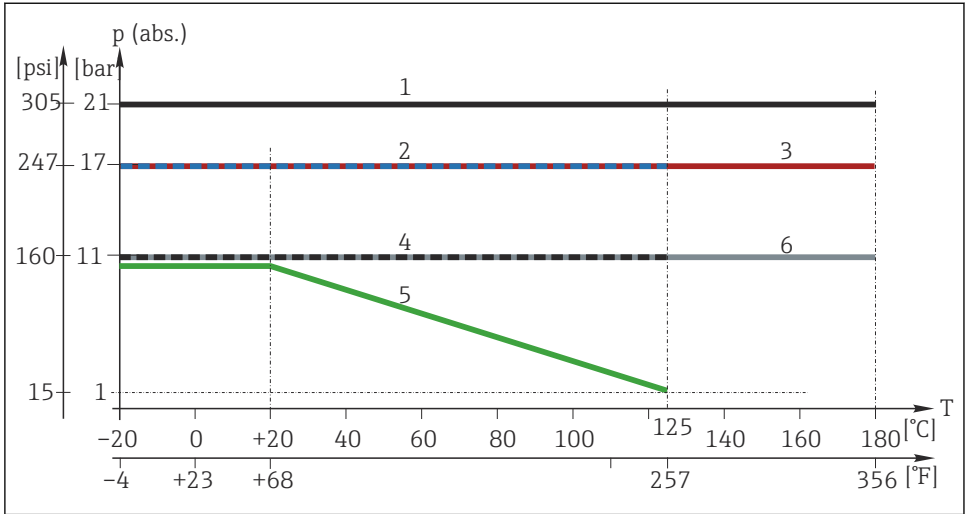

A0024979

12 Pressure-temperature ratings

- 1 PEEK sensor, without a flange
- 2 PFA sensor, without a flange or with DN50/ANSI 2" flange (blue line)
- 3 PEEK sensor, with DN50/ANSI 2" flange (red line)
- 4 PFA sensor, with JIS flange (black line)
- 5 PEEK or PFA sensor, with PVDF lap joint flange (green line)
- 6 PEEK sensor, with JIS flange (gray line)

10.5 Mechanical construction

10.5.1 Weight

Approx. 0.65 kg (1.43 lbs)

10.5.2 Materials


Sensor	PEEK, PFA (depending on version)
Sensor seal	VITON, CHEMRAZ (depending on version)

Process connections	
G $\frac{3}{4}$	CLS50D-*1B/C** : PEEK GF30 CLS50D-*1D** : stainless steel (AISI 316Ti) CLS50-*1A* : stainless steel 1.4571 (AISI 316Ti) CLS50-*1B/C/1/2/3 : PEEK GF30 CLS50-*1B/C/5/6 : stainless steel 1.4571 (AISI 316Ti)
NPT 1"	PEEK
Fixed flange	Stainless steel 1.4404 (AISI 316L)
Sealing disk	GYLON (PTFE ceramic-filled)
Lap joint flange	PP-GF
Flange combined with lap joint flange	PVDF

10.5.3 Process connections

- G $\frac{3}{4}$ thread
- NPT 1" thread
- Lap joint flange EN 1092 DN50 PN10
- Lap joint flange ANSI 2" 150 lbs
- Lap joint flange JIS 10K 50A
- Flange EN 1092-1 DN50 PN16
- Flange ANSI 2" 300 lbs
- Flange JIS 10K 50A

Flange dimensions

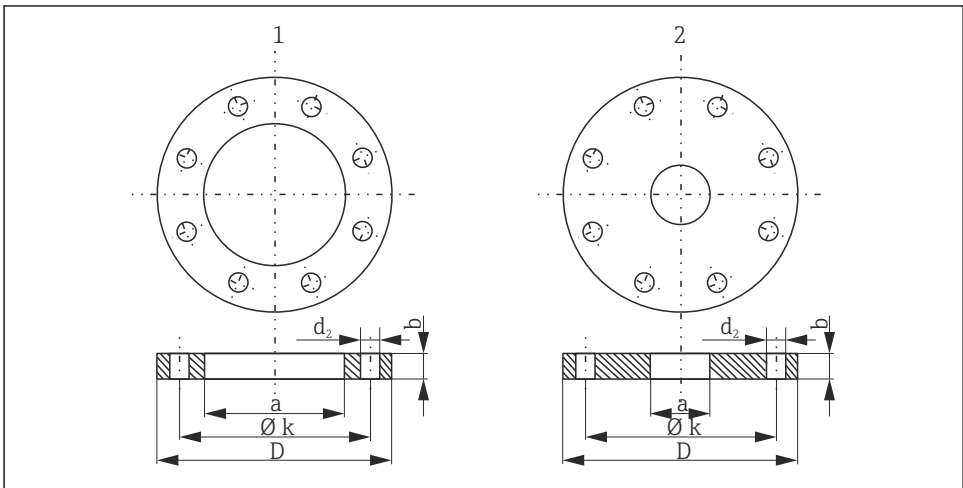

A0024986

13 Flange dimensions

- 1 Lap joint flange (PP-GF)
- 2 Fixed flange (stainless steel)

Dimensions in mm

Lap joint flange PP-GF	DN50 PN10	ANSI 2" 150 lbs	JIS 10K 50A
D	165	165	152
Ø k	125	121	120
d ₂	4 x 18	8 x 19	4 x 19
b	18	18	18
a	78	78	78
Screws	M16	M16	M16

Dimensions in mm

Fixed flange SS 316 L	DN50 PN10	ANSI 2" 300 lbs	JIS 10K 50A
D	165	165.1	155
Ø k	125	127	120
d ₂	4 x 18	8 x 19	4 x 19
b	18	22.2	16
a	27	27	27
Screws	M16	M16	M16

10.5.4 Chemical resistance

Medium	Concentration	PEEK	PFA	CHEMRAZ	VITON
Sodium hydroxide solution NaOH	0 to 50 %	20 to 100 °C (68 to 212 °F)	20 to 50 °C (68 to 122 °F)	0 to 150 °C (32 to 302 °F)	Not suitable
Nitric acid HNO ₃	0 to 10 %	20 to 100 °C (68 to 212 °F)	20 to 80 °C (68 to 176 °F)	0 to 150 °C (32 to 302 °F)	0 to 120 °C (32 to 248 °F)
	0 to 40 %	20 °C (68 °F)	20 to 60 °C (68 to 140 °F)	0 to 150 °C (32 to 302 °F)	0 to 120 °C (32 to 248 °F)
Phosphoric acid H ₃ PO ₄	0 to 80 %	20 to 100 °C (68 to 212 °F)	20 to 60 °C (68 to 140 °F)	0 to 150 °C (32 to 302 °F)	0 to 120 °C (32 to 248 °F)
Sulfuric acid H ₂ SO ₄	0 to 2.5 %	20 to 80 °C (68 to 176 °F)	20 to 100 °C (68 to 212 °F)	0 to 150 °C (32 to 302 °F)	0 to 120 °C (32 to 248 °F)
	0 to 30 %	20 °C (68 °F)	20 to 100 °C (68 to 212 °F)	0 to 150 °C (32 to 302 °F)	0 to 120 °C (32 to 248 °F)
Hydrochloric acid HCl	0 to 5 %	20 to 100 °C (68 to 212 °F)	20 to 80 °C (68 to 176 °F)	0 to 150 °C (32 to 302 °F)	0 to 120 °C (32 to 248 °F)
	0 to 10 %	20 to 100 °C (68 to 212 °F)	20 to 80 °C (68 to 176 °F)	0 to 150 °C (32 to 302 °F)	0 to 120 °C (32 to 248 °F)

Index

A

Accessories	17
Air set	8
Ambient temperature	20
Assembly	12

C

Cable extension	14
Calibration solutions	19
Cell constant	19
Check	
Connection	14
Mounting	12
Chemical resistance	25
Cleaning agent	15
Conductivity response time	20
Connection	
Check	14
Ensuring the degree of protection	14

D

Degree of protection	20
Ensuring	14
Direct connection to transmitter	13
Disposal	17

E

Electrical connection	12
Environment	20

F

Flange	9
------------------	---

I

Incoming acceptance	5
Input	19
Installation factor	8
Intended use	4
Interpreting the order code	6

L

Linearity	20
---------------------	----

M

Maintenance	15
Manufacturer address	6

Materials	23
Maximum measured error	20
Measured variables	19
Measuring frequency	19
Measuring ranges	19
Mechanical construction	23
Mounting	7
Mounting requirements	7

N

Nameplate	6
---------------------	---

O

Operational safety	5
Orientation	7

P

Performance characteristics	20
Post-mounting check	12
Pressure/temperature ratings	22
Process	21
Process connections	24
Process pressure	21
Process temperature	21
Product identification	5, 6
Product page	6
Product safety	5

R

Repair	16
Repeatability	20
Requirements for the personnel	4
Return	17

S

Safety instructions	4
Scope of delivery	7
Sensor	
Connecting	13
Mounting	9
Spare parts	17
Storage temperature	20
Symbols	3

T

Technical data	19
Environment	20
Mechanical construction	23
Performance characteristics	20
Process	21
Temperature measurement	19
Temperature response time	20
Temperature/pressure ratings	22

U

Use	4
---------------	---

W

Warnings	3
Weight	23
Wiring	13
Workplace safety	5



71559090

www.addresses.endress.com
