

Safety Instructions

NRR262 Converter for Oil leak detector NAR300

Intrinsic Safety “ia”



NRR262 Converter for Oil leak detector NAR300

Table of contents

| | |
|---|---|
| Associated documentation | 4 |
| Manufacturer's certificates | 4 |
| Manufacturer address | 4 |
| Extended order code | 4 |
| Safety instructions: General | 5 |
| Safety instructions: Special conditions | 6 |
| Safety instructions: Installation | 7 |
| Connection data | 8 |

Associated documentation This document is an integral part of the following Operating Instructions:

- BA00402G (NAR300 system)
- BA00403G (NAR300 system high temperature)

Manufacturer's certificates **EU Declaration of Conformity**

Declaration Number:
EC00736

The EU Declaration of Conformity is available:
In the download area of the Endress+Hauser website:
www.endress.com -> Downloads -> Declaration -> Type: EU Declaration -> Product Code: ...

EU type-examination certificate

Certificate number:

FM 14 ATEX 0048X

List of applied standards: See EU Declaration of Conformity.

IEC Declaration of Conformity

Certificate number:

IECEX FMG 14.0024X

Affixing the certificate number certifies conformity with the following standards (depending on the device version):

- IEC 60079-0: 2017
- IEC 60079-1: 2014-06
- IEC 60079-11: 2011
- IEC 60079-25: 2020-06

Manufacturer address

Endress+Hauser Yamanashi Co., Ltd.
406-0846
862-1 Mitsukunugi, Sakaigawa-cho, Fuefuki-shi, Yamanashi

Extended order code

The extended order code is indicated on the nameplate, which is affixed to the device in such a way that it is clearly visible. Additional information about the nameplate is provided in the associated Operating Instructions.

Structure of the extended order code

| | | | | |
|----------------------|---|-------------------------------|---|----------------------------------|
| NRR262 | – | *****...***** | + | A*B*C*D*E*F*G*... |
| <i>(Device type)</i> | | <i>(Basic specifications)</i> | | <i>(Optional specifications)</i> |

* = Placeholder

At this position, an option (number or letter) selected from the specification is displayed instead of the placeholders.

Basic specifications

The features that are absolutely essential for the device (mandatory features) are specified in the basic specifications. The number of positions depends on the number of features available. The selected option of a feature can consist of several positions.

Optional specifications

The optional specifications describe additional features for the device (optional features). The number of positions depends on the number of features available. The features have a 2-digit

structure to aid identification (e.g. JA). The first digit (ID) stands for the feature group and consists of a number or a letter (e.g. J = Test, Certificate). The second digit constitutes the value that stands for the feature within the group (e.g. A = 3.1 material (wetted parts), inspection certificate).

More detailed information about the device is provided in the following tables. These tables describe the individual positions and IDs in the extended order code which are relevant to hazardous locations.

Extended order code: NRR262



The following specifications reproduce an extract from the product structure and are used to assign:

- This documentation to the device (using the extended order code on the nameplate).
- The device options cited in the document.

Device type

NRR262

Basic specifications

| Specification code 1 (approval) | | |
|---------------------------------|---|-------------|
| Selected option | | Description |
| NRR262 | A | ATEX |
| | B | IECEX |

| Specification code 2 (power supply) | | |
|-------------------------------------|---|-----------------------------------|
| Selected option | | Description |
| NRR262 | A | 90 to 25 V _{AC} 50/60 Hz |
| | B | 22 to 26 V _{DC} |

Optional specifications

No options specific to hazardous locations are available.

Safety instructions: General

- Staff must meet the following conditions for mounting, electrical installation, commissioning and maintenance of the device:
 - Be suitably qualified for their role and the tasks they perform
 - Be trained in explosion protection
 - Be familiar with national regulations
- Install the device according to the manufacturer's instructions and national regulations.
- Do not operate the device outside the specified electrical, thermal and mechanical parameters.
- Only use the device in media to which the wetted materials have sufficient durability.
- Avoid electrostatic charging:
 - Of plastic surfaces (e.g. housing, sensor element, special varnishing, attached additional plates, ..)
 - Of isolated capacities (e.g. isolated metallic plates)
- Modifications to the device can affect the explosion protection and must be carried out by staff authorized to perform such work by Endress+Hauser.

**Safety instructions:
Special conditions**

- The ambient temperature range for Converter NRR262 is -20 to 60 °C (-4 to 140 °F).
- Connect the external grounding terminal to class A grounding ($\leq 10 \Omega$) by the shortest practicable rout.
- For safe handling of an Oil leak detector NAR300 (intrinsically safe device) that is connected to Converter NRR262, adhere to the following conditions.

| Oil leak detector | NAR300- | | | | Remarks |
|--|---------|--------|--------|--------|---------|
| | A5**** | A6**** | B5**** | B6**** | |
| NRR262-A* | ✔ | ✔ | ✘ | ✘ | ATEX |
| NRR262-B* | ✘ | ✘ | ✔ | ✔ | IECEX |
| ✔ : Connectible ✘ : Not connectible | | | | | |

The maximum external inductance (L_o) and maximum external capacitance (C_o) of the intrinsically safe circuit and the maximum inductance (L_w) and maximum capacitance (C_w) of an external connection cable are shown below.

$$C_w < C_o - 0 \text{ nF (} C_i) = 0.083 \mu\text{F}$$

and

$$L_w < L_o - 48 \mu\text{H (} L_i) = 2.3 \text{ mH}$$


For the above conditions, also see the explosion safety instruction manual for the converter in the following table.

| Converter | Approval No. | Explosion safety instruction manual | Remarks |
|------------|-----------------------------|-------------------------------------|---|
| NAR300-A** | FM14 ATEX0048X18JPN8362X | XA01741G-* | Installation in hazardous locations Float sensor; Ex ia IIB T5 Ga Transmitter; Ex ia [ia Ga] IIB T4 SIL specifications |
| NAR300-B** | IECEX FMG 14.0024X | XA01741G-* | |

- The cable that connects an oil leak detector and converter must have a heat-resistant temperature of at least 70 °C (158 °F).
- Ensure that the power supply and non-IS devices do not exceed 250 V_{AC} 50/60 Hz or 250 V_{DC} in both normal and abnormal situations.
- The Oil leak detector (intrinsic safety device), converter (associated intrinsic safety device) and these connecting wiring, ensure that no current or voltage is generated that could impair the intrinsic safety function of the intrinsic safety circuit by Electromagnetic induction or electrostatic induction.

Safety instructions:
Installation

Use Converter NRR262 by configuring it as shown below.

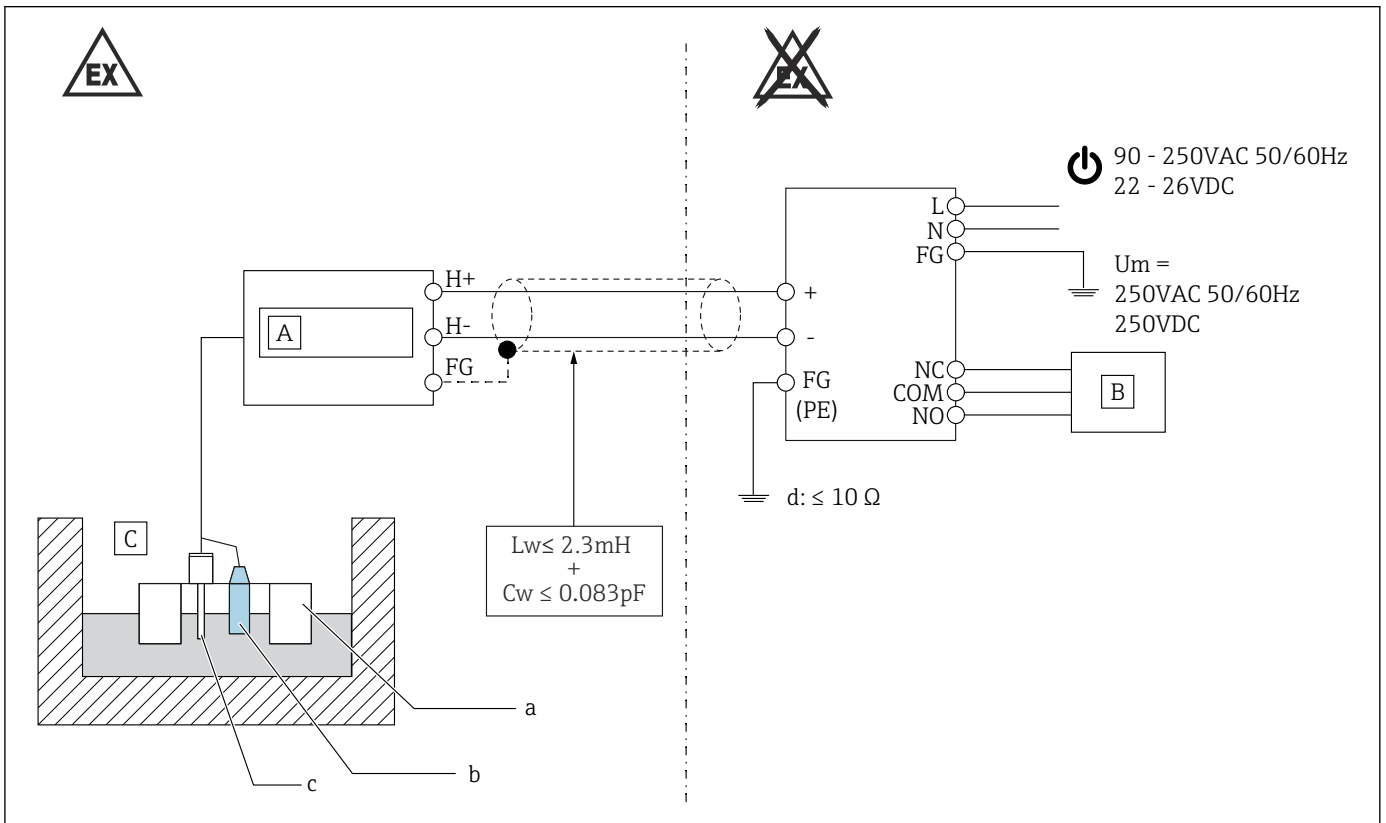

A0038580


1 NAR300-A5/B5****, A6/B6**** and NRR262-A/B* wiring

- A Transmitter
- B Non-IS device
- C Float sensor
- a Float
- b Conductivity sensor
- c Vibronic sensor
- d Class A grounding

- See XA01741G for details on Float sensor NAR300-A5/B5**** and NAR300-A6/B6****.
- See BA00402G or BA00403G for details on the following wiring arrangements.
 - Wiring between NAR300 and NRR261 or NRR262
 - Wiring between the transmitter of NAR300 and the float sensor

Connection data

Basic specifications

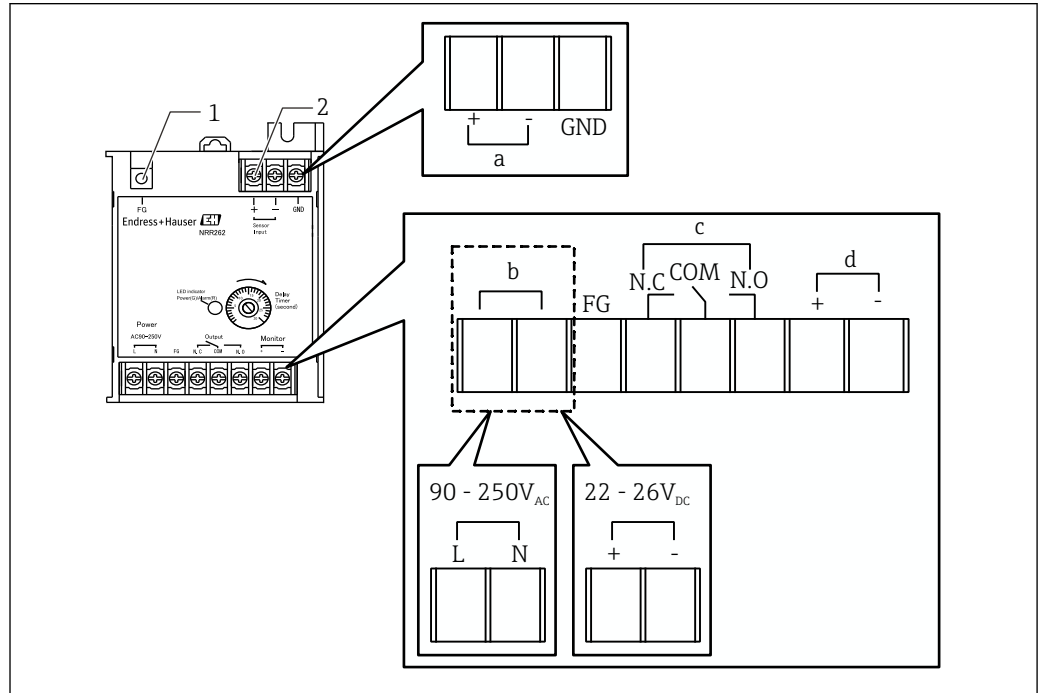

A0038581

2 NRR262-A/B* terminal

- 1 Class A grounding for intrinsic safety, screw (M4)
- 2 NAR300 connection, screw (M3)
- a NAR300-A5/B5****/NAR300-A6/B6**** connection terminal, screw (M3)
- b Power supply connection terminal, screw (M3)
- c Alarm output, screw (M3)
- d Monitor output for current check, screw (M3)

| Terminal symbol | | Intrinsic safety parameter |
|-----------------|----|---|
| a | H+ | $U_0 = 28\text{ V}$ $I_0 = 85\text{ mA}$ $P_0 = 595\text{ mW}$ $C_0 = 83\text{ nF}$ $L_0 = 2.4\text{ mH}$ |
| | H- | |

i Use the shortest distance possible to connect the grounding terminal (PE) and class A grounding line.

| Items | Terminal symbol | Rating | Remarks |
|----------------------------------|-----------------|--|-------------------------------------|
| Power supply connection terminal | L | 90 to 250 V _{AC} , 50/60 Hz Um = 250 V _{AC} /250 V _{DC} | |
| | N | | |
| | + | 22 to 26 V _{DC} Um = 250 V _{AC} /250 V _{DC} | |
| | - | | |
| Alarm output | N.C | 250 V _{AC} 5 A 30 V _{DC} 5 A Um = 250 V _{AC} /250 V _{DC} | |
| | COM | | |
| | N.O | | |
| Monitor output for current check | + | Connected to ammeter | NAR300 current measurement terminal |
| | - | | |

i FG is connected when a power supply cable with FG is used.







www.addresses.endress.com
