## Safety Instructions **Micropilot FMR60, FMR62, FMR67**

4-20 mA HART

Ex ia/d [ia Ga] IIC T6 Ga/Gb







### Micropilot FMR60, FMR62, FMR67

#### 4-20 mA HART

#### Table of contents

About this document 4
Associated documentation
Supplementary documentation
Manufacturer's certificates
Manufacturer address 4
Extended order code
Safety instructions: General
Safety instructions: Special conditions
Safety instructions: Installation
Safety instructions: Ex d joints
Temperature tables
Connection data

## About this document



This document has been translated into several languages. Legally determined is solely the English source text.

## Associated documentation

This document is an integral part of the following Operating Instructions:

- BA01618F/00 (FMR60)
- BA01619F/00 (FMR62)
- BA01620F/00 (FMR67)

## Supplementary documentation

Explosion-protection brochure: CP00021Z/11

The Explosion-protection brochure is available:

- In the download area of the Endress+Hauser website: www.endress.com -> Downloads -> Brochures and Catalogs -> Text Search: CP000217.
- On the CD for devices with CD-based documentation

## Manufacturer's certificates

#### NEPSI Declaration of Conformity

Certificate number: GYJ21.3422X

Affixing the certificate number certifies conformity with the following standards (depending on the device version):

- GB 3836.1-2010
- GB 3836.2-2010
- GB 3836.4-2010
- GB3836.20-2010

## Manufacturer address

Endress+Hauser SE+Co. KG

Hauptstraße 1

79689 Maulburg, Germany

Address of the manufacturing plant: See nameplate.

## Extended order code

The extended order code is indicated on the nameplate, which is affixed to the device in such a way that it is clearly visible. Additional information about the nameplate is provided in the associated Operating Instructions.

#### Structure of the extended order code

FMR6x	-	******	+	A*B*C*D*E*F*G*.
(Device		(Basic		(Optional
type)		specifications)		specifications)

#### \* = Placeholder

At this position, an option (number or letter) selected from the specification is displayed instead of the placeholders.

#### Basic specifications

The features that are absolutely essential for the device (mandatory features) are specified in the basic specifications. The number of positions depends on the number of features available.

The selected option of a feature can consist of several positions.

#### Optional specifications

The optional specifications describe additional features for the device (optional features). The number of positions depends on the number of features available. The features have a 2-digit structure to aid identification (e.g. JA). The first digit (ID) stands for the feature group and consists of a number or a letter (e.g. J = Test, Certificate). The second digit constitutes the value that stands for the feature within the group (e.g. A = 3.1 material (wetted parts), inspection certificate).

More detailed information about the device is provided in the following tables. These tables describe the individual positions and IDs in the extended order code which are relevant to hazardous locations.

#### Extended order code: Micropilot



The following specifications reproduce an extract from the product structure and are used to assign:

- This documentation to the device (using the extended order code on the nameplate).
- The device options cited in the document.

#### Device type

FMR60, FMR62, FMR67

#### Basic specifications

Position 1, 2 (Approval)			
Selected option		Description	
FMR6x	NC	NEPSI Ex ia/d [ia Ga] IIC T6 Ga/Gb	

Position 3 (Power Supply, Output)		
Selected option		Description
FMR6x	А	2-wire, 4-20 mA HART
	В	2-wire, 4-20 mA HART, switch output (PFS)
	С	2-wire, 4-20 mA HART, 420 mA

Position 4 (Display, Operation)			
Selected option		Description	
FMR6x	Α	Without, via communication	
	С	SD02, 4-line, push buttons + data backup function	
	Е	SD03, 4-line, illum., touch control + data backup function	
	L	Prepared for display FHX50 + M12 connection	
	M	Prepared for display FHX50 + custom connection	
	N	Prepared for display FHX50 + NPT1/2"	

Position 5 (Housing)			
Selected option		Description	
FMR62 FMR67	В	GT18 dual compartment, 316L	
FMR6x	С	GT20 dual compartment, Alu, coated	

Position 7, 8 (Antenna)			
Selected option		Description	
FMR60	GA	Drip-off, PTFE DN50	
FMR62	GE	Integrated, PEEK, 3/4"	
	GF	Integrated, PEEK, 1-1/2"	
	GM	PTFE cladded flush mount DN50	
	GN	PTFE cladded flush mount DN80	
FMR67	GA	Drip-off, PTFE DN50	
	GP	PTFE flush mount DN80	
Shown in the temperature tables exemplary as follows:			

Position 9, 1	Position 9, 10 (Seal)				
Selected option		Description			
FMR60	А3	FKM Viton GLT, -4080°C/-40176°F			
	A4	FKM Viton GLT, -40130°C/-40266°F			
	C1	FFKM Kalrez, -20150°C/-4302°F			
	B4	EPDM, -40150°C/-40302°F			
FMR62	A5	FKM Viton GLT, -40150°C/-40302°F			
	A6	FKM Viton GLT, -40200°C/-40392°F			
	C1	FFKM Kalrez, -20150°C/-4302°F			
	C2	FFKM Kalrez, -20200°C/-4392°F			
	F5	PTFE cladded, -40150°C/-40302°F			
	F6	PTFE cladded, -40200°C/-40392°F			

Position 9, 10 (Seal)			
Selected option		Description	
FMR67	A3	FKM Viton GLT, -4080°C/-40176°F	
	A5	FKM Viton GLT, -40150°C/-40302°F	
	A6	FKM Viton GLT, -40200°C/-40392°F	
	wn in the te nplary as fo	emperature tables ollows:	

Position 11-13 (Process Connection)				
Selected option		Description		
FMR60	GGJ	Thread ISO228 G1-1/2, 316L		
	RGJ	Thread ANSI MNPT1-1/2, 316L		
	XxG	Flange (different sizes), PP		
	XxJ	Flange (different sizes), 316L		
FMR62	AxK	Flange (different sizes), PTFE>316/316L		
	CxK	Flange (different sizes), PTFE>316L		
	GxJ	Thread ISO (different sizes), 316L		
	KxK	Flange (different sizes), PTFE>316L		
	MxK	Slotted-nut (different sizes), PTFE>316L		
	RxJ	Thread ANSI (different sizes), 316L		
	TxK	Tri-Clamp (different sizes), PTFE>316L		
FMR67	AxJ	Flange (different sizes), 316/316L		
	CxJ	Flange (different sizes), 316L		
	GGJ	Thread ISO228 G1-1/2, 316L		
	KxJ	Flange (different sizes), 316L		
	RGJ	Thread ANSI MNPT1-1/2, 316L		
	XxA	Align. device (different sizes)		
	XxG	Flange (different sizes), PP		
	XxJ	Flange (different sizes), 316L		

Position 14 (Air Purge Connection)			
Selected option		Description	
FMR67	A 1)	W/o	
	1 2)	G1/4	
	2 2)	NPT1/4	
	3 1)	Adapter G1/4	
	4 1)	Adapter NPT1/4	

- 1) Only in connection with Position 7, 8 = GA
- 2) Only in connection with Position 7, 8 = GP

#### Optional specifications

ID Nx (Acce	ssory Mou	inted)
Selected opt	tion	Description
FMR6x	NF 1)	Bluetooth

1) Only in connection with Position 4 = C, E

#### Safety instructions: General

- The device is intended to be used in explosive atmospheres as defined in the scope of IEC 60079-0 or equivalent national standards. If no potentially explosive atmospheres are present or if additional protective measures have been taken: The device may be operated according to the manufacturer's specifications.
- Staff must meet the following conditions for mounting, electrical installation, commissioning and maintenance of the device:
  - Be suitably qualified for their role and the tasks they perform
  - Be trained in explosion protection
  - ullet Be familiar with national regulations
- For installation, use and maintenance of the device, users must also observe the requirements stated in the Operating Instructions and the standards:
  - GB 50257-2014: "Code for construction and acceptance of electric device for explosion atmospheres and fire hazard electrical equipment installation engineering".
  - GB 3836.13-2013: "Explosive atmospheres, Part 13: Equipment repair, overhaul and reclamation".
  - GB/T 3836.15-2017: "Explosive atmospheres, Part 15: Electrical installations design, selection and erection".
  - GB/T 3836.16-2017: "Explosive atmospheres, Part 16: Electrical installations inspection and maintenance".
  - GB/T 3836.18-2017: "Explosive atmospheres, Part 18: Intrinsically safe electrical systems".

- Install the device according to the manufacturer's instructions and national regulations.
- Do not operate the device outside the specified electrical, thermal and mechanical parameters.
- Only use the device in media to which the wetted materials have sufficient durability.
- Avoid electrostatic charging:
  - Of plastic surfaces (e.g. enclosure, sensor element, special varnishing, attached additional plates, ..)
  - Of isolated capacities (e.g. isolated metallic plates)
- Modifications to the device can affect the explosion protection and must be carried out by staff authorized to perform such work by Endress+Hauser.
- Refer to the temperature tables for the relationship between the permitted ambient temperature for the sensor and/or transmitter, depending on the range of application and the temperature class.

#### Safety instructions: Special conditions

Permitted ambient temperature range at the electronics enclosure:  $-40\,^{\circ}\text{C} \le T_a \le +80\,^{\circ}\text{C}$ 

- Observe the information in the temperature tables.
- In the case of process connections made of polymeric material or with polymeric coatings, avoid electrostatic charging of the plastic surfaces.
- To avoid electrostatic charging: Do not rub surfaces with a dry cloth.
- In the event of additional or alternative special varnishing on the enclosure or other metal parts or for adhesive plates:
  - Observe the danger of electrostatic charging and discharge.
  - Do not install in the vicinity of processes (≤ 0.5 m) generating strong electrostatic charges.
- Avoid electrostatic charging of the sensor (e.g. do not rub dry and install outside the filling flow).


Device type FMR67 and Basic specification, Position 11-13 = XxA

- In Zone 0, avoid sparks caused by impact and friction.
- Changing the position of the alignment device must be impossible:
  - After the alignment of the antenna via the pivot bracket
  - $\ \ \, \blacksquare$  After tightening of the clamping flange
  - After setting the damping ring (torque 10 to 11 Nm)
- Degree of protection IP67 must be fulfilled.

Device type FMR67 and Basic specification, Position 14 = 1, 2

- If equipment with Ga/Gb or Da/Db is required: In the closed state the minimum degree of protection of the installation must be IP67.
- After removing the air purge connection: Lock the opening with a suitable plug.
  - Torque: 6-7 Nm
  - For Da/Db: thread engagement > 5 turns
- Degree of protection IP67 must be fulfilled.

#### Safety instructions: Installation

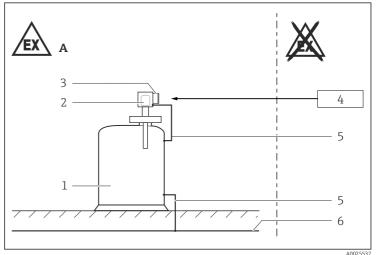

A00255

- A Zone 1
- 1 Tank; Zone 0, Zone 1
- 2 Electronics compartment Ex ia; Electronic insert
- 3 Connection compartment Ex d
- 4 Power supply
- 5 Potential equalization line
- 6 Potential equalization
- After aligning (rotating) the enclosure, retighten the fixing screw (see Operating Instructions).
- Install the device to exclude any mechanical damage or friction during the application. Pay particular attention to flow conditions and tank fittings.
- In potentially explosive atmospheres:
  - Do not disconnect the electrical connection of the power supply circuit when energized.
  - $\ \ \, \ \ \,$  Do not open the connection compartment cover.

- Only use certified cable entries suitable for the application. Observe national regulations and standards. Accordingly, the connection terminal does not include any ignition sources.
- When operating the transmitter enclosure at an ambient temperature under -20 °C, use appropriate cables and cable entries permitted for this application.
- When connecting through a conduit entry approved for this purpose, mount the associated sealing unit directly at the enclosure.
- Seal unused entry glands with approved sealing plugs that correspond to the type of protection. The plastic transport sealing plug does not meet this requirement and must therefore be replaced during installation.
- Before operation:
  - Screw in the cover all the way.
  - Tighten the securing clamp on the cover.
- Continuous service temperature of the connecting cable: -40 °C to  $\ge +85$  °C; in accordance with the range of service temperature taking into account additional influences of the process conditions  $(T_{a,min})$ ,  $(T_{a,max} + 20 \text{ K})$ .

Basic specification, Position 4 = N

Observe the requirements according to IEC/EN 60079-14 for conduit systems and the wiring- and installation instructions of the suitable Safety Instructions (XA). In addition, observe national regulations and standards for conduit systems.

#### Explosion protection "Flameproof enclosure Ex d"

Flameproof equipment with G threaded entry holes is not intended for new installations but only for replacement of equipment in existing installations. Application of this equipment shall comply with the local installation requirements.

#### Intrinsic safety

- The device can be connected to the Endress+Hauser FXA291 service tool: refer to the Operating Instructions.
- The device can be equipped with the Bluetooth® module: refer to the Operating Instructions and specifications in the "Bluetooth® module" chapter.

#### Potential equalization

Integrate the device into the local potential equalization.

#### Bluetooth® module

Optional specification, ID Nx = NF

- With Bluetooth® module installed: Use of external hardware not allowed (e.g. external display, service interface).
- The intrinsically safe input power circuit of the Bluetooth® module is isolated from ground.

#### Safety instructions: Ex d joints

- If required or if in doubt: ask manufacturer for specifications.
- Flameproof joints are not intended to be repaired.

## Temperature tables

Observe the permitted temperature range at the antenna.

#### **Description notes**

Unless otherwise indicated, the positions always refer to the basic specification.

1st column: Position 5 = A, B, ...

2nd column: Temperature classes T6 (85 °C) to T1 (450 °C)


Column P1 to P5: Position (temperature value) on the axes of the derating

- lacktriangle  $T_a$ : Ambient temperature in  ${}^{\circ}$ C
- T<sub>p</sub>: Process temperature in °C
- Column P2+ is only relevant for version B of the derating.


#### Example table

		P1		P2		P2+		P3		P4		P5	
= C		T <sub>p</sub>	Ta	T <sub>p</sub>	Ta								
	Т6	-40	51	51	51	-	-	85	46	85	-40	-40	-40
	T5	-40	64	64	64	-	-	100	59	100	-40	-40	-40
	T4 T1	-40	64	64	64	-	-	130	54	130	-40	-40	-40

#### Example diagrams of possible deratings

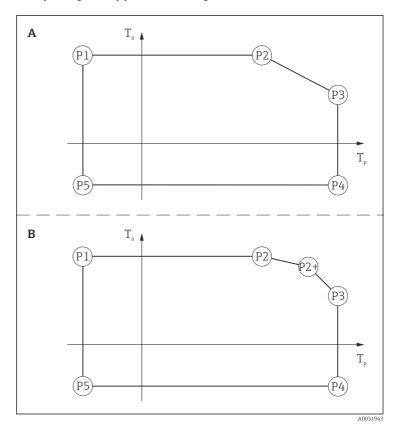

#### Zone 0, Zone 1

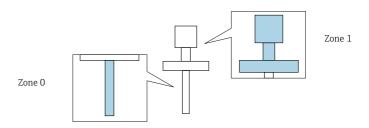


#### FMR6x

		P1		P2		P2+		P3		P4		P5	
= B, C		T <sub>p</sub>	Ta	T <sub>p</sub>	T <sub>a</sub>	T <sub>p</sub>	T <sub>a</sub>	T <sub>p</sub>	T <sub>a</sub>	T <sub>p</sub>	Ta	T <sub>p</sub>	Ta
	Т6	-20	51	51	51	-	-	60	49	60	-20	-20	-20
	T5	-20	64	60	64	-	-	60	64	60	-20	-20	-20
	T4	-20	64	60	64	-	-	60	64	60	-20	-20	-20
	T3 T1	-20	64	60	64	-	-	60	64	60	-20	-20	-20


#### Zone 1

Page references to the temperature tables of the respective device types: See the following list.


- FMR60 → 🖺 16
- FMR62 → 🖺 19
- FMR67 → 🗎 23

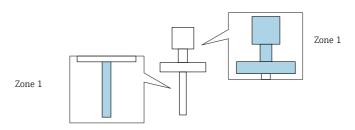


#### FMR60

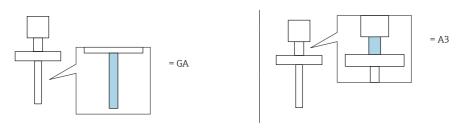


		P1		P2		P2+		P3		P4		P5	
= C		T <sub>p</sub>	T <sub>a</sub>	T <sub>p</sub>	Ta	T <sub>p</sub>	T <sub>a</sub>	T <sub>p</sub>	Ta	T <sub>p</sub>	T <sub>a</sub>	T <sub>p</sub>	Ta
	T6 T1	-40	51	51	51	-	-	80	47	80	-40	-40	-40

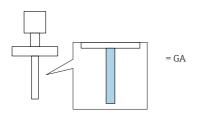


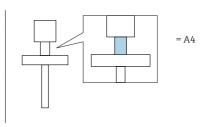


		P1		P2		P2+		Р3		P4		P5	
= C		T <sub>p</sub>	T <sub>a</sub>	T <sub>p</sub>	Ta	T <sub>p</sub>	T <sub>a</sub>	T <sub>p</sub>	Ta	T <sub>p</sub>	T <sub>a</sub>	T <sub>p</sub>	Ta
	Т6	-40	51	51	51	-	-	85	46	85	-40	-40	-40
	T5	-40	64	64	64	-	-	100	59	100	-40	-40	-40
	T4 T1	-40	64	64	64	-	-	130	54	130	-40	-40	-40


#### FMR60

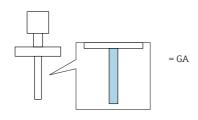

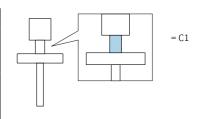


		P1		P2		P2+		P3		P4		P5	
= C		T <sub>p</sub>	T <sub>a</sub>	T <sub>p</sub>	Ta								
	Т6	-20	51	51	51	-	-	85	46	85	-20	-20	-20
	T5	-20	64	64	64	-	-	100	59	100	-20	-20	-20
	T4	-20	64	64	64	-	-	135	54	135	-20	-20	-20
	T3 T1	-20	64	64	64	-	-	150	50	150	-20	-20	-20

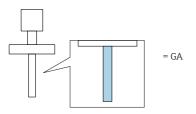

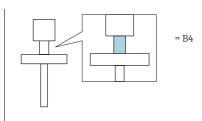


		P1		P2		P2+		P3		P4		P5	
= C		T <sub>p</sub>	T <sub>a</sub>	T <sub>p</sub>	T <sub>a</sub>	T <sub>p</sub>	Ta	T <sub>p</sub>	Ta	T <sub>p</sub>	T <sub>a</sub>	T <sub>p</sub>	Ta
	Т6	-40	51	51	51	-	-	85	46	85	-40	-40	-40
	T5	-40	64	64	64	-	-	100	59	100	-40	-40	-40
	T4	-40	64	64	64	-	-	135	54	135	-40	-40	-40
	T3 T1	-40	64	64	64	-	-	150	50	150	-40	-40	-40

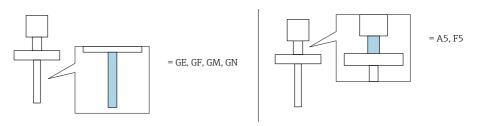


		P1		P2		P2+		Р3		P4		P5	
= B		T <sub>p</sub>	Ta	T <sub>p</sub>	Ta	T <sub>p</sub>	Ta	T <sub>p</sub>	T <sub>a</sub>	T <sub>p</sub>	Ta	T <sub>p</sub>	Ta
	Т6	-40	51	51	51	-	-	85	45	85	-40	-40	-40
	T5	-40	64	64	64	-	-	100	58	100	-40	-40	-40
	T4	-40	64	64	64	-	-	135	52	135	-40	-40	-40
	T3 T1	-40	64	64	64	-	-	150	47	150	-40	-40	-40

		P1		P2		P2+		Р3		P4		P5	
= C		T <sub>p</sub>	Ta	T <sub>p</sub>	Ta								
	Т6	-40	51	51	51	-	-	85	47	85	-40	-40	-40
	T5	-40	64	64	64	-	-	100	60	100	-40	-40	-40
	T4	-40	64	64	64	-	-	135	56	135	-40	-40	-40
	T3 T1	-40	64	64	64	-	-	150	54	150	-40	-40	-40

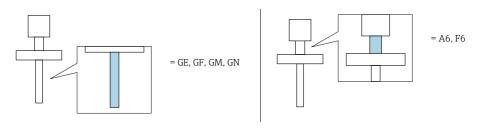


		P1		P2		P2+		P3		P4		P5	
= B, C		T <sub>p</sub>	T <sub>a</sub>	T <sub>p</sub>	T <sub>a</sub>	T <sub>p</sub>	Ta	T <sub>p</sub>	Ta	T <sub>p</sub>	Ta	T <sub>p</sub>	Ta
	Т6	-40	51	51	51	-	-	85	48	85	-40	-40	-40
	T5	-40	64	64	64	-	-	100	61	100	-40	-40	-40
	T4	-40	64	64	64	-	-	135	58	135	-40	-40	-40
	T3 T1	-40	64	64	64	-	-	200	53	200	-40	-40	-40

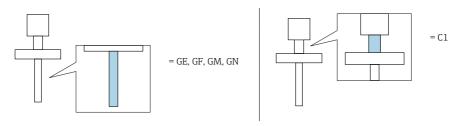



		P1		P2		P2+		Р3		P4		P5	
= B		T <sub>p</sub>	Ta	T <sub>p</sub>	Ta	T <sub>p</sub>	T <sub>a</sub>	T <sub>p</sub>	Ta	T <sub>p</sub>	Ta	T <sub>p</sub>	Ta
	Т6	-20	51	51	51	-	-	85	45	85	-20	-20	-20
	T5	-20	64	64	64	-	-	100	58	100	-20	-20	-20
	T4	-20	64	64	64	-	-	135	52	135	-20	-20	-20
	T3 T1	-20	64	64	64	-	-	150	47	150	-20	-20	-20

		P1		P2		P2+		Р3		P4		P5	
= C		T <sub>p</sub>	Ta	T <sub>p</sub>	Ta								
	Т6	-20	51	51	51	-	-	85	47	85	-20	-20	-20
	T5	-20	64	64	64	-	-	100	60	100	-20	-20	-20
	T4	-20	64	64	64	-	-	135	56	135	-20	-20	-20
	T3 T1	-20	64	64	64	-	-	150	54	150	-20	-20	-20

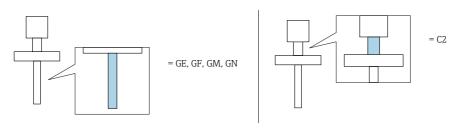


		P1		P2		P2+		P3		P4		P5	
= B, C		T <sub>p</sub>	T <sub>a</sub>	T <sub>p</sub>	T <sub>a</sub>	T <sub>p</sub>	Ta	T <sub>p</sub>	Ta	T <sub>p</sub>	Ta	T <sub>p</sub>	Ta
	Т6	-20	51	51	51	-	-	85	48	85	-20	-20	-20
	T5	-20	64	64	64	-	-	100	61	100	-20	-20	-20
	T4	-20	64	64	64	-	-	135	58	135	-20	-20	-20
	T3 T1	-20	64	64	64	-	-	200	53	200	-20	-20	-20

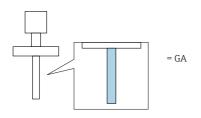


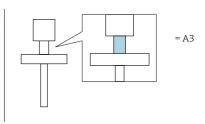

= B		P1		P2		P2+		P3		P4		P5	
		T <sub>p</sub>	Ta	T <sub>p</sub>	Ta	T <sub>p</sub>	T <sub>a</sub>	T <sub>p</sub>	Ta	T <sub>p</sub>	Ta	T <sub>p</sub>	Ta
	T6 T1	-40	51	51	51	-	-	80	43	80	-40	-40	-40


= C		P1		P2		P2+		P3		P4		P5	
		T <sub>p</sub>	Ta	T <sub>p</sub>	Ta	T <sub>p</sub>	T <sub>a</sub>	T <sub>p</sub>	T <sub>a</sub>	T <sub>p</sub>	T <sub>a</sub>	T <sub>p</sub>	Ta
	T6 T1	-40	51	51	51	-	-	80	47	80	-40	-40	-40

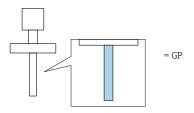


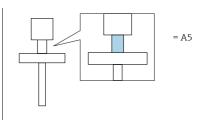

		P1		P2		P2+		P3		P4		P5	
= B		T <sub>p</sub>	T <sub>a</sub>	T <sub>p</sub>	T <sub>a</sub>	T <sub>p</sub>	T <sub>a</sub>	T <sub>p</sub>	Ta	T <sub>p</sub>	Ta	T <sub>p</sub>	Ta
	Т6	-40	51	51	51	-	-	85	45	85	-40	-40	-40
	T5	-40	64	64	64	-	-	100	58	100	-40	-40	-40
	T4	-40	64	64	64	-	-	135	52	135	-40	-40	-40
	T3 T1	-40	64	64	64	-	-	150	47	150	-40	-40	-40

		P1		P2 P2+		P2+	P2+ P3		3 P4			P5	
= C		T <sub>p</sub>	Ta	T <sub>p</sub>	Ta	T <sub>p</sub>	Ta	T <sub>p</sub>	Ta	T <sub>p</sub>	Ta	T <sub>p</sub>	Ta
	Т6	-40	51	51	51	-	-	85	47	85	-40	-40	-40
	T5	-40	64	64	64	-	-	100	60	100	-40	-40	-40
	T4	-40	64	64	64	-	-	135	56	135	-40	-40	-40
	T3 T1	-40	64	64	64	-	-	150	54	150	-40	-40	-40

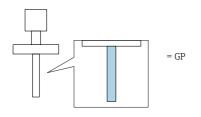

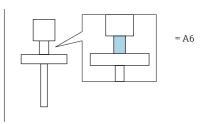

		P1		P2	P2		P2+			P4		P5	
= B, C		T <sub>p</sub>	T <sub>a</sub>	T <sub>p</sub>	Ta								
	Т6	-40	51	51	51	-	-	85	48	85	-40	-40	-40
	T5	-40	64	64	64	-	-	100	61	100	-40	-40	-40
	T4	-40	64	64	64	-	-	135	58	135	-40	-40	-40
	T3 T1	-40	64	64	64	-	-	200	53	200	-40	-40	-40

#### Connection data

Optional specification, ID Nx = NF

When using the Bluetooth® module: No changes to the connection values.

#### Connection compartment Ex d

Basic specification, Position 3 = A

# Terminal 1 (+), 2 (-) Power supply $U_N = 35 \ V_{DC}$ $U_m = 250 \ V$ $I_N = 4 \ to \ 20 \ mA$ $I_{max} = 22 \ mA$ $P_N = 0.7 \ W$

Basic specification, Position 3 = B

The power consumption of I/O modules with passive PFS output can be limited for certain applications.

- Recommended: Power consumption = 1 W. This is obtained for a supply voltage at the terminals of 27  $V_{DC}$ .
- For higher supply voltages  $(U_{max})$ : Insert a serial resistance  $(R_V)$  in order to limit the power consumption, see table below.

#### Table for the PFS serial resistance (R<sub>V</sub>):

Power consumption	1.0 W
Total power consumption	1.88 W
Internal resistance R <sub>I</sub>	760 Ω

U <sub>max</sub> [V]	R <sub>V</sub> min
35	205 Ω
34	177 Ω
33	150 Ω
32	122 Ω
31	95 Ω
30	67 Ω
29	39 Ω
28	12 Ω
27	0 Ω

For values associated with a higher or lower internal power consumption please contact Endress+Hauser.

Terminal 1 (+), 2 (-)	Terminal 3 (+), 4 (-)
Power supply	Switch output (PFS)
$\begin{array}{l} U_{N} = 35 \ V_{DC} \\ U_{m} = 250 \ V \\ I_{N} = 4 \ to \ 20 \ mA \\ I_{max} = 22 \ mA \\ P_{N} = 0.7 \ W \end{array}$	$\begin{array}{l} U_{N} = 35 \ V_{DC} \\ U_{m} = 250 \ V \\ P_{N} = 0.7 \ W \end{array}$

#### *Basic specification, Position 3 = C*

Terminal 1 (+), 2 (-)	Terminal 3 (+), 4 (-)
Power supply	Output 4 to 20 mA
$\begin{array}{l} U_{N} = 30 \; V_{DC} \\ U_{m} = 250 \; V \\ I_{N} = 4 \; to \; 20 \; mA \\ I_{max} = 22 \; mA \\ P_{N} = 0.7 \; W \end{array}$	$\begin{array}{l} U_{N} = 30 \; V_{DC} \\ U_{m} = 250 \; V \\ I_{N} = 4 \; to \; 20 \; mA \\ I_{max} = 22 \; mA \\ P_{N} = 0.7 \; W \end{array}$

#### Electronics compartment Ex ia

#### Service interface (CDI)

Taking the following values into consideration, the device can be connected to the certified Endress+Hauser FXA291 service tool or a similar interface:

#### Service interface

 $U_i = 7.3 \text{ V}$ 

effective inner inductance  $L_i$  = negligible effective inner capacitance C<sub>i</sub> = negligible

 $U_0 = 7.3 \text{ V}$ 

 $I_0 = 60 \text{ mA}$ 

 $P_0 = 110 \text{ mW}$ 

$L_o$ (mH) =	5.00	2.00	1.00	0.50	0.20	0.15	0.10	0.05	0.02	0.01	0.005	0.002	0.001
C <sub>o</sub> (μF) <sup>1)</sup> =	0.73	1.20	1.60	2.00	2.60	-	3.20	4.00	5.50	7.30	10.00	12.70	12.70
$C_o (\mu F)^{2)} =$	-	0.49	0.90	1.40	-	2.00	-	1	-	-	-	-	-

- Values according to PTB "ispark" program Values according to IEC/EN 60079-25, Annex C 2)



www.addresses.endress.com