

Safety Instructions

Proline Promass 100

Modbus RS485


INMETRO: Zone 1
Zone 21

Segurança



Document: XA01219D

Safety instructions for electrical apparatus for explosion-hazardous areas according to ABNT NBR IEC

60079-0 →  3

Proline Promass 100

Modbus RS485

Table of contents

Associated documentation	4
Manufacturer's certificates	4
Manufacturer contact address	5
Extended order code	5
Safety instructions: General	7
Safety instructions: Installation	8
Safety instructions: Zone 21	9
Temperature tables	9
Explosion hazards arising from gas and dust	10
Connection data: Signal circuits	12

Associated documentation

All documentation is available:

- On the CD-ROM supplied (not included in the delivery for all device versions).
- Available for all device versions via:
 - Internet: www.endress.com/deviceviewer
 - Smart phone/tablet: *Endress+Hauser Operations App*
- In the Download Area of the Endress+Hauser web site: www.endress.com → Download

This document is an integral part of the following Operating Instructions:

Measuring device	Modbus RS485
Promass A 100	BA01179D
Promass E 100 (8E1B**-...)	BA01056D
Promass E 100 (8E1C**-...)	BA01711D
Promass F 100	BA01057D
Promass G 100	BA01345D
Promass H 100	BA01177D
Promass I 100	BA01058D
Promass O 100	BA01180D
Promass P 100	BA01059D
Promass S 100	BA01060D
Promass X 100	BA01181D

Additional documentation:

Document type	Contents	Documentation code
Brochure	Explosion Protection	CP00021Z/11

Please note the documentation associated with the device.

Manufacturer's certificates**Declaration of conformity**

INMETRO CERTIFICADO DE CONFORMIDADE

INMETRO certificate of conformity

Certificate number:

DEKRA 13.0003

Affixing the certificate number certifies conformity with the standards under www.abnt.org.br (depending on the device version).

- ABNT NBR IEC 60079-0: 2013
- ABNT NBR IEC 60079-11: 2013
- ABNT NBR IEC 60079-15: 2012
- ABNT NBR IEC 60079-26: 2008
- ABNT NBR IEC 60079-31: 2014

Manufacturer contact address

Endress+Hauser Flowtec AG
 Kägenstrasse 7
 4153 Reinach BL
 Switzerland

Extended order code

The extended order code is indicated on the nameplate, which is affixed to the device in such a way that it is clearly visible. Additional information about the nameplate is provided in the associated Operating Instructions.

Structure of the extended order code



* = Spaceholder: At this position, an option (number or letter) selected from the specification is displayed instead of the placeholders.

- **Device type**
 The device and the device design is defined in the "Device type" section (Product root).
- **Basic specifications**
 The features that are absolutely essential for the device (mandatory features) are specified in the basic specifications. The number of positions depends on the number of features available. The selected option of a feature can consist of several positions.
- **Optional specifications**
 The optional specifications describe additional features for the device (optional features). The number of positions depends on the number of features available. The features have a 2-digit structure to aid identification (e.g. JA). The first digit (ID) stands for the feature group and consists of a number or a letter (e.g. J = test, certificate). The second digit constitutes the value that stands for the feature within the group (e.g. A = 3.1 material (wetted parts), inspection certificate).

More detailed information about the device is provided in the following tables. These tables describe the individual positions and IDs in the extended order code which are relevant to hazardous locations.

Device type

Position	Order code	Selected option	Description
1	Instrument family	8	Coriolis flowmeter
2	Sensor	A, E, F, G, H, I, O, P, S, X	Sensor type
3	Transmitter	1	Transmitter type: 4-wire, compact version
4	Generation index	B, C	Platform generation
5, 6	Nominal diameter	DN 1 ... 350 DN 1: 01 DN 2: 02 ... DN 350: 3E, 3F, 3R	Nominal diameter of sensor

Basic specifications

Position	Order code	Selected Option	Device type		Explosion protection	
			Position 2 Sensor	Position 5, 6 Nomial Diameter	Transmitter sensor	Safety Barrier Promass 100
1, 2	Approval	MM	A	01, 02, 04	Ex ia IIC T6...T1 Gb Ex tb IIIC Txx °C Db	Ex nA [ia Ga] IIC T4 Gc
			E, F	08, 15, 25, 40, 50		
			G	08, 15, 25		
			H, S, P	08, 15, 25, 40		
			I	08, 15, 16, 25, 26, 40	Ex ia IIB T6...T1 Gb Ex tb IIIC Txx °C Db	
			E	80		
			F, O	80, 1H, 1F, 2F		
			H, P, S	50		
			I	41, 50, 51, 80		
			X	3F		
1, 2	Approval	MN	E	80	Ex ia IIC T6...T1 Gb Ex tb IIIC Txx °C Db	
			F, O	80, 1H, 1F, 2F		
			H, P, S	50		
			I	41, 50, 51, 80		

Position	Order code	Selected Option	Device type		Explosion protection	
			Position 2 Sensor	Position 5, 6 Nomial Diameter	Transmitter sensor	Safety Barrier Promass 100
			X	3F		

Txx °C for Group IIIC (dust) → 9

Position	Order code	Selected Option	Description
3	Input; Output	M	Modbus RS485
4	Display; Operation	A	W/o; via communication
5	Housing	A	Compact, alu, coated
		B	Compact hygienic, stainless
		C	Ultra compact hygienic, stainless
13, 14	Device model ¹⁾	A1	1

1) Order code for "Device model" only for measuring devices with product code 8E1C**-...

Optional specifications

ID	Order code for	Option selected	Description
Jx	Test, Certificate	JM	Ambient temperature transmitter -50 °C

Safety instructions: General

- Staff must meet the following conditions for mounting, electrical installation, commissioning and maintenance of the device:
 - Be suitably qualified for their role and the tasks they perform
 - Be trained in explosion protection
 - Be familiar with national regulations (e.g. ABNT NBR IEC 60079-14)
- Install the device according to the manufacturer's instructions and national regulations.
- Do not operate the device outside the specified electrical, thermal and mechanical parameters.
- Only use the device in media to which the wetted materials have sufficient durability.
- Refer to the temperature tables for the relationship between the permitted ambient temperature for the sensor and/or transmitter, depending on the range of application, and the temperature classes.

- Modifications to the device can affect the explosion protection and must be carried out by staff authorized to perform such work by Endress+Hauser.
- When using in hybrid mixtures (gas and dust occurring simultaneously), observe additional measures for explosion protection.
- Observe all the technical data of the device (see nameplate).

Safety instructions: Installation

In the event of potentially explosive vapor/air mixtures, only operate the device under atmospheric conditions.

- Temperature: -20 to +60 °C
- Pressure: 80 to 110 kPa (0.8 to 1.1 bar)
- Air with normal oxygen content, usually 21 % (V/V)

If no potentially explosive mixtures are present, or if additional protective measures have been taken, the device may also be operated under non-atmospheric conditions in accordance with the manufacturer's specifications.

- Safety Barrier Promass 100
 - The device may only be used with the safety barrier supplied.
 - The safety barrier may only be installed in a non-hazardous area or Zone 2. If the safety barrier is installed in Zone 2, it must be installed in a housing. The housing must meet the requirements of ABNT NBR IEC 60079-15.
 - The connecting cable and installation between the safety barrier and device must meet the requirements of ABNT NBR IEC 60079-14.
- Only use certified cable entries and connection plugs M12×1 suitable for the application. Please comply with the selection criteria as defined in ABNT NBR IEC 60079-14.
- Continuous service temperature of the connecting cable: -40 to +80 °C (-50 to +80 °C for optional specifications, ID Jx (test, certificate) = JM); however, at least in accordance with the range of service temperature taking into account additional influences of the process conditions ($T_{a,min}$ and $T_{a,max} + 20$ K).
- Supplied cable glands M20 × 1.5 are only suitable for fixed installation of cables and connections. In the installation, a strain relief must be provided.

Basic specification, Position 5 (Housing) = B, C

To protect the housing of stainless steel housings ensure that the housing gasket is flat and not bent when closing the housing cover. Replace bent gaskets.

Intrinsic safety

- The device can be connected to the Endress+Hauser FXA291 service tool: refer to the Operating Instructions.
- Observe the guidelines for interconnecting intrinsically safe circuits (e.g. ABNT NBR IEC 60079-14, Proof of Intrinsic Safety).
- Observe the connection values when selecting the connection cable between Safety Barrier Promass 100 and the measuring device .

Potential equalization

- Integrate the device into the local potential equalization .
- If the ground connection has been established via the pipe as specified, it is also possible to integrate the sensor into the potential equalization system via the pipe.

Safety instructions: Zone 21

- To ensure dust-tightness, securely seal the transmitter housing, cable entries and sealing plugs.
- Only open the transmitter housing briefly, ensuring that no dust or moisture enters the housing.
- Seal unused entry glands with approved sealing plugs that correspond to the type of protection. The plastic transport sealing plug does not meet this requirement and must therefore be replaced during installation.
- Only use certified cable entries and sealing plugs. The metal cable entries, extensions and sealing plugs supplied meet this requirement.

Temperature tables

Ambient temperature

Minimum ambient temperature:

- $T_a = -40\text{ °C}$
- *Optional specification, ID Jx (Test, Certificate) = JM*
 $T_a = -50\text{ °C}$

Maximum ambient temperature:

$T_a = +60\text{ °C}$ depending on the medium temperature and temperature class

Medium temperature

Minimum medium temperature:

- Promass A, F, G, H, I, P, S, X:
 $T_m = -50\text{ °C}$
- Promass E, O:
 $T_m = -40\text{ °C}$

Maximum medium temperature:

T_m for T6...T1 depending on the maximum ambient temperature T_a

Compact version

Temperature values in brackets [] correspond to Txx °C for Group IIIC (dust). → 10

Basic specification, Position 5 (Housing) = A, B

T _a [°C]	T6 [85 °C]	T5 [100 °C]	T4 [135 °C]	T3 [200 °C]	T2 [300 °C]	T1 [450 °C]
35	50	85	120	150 ^{1) 2)}	150 ^{1) 3)}	150 ^{1) 3)}
50	–	85	120	150 ^{1) 2)}	150 ^{1) 3)}	150 ^{1) 3)}
60	–	–	120	150 ^{1) 2)}	150 ^{1) 3)}	150 ^{1) 3)}

- 1) The medium temperature for Promass 8E1B**... is limited to T_m = 140 °C.
- 2) The following applies to specified sensors with a maximum fluid temperature T_m = 205 °C: T_m = 170 °C
- 3) The following applies to specified sensors with a maximum fluid temperature T_m = 205 °C: T_m = 205 °C

Basic specification, Position 5 (Housing) = C

T _a [°C]	T6 [85 °C]	T5 [100 °C]	T4 [135 °C]	T3 [200 °C]	T2 [300 °C]	T1 [450 °C]
35	50	85	120	150 ^{1) 2)}	150 ^{1) 3)}	150 ^{1) 3)}
45	–	85	120	150 ^{1) 2)}	150 ^{1) 3)}	150 ^{1) 3)}
50	–	–	120	150 ^{1) 2)}	150 ^{1) 3)}	150 ^{1) 3)}

- 1) The medium temperature for Promass 8E1B**... is limited to T_m = 140 °C.
- 2) The following applies to specified sensors with a maximum fluid temperature T_m = 205 °C: T_m = 170 °C
- 3) The following applies to specified sensors with a maximum fluid temperature T_m = 205 °C: T_m = 205 °C

Explosion hazards arising from gas and dust

Determining the temperature class and surface temperature with the temperature table

- In the case of gas: Determine the temperature class as a function of the ambient temperature T_a and the medium temperature T_m.
- In the case of dust: Determine the maximum surface temperature as a function of the maximum ambient temperature T_a and the maximum medium temperature T_m.

Example

- Measured maximum ambient temperature: T_{ma} = 47 °C
- Measured maximum medium temperature: T_{mm} = 108 °C

	Ta [°C]	T6 [85° C]	T5 [100° C]	T4 [135° C]	T3 [200° C]	T2 [300° C]	T1 [450° C]
	35	50	85	120	140	140	140
	50	-	85	120	140	140	140
	60	-	-	120	140	140	140
	35	50	85	120	140	140	140
	45	-	85	120	140	140	140
	50	-	-	120	140	140	140

4.

1. 2. 3.

A0031223


1 Procedure for determining the maximum surface temperature

1. Select device (optional).
2. In the column for the maximum ambient temperature T_a select the temperature that is immediately greater than or equal to the measured maximum ambient temperature T_{ma} that is present.
 - ↳ $T_a = 50\text{ }^\circ\text{C}$.
The row showing the maximum medium temperature is determined.
3. Select the maximum medium temperature T_m of this row, which is larger or equal to the measured maximum medium temperature T_{mm} .
 - ↳ The column with the temperature class for gas is determined:
 $108\text{ }^\circ\text{C} \leq 120\text{ }^\circ\text{C} \rightarrow T_4$.
4. The maximum temperature of the temperature class determined corresponds to the maximum surface temperature for dust: $T_4 = 135\text{ }^\circ\text{C}$.

**Connection data:
Signal circuits**

The following tables contain specifications which are dependent on the transmitter type and its input and output assignment. Compare the following specifications with those on the nameplate of the transmitter.

Terminal assignment*Transmitter*

The order code constitutes part of the extended order code. For detailed information on the device features and the structure of the extended order code →  5.


Modbus RS485 connection version



For use in the intrinsically safe area. Connection via Safety Barrier Promass 100.

Order code for "Output", option **M**

Depending on the housing version, the transmitters can be ordered with terminals or device plugs.

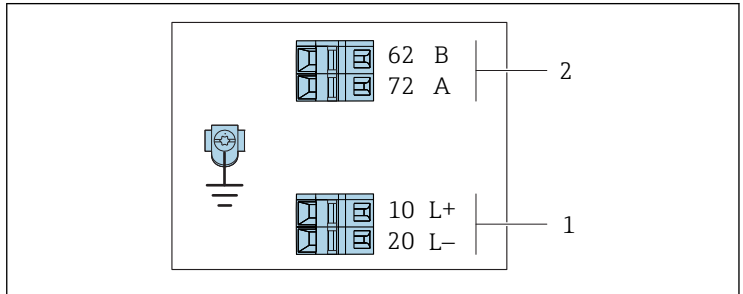

A0030219

2 *Modbus RS485 terminal assignment, connection version for use in intrinsically safe areas (connection via Safety Barrier Promass 100)*

1 *Intrinsically safe power supply*

2 *Modbus RS485*

Order code for "Output"	20 (L-)	10 (L+)	72 (B)	62 (A)
Option M	Intrinsically safe supply voltage		Modbus RS485 intrinsically safe	
Order code for "Output": Option M : Modbus RS485, for use in intrinsically safe areas (connection via Safety Barrier Promass 100)				

Intrinsically safe values

These values only apply for the following device version:
Order code for "Output", option **M** "Modbus RS485", for use in intrinsically safe areas

Safety Barrier Promass 100

Safety-related values

Terminal numbers			
Supply voltage		Signal transmission	
2 (L-)	1 (L+)	26 (A)	27 (B)
$U_{nom} = DC\ 24\ V$ $U_{max} = AC\ 260\ V$		$U_{nom} = DC\ 5\ V$ $U_{max} = AC\ 260\ V$	

Intrinsically safe values

Terminal numbers			
Supply voltage		Signal transmission	
20 (L-)	10 (L+)	62 (A)	72 (B)
$U_o = 16.24\ V$ $I_o = 623\ mA$ $P_o = 2.45\ W$ With IIC ¹⁾ : $L_o = 92.8\ \mu H$, $C_o = 0.433\ \mu F$, $L_o/R_o = 14.6\ \mu H/\Omega$ With IIB: $L_o = 372\ \mu H$, $C_o = 2.57\ \mu F$, $L_o/R_o = 58.3\ \mu H/\Omega$			

1) The gas group depends on the sensor and nominal diameter → 6ff.

Transmitter

Intrinsically safe values

Terminal numbers			
Supply voltage		Signal transmission	
20 (L-)	10 (L+)	62 (A)	72 (B)
$U_i = 16.24\ V$ $I_i = 623\ mA$ $P_i = 2.45\ W$ $L_i = 0\ \mu H$ $C_i = 6\ nF$			

Pin assignment, device plug

Device plug for signal transmission with supply voltage (device side), MODBUS RS485 (intrinsically safe)

<p style="text-align: center;">A0029042</p>	Pin	Assignment	
	1	L+	Supply voltage, intrinsically safe
	2	A	Modbus RS485 intrinsically safe
	3	B	
	4	L-	Supply voltage, intrinsically safe
	5		Grounding/shielding
Coding	Plug/socket		
A	Plug		

www.addresses.endress.com
