

Issued by	NMi Certin B.V.
In accordance with	<ul style="list-style-type: none"><li>– WELMEC guide 8.8 “General and Administrative Aspects of the Voluntary System of Modular Evaluation of Measuring instruments under the MID”.</li><li>– OIML R117-1 Edition 2007 (E) “Dynamic measuring systems for liquids other than water”.</li></ul>
Producer	Endress+Hauser Process Solutions AG Christoph Merian-Ring 12 CH-4153 Reinach Switzerland
Measuring instrument	An <b>electronic calculating and indicating device</b> , intended to be used as a part of a liquid measuring installation. Designation : Bunkering metering system Software version : See the description Accuracy class : 0,3 Environment classes : M3 / E2 Temperature range ambient : -10 °C / +55 °C  Further properties and test results are described in the annexes: - Description TC8396 revision 11; - Documentation folder TC8396-2.
Remark	This revision replaces the previous revisions. The documentation folder is not changed.

Issuing Authority **NMi Certin B.V.**  
10 April 2017



C. Oosterman  
Head Certification Board

**NMi Certin B.V.**  
Hugo de Grootplein 1  
3314 EG Dordrecht  
The Netherlands  
T +31 78 6332332  
certin@nmi.nl  
www.nmi.nl

This document is issued under the provision that no liability is accepted and that the applicant shall indemnify third-party liability.

Reproduction of the complete document only is permitted.

## 1 General information on electronic calculating and indicating device

Properties of the electronic calculating and indicating device, whether mentioned or not, shall not conflict with the legislation.

This Evaluation Certificate is the positive result of the applied voluntary, modular approach, for a component of a measuring instrument, as described in WELMEC guide 8.8.

The complete measuring system must be covered by an EC type-examination Certificate or EU-type examination certificate.



Display panel

Controller (as an example)

The main components (controller, display panel, printer) can be placed in one or more housings. See documentation 8396/1-01 and 8396/9-01 for housing examples.

### 1.1 Essential Parts

#### 1.1.1 Hardware components

- Controller (the picture is an example)



The controller consists of the following modules, mounted in a steel enclosure:

Description	Make and type
industrial Programmable Logic Controller (PLC)	Allen Bradley 1769-L24ER-QBFC1B or Allen Bradley 1769-L27ERM-QBFC1B
power supply	Allen Bradley 1606XLS120E or PULS SL5 for 100-240VAC to 24 VDC conversion
power redundancy unit (optional)	Allen Bradley 1606XLSRED or PULS YR2.DIODE
serial interface	Allen Bradley 17169-ASCII
converter between RS232C and Ethernet	Moxa Nport 5110 or 5150
Modbus RTU interface	Allen Bradley 1769-SM2
analogue input module	Allen Bradley 1769-IF4I
Remote Access Modem with integrated Ethernet switch (optional)	ICP-DAS NS205 5 Port UTP-100, or MDH834, or Allen Bradley / Rockwell 1783-US5T

- Display panel make Allen-Bradley Type: 1200P (Cat: 6181P-12TSXP Ser: E) or a similar type.
- Printer  
 Make OKI, type ML280 Matrix POS (Point of Sale) printer or a similar printer, for instance GEBE GPT-4352-(60) or GPT-4344 or Epson TM-T88V

## 1.2 Essential characteristics

### 1.2.1 Bunkering System controller functionality:

- 1.2.1.1 Count flow meter mass pulses.
- 1.2.1.2 Convert 4-20mA signals in to digital values (pressure(s) and/or temperature(s)).
- 1.2.1.3 Convert 4-20mA signals in to digital values (Valve(s) position guarding).
- 1.2.1.4 Convert Digital IO signal in to digital values (Valve(s) position guarding).
- 1.2.1.5 Receive (Modbus) RS485 flow meter(s) information/diagnostics.
- 1.2.1.6 Transfer all digital information to (Modbus) RS485 slave (Optional in case of RSG40 or RSG45 Paperless recorder).
- 1.2.1.7 The Batch Function enables the operator only to reset a "resettable totalizer". The system measures and counts/totalizes continuously (without interruption). The operator can decide when he resets due to Delivery or Loading end or before starting a new operation.
- 1.2.1.8 Print Ticket (Decisive Presentation of measured Mass) on RS-232C  
 Remark: in certain applications a ticket can be printed when the flow is not zero. A text on that ticket shows that it is not for trade and / or customs.
- 1.2.1.9 Transfer digital information (TCP/IP) to Display Panel.
- 1.2.1.10 Digital Outputs for Alarms and Warnings as galvanically isolated relays switch.
- 1.2.1.11 Zero flow Verification  
 An automatic function for verifying the zero offset allows to verify the connected measurement sensor (meter) without breaking the seals of meter and bunker metering computer. The bunker metering flow computer gives the zero flow as t/h and compares the median value of the zero flow verification cycles with the pre-set tolerance.  
 Basic functions controlled by the Display Panel
- 1.2.1.12 Display warning(s) on power-, communication-failure(s) and process values being above the HiHi or below the LoLo configured process values (outside 4-20mA assigned ranges or if a

signal is not available (broken cable) and (optional) if valve position(s) (digital guard(s)) have changed during a batch.

## 1.2.2 Weights & Measures parameters.

The manufacturer or user should specify and explain the settings and / or values of these parameters.

### 1.2.2.1 A so called "Signature ID" is part of the function block of the custody transfer calculations. This "Legally Relevant Part" has its own versioning and version number and is part of the controller application.

This ID changes when any modification to the calculation algorithms is applied. This happens automatically in the controller. The custody transfer relevant parameters (used in the calculations) are monitored by the audit trail and can only be changed when the hardware sealing switch inside the control cabinet is set to "unsealed". In addition it is also monitored by the audit trail if the control cabinet's door is opened.

### 1.2.2.2 K-Factor of flow meter(s).

### 1.2.2.3 Digital inputs for valve position(s).

### 1.2.2.4 Range of 4-20mA inputs for temperature sensors and pressure sensors.

### 1.2.2.5 Selection between presentation of either mass in vacuum or mass in air or both.

### 1.2.2.6 Factor for conversion from mass in vacuum to mass in air.

### 1.2.2.7 Standard Density low/high limit warning, adjustable by customer. The limit for both low/high density is 0-2000 kg/m<sup>3</sup>, but the setting should match the used volume conversion method.


### 1.2.2.8 Added (indicative) Gross Observed Volume indication, based on operator entered reference density and process Pressure and Temperature: Gross Observed Volume [m<sup>3</sup>] = Mass [T] / (API Reference Density [kg/m<sup>3</sup>] \* Flow weighted average VCF / 1000).

When indicative the indication should be presented as non-Weights & Measures approved.

### 1.2.2.9 Added (indicative) Reference Density calculation from flowing density (Promass-F) and Pressure and Temperature.

When indicative the indication should be presented as non-Weights & Measures approved.

See the following picture, showing the screen.

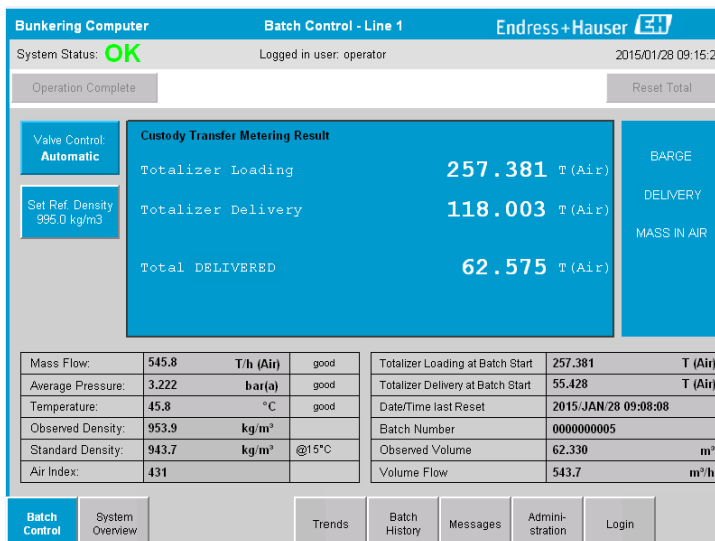

## 1.2.3 The following software packages are installed on the Operating Panel:

### 1.2.3.1 Factory Talk View (Site Edition Version 6.10.00).



# Description

Number **TC8396** revision 11  
Project number 16200604  
Page 4 of 7

- 1.2.3.2 HashCalc (Version 2.02.00337).
- 1.2.3.3 Panda USB Vaccine (Version 1.0.1.4) or the Windows Patch KB967715.
- 1.2.3.4 Endress+Hauser Bunker Computer Operating Panel application:  
Software Versions:
  - 1.01.02; 1.01.03; 1.01.04
  - 1.03.00; 1.03.01; 1.03.02
  - 1.04.00; 1.04.01; 1.04.02; 1.04.03; 1.04.04; 1.04.51; 1.04.52; 1.04.53;
  - 1.05.00; 1.05.01.Hash code to be calculated after start up and commissioning.
- 1.2.4 Antivirus software packages installed  
The version number of the software package is non essential.
  - 1.2.4.1 SuperAntiSpyware Anti Spyware software.
  - 1.2.4.2 Microsoft Security Essentials.
- 1.2.5 The following software packages are installed on the Controller:
  - 1.2.5.1 Bunker Metering Computer Controller Application (PLC program):  
Versions:
    - 1.01.06; 1.01.07; 1.01.08;
    - 1.03.00; 1.03.01; 1.03.02;
    - 1.04.00; 1.04.01; 1.04.02; 1.04.03; 1.04.04; 1.04.51; 1.04.52; 1.04.53;
    - 1.05.00; 1.05.01.Legally Relevant Part:  
Versions:
    - 1.01.03, 1.01.04 or 1.01.05
    - 1.03.00; 1.03.01; 1.03.02
    - 1.04.00; 1.04.01; 1.04.02; 1.04.03; 1.04.04; 1.04.51; 1.04.52;
    - 1.05.00; 1.05.01.The signature ID of the block is calculated automatically after start up and commissioning. The resulting HASH code can be inscribed on the nameplate, or on another plate that fulfils the same demands as for the nameplate (inscription must be durable; it must be impossible to remove to plate without damaging it or the plate must be sealed).
- 1.2.6 The Controller software fulfils the parts P, L and T of the Welmec guide 7.2, issue 5, while the parts U, S and D are not applicable.
- 1.2.7 The Display Panel software fulfils the parts U and T of the Welmec guide 7.2, issue 5, while the parts P, L, S and D are not applicable.  
When the Gross Observed Volume (GOV) is shown next to the legally relevant indication it shall be clearly marked that the GOV is not legally relevant.
- 1.2.8 Users (for information only)  
The system will be setup with the following user accounts:
  - Bunker System operator  
This is the standard user account to be used and has limited access.
  - System administrator  
Administrative account in case of necessary updates. Login information for this account shall not be known to the user of the instrument.



NOTE: Updates will only be installed/applied if they fix a problem that has impacted the Bunkering System Display Panel otherwise the software will be left as is.

## 1.2.9 Security (for information only)

The Bunkering Display Panel is set up to run only the E+H Bunkering Application Display Panel application. The normal (default) user (i.e. the Operator) can only operate the Bunkering Program, this to prevent the operator(s) from inadvertently (or deliberately) changing anything that could change the metrological result(s) on the Bunkering Controller. This is achieved by ensuring that the windows system does not allow the Operator access to the other programs on the Display Panel and disabling the standard Windows keyboard shortcuts (like CTRL+ALT+DEL). The access to metrological parameters is there for granted only to the Representative of an authorized entity by changing the user level of the Bunkering Application program to the highest level and thus gaining access to the Application Program configuration page.

Using the Administrative account the system administrator can access the Computer System, for instance if a critical bug in the Windows system would need to be corrected. Because the Computer connections and cables (protective interfaces) are only accessible by breaking the seal(s) from the cover plate and or Controller housing this means that after an update a representative of an authorized entity needs to reseal the Display Panel' cover plate(s) and housing; of course after it has been verified (HashCalc) that the E+H Bunkering Application Display Panel Application has remained unchanged.

The Bunker Metering Program is setup to have (at least) 3 user levels:

- Standard operator  
The standard operator can use the system to perform the day to day normal operation (Start and Stop batches and print tickets.)
- Supervisor  
The Supervisor can do all that the Standard operator can do but also change Hi and Lo limit settings as well as other (Non Authorized entity) parameters.
- Representative of an authorized entity  
The representative of an authorized entity can do all of the above mentioned but also verify/set the Process parameters that could influence the measured quantity of the Bunker Metering System.

Due to the fact that the system is not accessible from outside (also no internet connection) a contamination with any virus or malware is impossible so Antivirus tools are not mandatory on the panel pc.

The manufacturer makes sure and proofs that the system is "clean" right before the sealing by a representative of an authorized entity. This is ensured through the production process so that the system is delivered "clean". Also after updating or reinstallation of the system software using original images from the manufacturer it is ensured that the system is "clean". An additional test before sealing is not needed but if requested this could be either done with installed Antivirus software or by running a scan from a dedicated tool (e.g. boot from an usb stick with updated Antivirus software).

Informative remark:

The manufacturer's production process includes an Antivirus scan and is included into their quality system.

- ## 1.2.10
- After installation and commissioning (Sealing by an authorized entity) the system has no links to the internet, so no remote connection is available, only a dedicated link to the Controller so contamination with any virus is impossible. (And other protective interfaces through which it is not possible to change files on the Bunkering System Display Panel.



# Description

Number **TC8396** revision 11  
Project number 16200604  
Page 6 of 7

Inside the Controller box is a switch set to either Locked (Custody transfer mode is on) or Unlocked (Custody transfer mode is off) hooked up to a digital input of the Controller. (Only accessible after breaking the seal of the Controller.)

1.2.11 The Controller has the following functions:

1.2.11.1 Power supply.

1.2.11.2 Communication with the Operating Panel (CRCs and packet checksums) using a dedicated TCP/IP cable.

1.2.11.3 Communication with a ticket printer (OKI ML280 or GEBE GPT-4352-(60) or GPT-4344) for the decisive presentation, using an RS-232C cable (odd parity).

1.2.11.4 Frequency input(s) from flow meter(s).

1.2.11.5 Data input from flow meter(s) using Modbus (RS485, Even parity) connection(s).

1.2.11.6 Communication with optional paperless recorder(s) using a Modbus (RS485, Even parity) connection.

1.2.11.7 4-20mA input signals from Temperature Transmitter(s).

1.2.11.8 4-20mA input signals from Pressure Transmitter(s).

1.2.11.9 4-20mA signals to and/or from Pressure Control valve(s).

1.2.11.10 Various digital input connection(s) using dedicated connections.

1.2.11.11 A Control valve will go to manual mode if a broken wire error to the pressure sensor is detected and will return to auto mode after the error is solved.

1.2.12 The Display Panel has the following functions:

1.2.12.1 Power supply.

1.2.12.2 Communication with the controller using a dedicated TCP/IP cable.

1.2.13 Inscription containing the hash code that was detected during legal verification.

1.2.14 EMC measures

The shields of the cables that are connected to the I/O Box shall be electrically connected to the metal of the controller box.

1.3 **Non essential parts**

1.3.1 Passive Circuit breakers in the AC output line.

1.3.2 Modbus-TCP Gateway; Anybus X-gateway - EtherNet/IP-Slave-Ethernet Modbus-TCP Slave type: AB7632-F

1.3.3 Modbus-RTU Gateway; Anybus X-gateway - EtherNet/IP-Slave Modbus-RTU Slave type AB7839-F

## 2 Seals

- Sealing of communication cables  
The (protective interface) cables are terminated behind a sealed plate or strip.
- The controller-Box will be sealed by using a steel strip with a hole for sealing protruding through the lid (Positioned on either the edge where the 'locks' are or on one of the corners depending on location the controller-Box will be mounted).
- Sealing of the inscription that contains the hash code that was detected during legal verification.



# Description

Number **TC8396** revision 11  
Project number 16200604  
Page 7 of 7

## **3 Conditions for Conformity Assessment**

- The electronic calculating and indicating device must be constructed in accordance with the Description and Documentation appertaining to this Evaluation Certificate.
- Third parties are not allowed to use this document and the companion documentation folder without written permission of the owner of this document.

## **4 Test reports**

An overview of performed tests is given in the following test reports, issued by NMI Certin.

- NMI-12200841-2
- NMI-12200841-3
- NMI-12200841-4