



Level



Pressure



Flow



Temperature



Liquid  
Analysis



Registration



Systems  
Components



Services



Solutions

## Safety Instructions

# Proline Prowirl 72, 73

Ex i version

NEPSI Zone 1

Ex documentation

**This document is an integral part of the following Operating Instructions:**

- BA00084D, Proline Prowirl 72 HART
- BA00085D, Proline Prowirl 72 PROFIBUS PA
- BA00095D, Proline Prowirl 72 FOUNDATION Fieldbus
- BA00094D, Proline Prowirl 73 HART
- BA00093D, Proline Prowirl 73 PROFIBUS PA
- BA00096D, Proline Prowirl 73 FOUNDATION Fieldbus


### Contents

General warnings . . . . .	2
Special conditions . . . . .	2
Installation instructions . . . . .	2
COC certificates of conformity . . . . .	3
Description of measuring system . . . . .	3
Nameplates . . . . .	4
Type code . . . . .	5
Temperature table compact version . . . . .	6
Temperature table remote version . . . . .	7
Design of measuring system . . . . .	7
Cable entries . . . . .	7
Cable specification . . . . .	7
Potential equalization . . . . .	9
Electrical connection . . . . .	9
Connecting the supply voltage or signal cable . . . . .	10
Service adapter . . . . .	11
Technical Data . . . . .	11


**General warnings**

- For installation, use and maintenance of the flow meter, the instruction manual and the following standards shall be observed:
  - GB50257-1996 "Code for construction and acceptance of electric device for explosive atmospheres and fire hazard electrical equipment installation engineering"
  - GB3836.13-1997 "Electrical apparatus for explosive gas atmospheres – Part 13: Repair and overhaul for apparatus used in explosive gas atmospheres"
  - GB3836.15-2000 "Electrical apparatus for explosive gas atmospheres – Part 15: Electrical installations in hazardous area (other than mines)"
  - GB3836.16-2006 "Electrical apparatus for explosive gas atmospheres – Part 16: Inspection and maintenance of electrical installation (other than mines)"
- The flow meter shall not be modified in order to ensure the explosion protection performance of the equipment. Any change may impair safety.
- Mounting, electrical installation, commissioning and maintenance of the devices may only be performed by technical staff trained in the area of explosion protection.
- Compliance with all of the technical data of the device (see nameplate) is mandatory.
- To guarantee resistance to dust and water, the transmitter housing, the connection housing of the remote version and the cable entries must be tightly sealed.
- The device's suitability in the event of gas-air mixture occurring simultaneously requires further assessment.

**Special conditions**

- The device must be integrated into the potential equalization system. Potential must be equalized along the intrinsically safe sensor circuits. Further information is provided in the "Potential equalization" section on →  7.
- Ga/Gb in Ex marking means that the interior of the sensor tube can be used in zone 0, but the enclosure which are made of aluminium alloy must be installed. So that, even in the event of rare incidences, ignition sources due to impact and friction sparks are excluded.

**Installation instructions**

- The measuring device must only be used in the permitted temperature class. The values of the individual temperature classes can be found in the temperature tables on →  5.
- The cable entries and openings not used must be sealed tight with suitable components.
- The manufacturer's specifications for all devices connected to the intrinsically safe circuits must be taken into consideration.
- To rotate the transmitter housing, please follow the same procedure as for non-Ex versions. The transmitter housing may also be rotated during operation.
- The continuous service temperature of the cable must correspond at least to the temperature range of -40 °C to +10 °C above the ambient temperature present (-40 °C ... (T<sub>a</sub> +10 °C)).
- If Prowirl 72 or Prowirl 73 devices are interconnected with certified intrinsically safe circuits of Category ib, explosion group IIC, the explosion protection changes from Ex ia to Ex ib IIC.
- The dielectric strength between the various intrinsically safe circuits must be at least 500 Vrms (affects outputs/inputs: (Prowirl 72\*\*\*\*\_\*\*\*\*\*A and Prowirl 73\*\*\*\*\_\*\*\*\*\*A)).
- The device may only be used for fluids against which the wetted materials are sufficiently resistant.
- The service connector may not be connected in a potentially explosive atmosphere.

**COC certificates of conformity**

**COC certificates of conformity**

By affixing the certification number the product conforms with the following standards:

- GB3836.1 – 2010
- GB3836.4 – 2010
- GB3836.20 - 2010

Certification numbers:

- GYJ12.1048X

**Inspection body**

NEPSI, National Supervision and Inspection Centre for Explosion Protection and Safety of Instrumentation

**Description of measuring system**


The measuring system consists of transmitters and sensors.

Two versions are available:

- Compact version: transmitters and sensors form a mechanical unit.
- Remote version: transmitters and sensors are installed separately and connected to each other via connecting cables.

**Nameplates**

The nameplates, which are mounted in a clearly visible position on the transmitter and sensor, contain all of the relevant information about the measuring system.

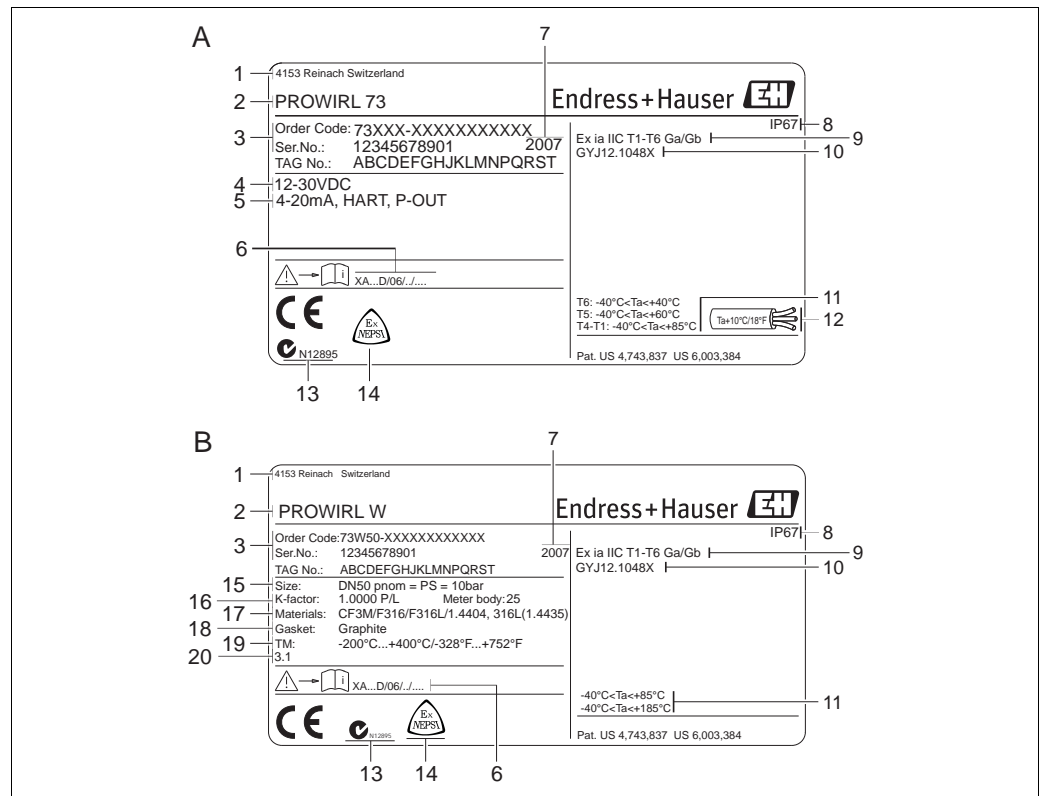

A0008370

Fig. 1: Example for nameplates of a transmitter and of a sensor

A Transmitter nameplate

B Sensor nameplate

1 Production site

2 Transmitter or sensor type

3 Order code and serial number

4 Power supply

5 Output

6 Associated Ex documentation

7 Year of manufacture

8 Type of protection

9 Type of enclosure protection

10 Number of the NEPSI certificate of conformity

11 Ambient temperature range

12 Maximum cable temperature

13 C-Tick symbol

14 NEPSI Symbol

15 Nominal diameter/nominal pressure

16 Calibration factor/zero point

17 Materials in contact with the medium


18 Sensor seal material

19 Fluid temperature range

20 Additional specification, e.g. 3.1 = 3.1 certificate for wetted material

**Type code**

The type code describes the exact design and the equipment of the measuring system. It can be read on the nameplate of the transmitter and sensor and is structured as follows:

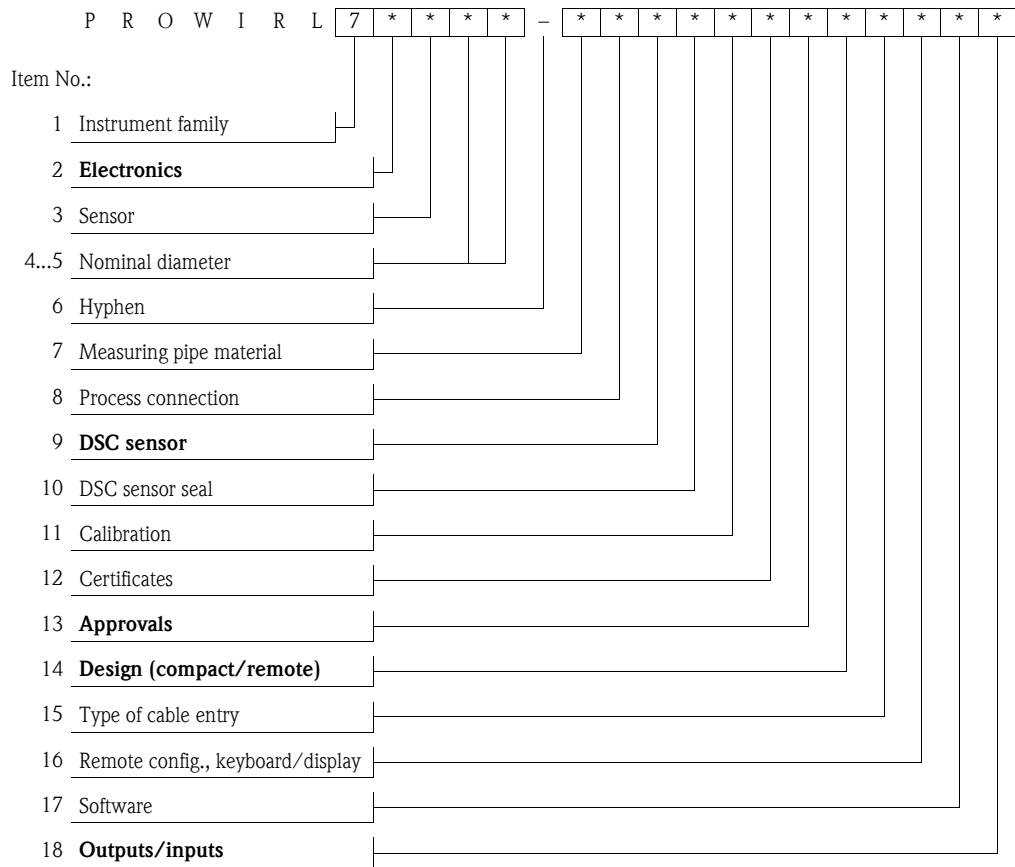

**Electronics (Item No. 2 in type code → 4)**

*	Transmitter	Electronics/housing
2	Prowirl 72	Intrinsically safe transmitter electronics
3	Prowirl 73	

**Approvals (Item No. 13 in type code)**

*	Approval	Outputs/inputs	Explosion protection GB			Certification number
			Compact	Remote transmitter	Remote sensor	
S	Zone 1	A, W	Ex ia IIC T1-T6 Ga/Gb	Ex ia[ia Ga] IIC T6 Gb	Ex ia IIC T1-T6 Ga/Gb	GYJ12.1048X
		H, K	Ex-ia IIC T1-T4 Ga/Gb	Ex ia[ia Ga] IIC T6 Gb	Ex ia IIC T1-T4 Ga/Gb	

**Type (compact/remote; Item No. 14 in type code)**

*	Type
A, J	Compact
E, F, K, L, M, N, O, P, Q, R, S, T	Remote

**Outputs/inputs (Item No. 18 in type code)**

*	Approval
A, W	T1 ~ T6
H, K	T1 ~ T4

**Note!**

A detailed explanation of these values, regarding the available outputs and inputs, as well as a description of the associated terminal assignments and connection data can be found from → 8 onwards.

**Temperature table compact version**

Maximum fluid temperature [°C] depending on the ambient temperature  $T_a$  and the DSC sensor used (Item No. 9 in the type code → 4).

	$T_a$	T6 (85 °C)	T5 (100 °C)	T4 (135 °C)	T3 (200 °C)	T2 (300 °C)	T1 (450 °C)
Prowirl 72***_**0*****	-40 °C ... +40 °C	80	95	130	195	280	280
	-40 °C ... +60 °C	-	95	130	195	280	280
	-40 °C ... +70 °C	-	-	130	195	280	280
Prowirl 72***_**1***** Prowirl 72***_**2***** Prowirl 72***_**3***** Prowirl 72***_**6*****	-40 °C ... +40 °C	80	95	130	195	290	440
Prowirl 73***_**4***** Prowirl 73***_**2*****	-40 °C ... +70 °C	-	-	130	195	290	440

Dependency of the minimum fluid temperature  $T_{med}$  on the DSC sensor:

$T_{med} -200 °C$	$T_{med} -50 °C$	$T_{med} -40 °C$
Prowirl 72***_**1***** Prowirl 72***_**2***** Prowirl 72***_**3***** Prowirl 73***_**4***** Prowirl 73***_**2*****	Prowirl 72F***_**0*****	Prowirl 72***_**0*****

**⚠ Warning!**

For devices with outputs Prowirl 72\*\*\*\_\*\*\*\*\*H/K and 73\*\*\*\_\*\*\*\*\*H/K, temperature classes T5 and T6 are not permitted.

**Temperature table remote version**

**Sensor**

Maximum fluid temperature [°C] depending on the ambient temperature  $T_a$  and the DSC sensor used (Item No. 9 in the type code → 4).

	$T_a$	T6 (85 °C)	T5 (100 °C)	T4 (135 °C)	T3 (200 °C)	T2 (300 °C)	T1 (450 °C)
Prowirl 72***_**0*****	-40 °C ... +40 °C	80	95	130	195	280	280
	-40 °C ... +60 °C	-	95	130	195	280	280
	-40 °C ... +85 °C	-	-	130	195	280	280
Prowirl 72***_**1***** Prowirl 72***_**2***** Prowirl 72***_**3***** Prowirl 72***_**6*****	-40 °C ... +40 °C	80	95	130	195	290	440
Prowirl 73***_**4***** Prowirl 73***_**2*****	-40 °C ... +85 °C	-	-	130	195	290	440

Dependency of the minimum fluid temperature  $T_{med}$  on the DSC sensor:

$T_{med}$ -200 °C	$T_{med}$ -50 °C	$T_{med}$ -40 °C
Prowirl 72***_**1***** Prowirl 72***_**2***** Prowirl 72***_**3***** Prowirl 73***_**4***** Prowirl 73***_**2*****	Prowirl 72F***_**6*****	Prowirl 72***_**0*****

**Warning!**

For devices with outputs Prowirl 72\*\*\*\_\*\*\*\*\*H/K and 73\*\*\*\_\*\*\*\*\*H/K, temperature classes T5 and T6 are not permitted.

**Transmitter**


The minimum ambient temperature is -40 °C.

The maximum ambient temperature [°C] depending on the device used is:

	T6 (85 °C)	T5 (100 °C)	T4 (135 °C)	T3 (200 °C)	T2 (300 °C)	T1 (450 °C)
Prowirl 72***_*****A Prowirl 72***_*****W Prowirl 73***_*****A Prowirl 73***_*****W	40	60	80	80	80	80
Prowirl 72***_*****H Prowirl 72***_*****K Prowirl 73***_*****H Prowirl 73***_*****K	-	-	80	80	80	80

**Design of measuring system**

**Compact/remote version design**

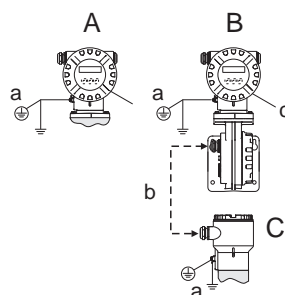

- A Transmitter housing (compact/remote version)
- B Transmitter housing (remote version)
- C Sensor connection housing (remote version)
- a Screw terminal for connecting to potential matching system
- b Remote version connecting cable (see also below)
- c Terminal/electronics compartment cover (see below)
- d -

Fig. 2

A0004112

Terminal assignment and connection data → 8.

**Cable entries** Thread for cable entry M20x1.5 or 1/2"-NPT or G 1/2", as required.

**Cable specification** The sensor cable connection between the sensor and the transmitter has Ex ia explosion protection.  
 The maximum capacitance per unit length of the cable connection is 1 µF/km.  
 The maximum inductance of the cable is 1 mH/km.  
 The maximum inductance of the cable length is 100 m.

The cable supplied by Endress+Hauser (max. 30 m) complies with these requirements.

**Potential equalization**



Caution!

- There must be potential matching along the circuits (inside and outside the hazardous area).
- The transmitter must be safely included in the potential matching system by means of the screw terminal (c) on the outside of the transmitter housing or by means of the corresponding ground terminal in the connection compartment (f).
- Alternatively, the sensor and the transmitter (compact version) or the connection housing of the sensor can be included in the potential matching system by means of the pipeline if a ground connection, performed as per the specifications, is ensured.

**Electrical connection**

**Connection compartment**

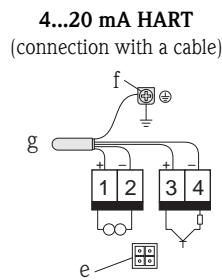


Fig. 3

A0004027

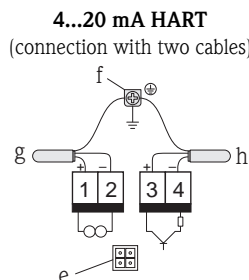


Fig. 4

A0004028

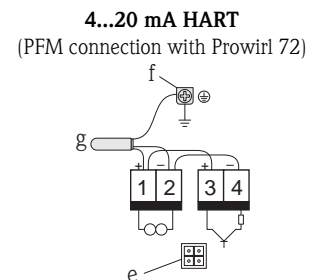


Fig. 5

A0004029

**PROFIBUS PA**

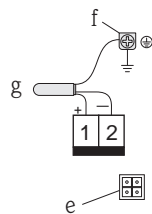


Fig. 6

A0004030

**FOUNDATION Fieldbus**

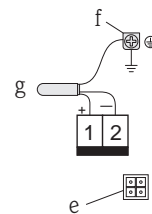


Fig. 7

A0004030

e Service connector (see also → 9)

f HART ground terminal: if the potential matching is routed via the cable and if two cables are used, both cables must be connected to the potential matching system if a connection is not already established to screw terminal (a).  
 PROFIBUS and FOUNDATION Fieldbus: between the stripped fieldbus cable and the ground terminal, the cable shielding must not exceed 5 mm in length

g HART (one cable): cable for supply voltage and/or pulse output

HART (two cables): cable for supply voltage

PROFIBUS: cable of input and output circuits)

FOUNDATION Fieldbus: cable of input and output circuits

h Optional pulse/frequency output, can also be operated as a status output (not for PROFIBUS PA and FOUNDATION Fieldbus)

Note!

PFM output (pulse/frequency modulation) for Prowirl 73: connection as illustrated in → 3 or → 4; only together with flow computer RMC or RMS 621

**Connecting the supply voltage or signal cable**

The terminal assignment and the connection data for the supply voltage are identical for all devices, regardless of the device version (type code).

Note!

A graphic illustration of the electrical connections is provided on → 7.

**Terminal assignment /connection data**

Terminals	1 (+)	2 (-)
<b>Prowirl 72****_*****W</b> <b>Prowirl 73****_*****W</b>	Transmitter power supply / 4...20 mA HART	
Intr. safe circuit	Ex ia or Ex ib	
Safety-related values	U <sub>i</sub>	30 V
	I <sub>i</sub>	300 mA
	P <sub>i</sub>	1 W
	L <sub>i</sub>	negligible
	C <sub>i</sub>	5.28 nF

Terminals	1 (+)	2 (-)	3 (+)	4 (-)
<b>Prowirl 72****_*****A</b> <b>Prowirl 73****_*****A</b>	Transmitter power supply / 4...20 mA HART		Optional pulse/status output	
Intr. safe circuit	Ex ia or Ex ib		Ex ia or Ex ib	
Safety-related values	U <sub>i</sub>	30 V	30 V	
	I <sub>i</sub>	300 mA	300 mA	
	P <sub>i</sub>	1 W	1 W	
	L <sub>i</sub>	negligible	negligible	
	C <sub>i</sub>	5.28 nF	negligible	

Terminals	1 (+)	2 (-)
<b>Prowirl 72****_*****H</b> <b>Prowirl 73****_*****H</b>	PROFIBUS PA	
Intr. safe circuit	Ex ia or Ex ib	
Functional values	U <sub>B</sub>	9...32 V DC
	I <sub>B</sub>	16 mA
	P	≤ 1 W
Safety-related values	U <sub>i</sub>	17.5 V
	I <sub>i</sub>	500 mA
	P <sub>i</sub>	8.5 W
	L <sub>i</sub>	≤ 10 μF
C <sub>i</sub>	≤ 5 nF	

or

1 (+)	2 (-)
PROFIBUS PA	
Ex ia or Ex ib	
9...32 V DC	
16 mA	
≤ 1 W	
24 V	
250 mA	
1.2 W	
≤ 10 μF	
≤ 5 nF	

Terminals	1 (+)	2 (-)
<b>Prowirl 72****_*****K</b> <b>Prowirl 73****_*****K</b>	FOUNDATION Fieldbus	
Intr. safe circuit	Ex ia or Ex ib	
Functional values	U <sub>B</sub>	9...32 V DC
	I <sub>B</sub>	16 mA
	P	≤ 1 W
Safety-related values	U <sub>i</sub>	17.5 V
	I <sub>i</sub>	500 mA
	P <sub>i</sub>	5.5 W
	L <sub>i</sub>	≤ 10 μF
C <sub>i</sub>	≤ 5 nF	



or

1 (+)	2 (-)
FOUNDATION Fieldbus	
Ex ia or Ex ib	
9...32 V DC	
16 mA	
≤ 1 W	
24 V	
250 mA	
1.2 W	
≤ 10 μF	
≤ 5 nF	

When the code for outputs/inputs equals "H" or "K" the flow meter meets all requirements for a FISCO Field Device (IEC 60079-27).



**Service adapter**

The service connector (for connection, see →  3...→  7, e) is only used to connect service interfaces approved by Endress+Hauser.

Only the “PROLINE EX TWO-WIRE CABLE” connecting cable can be used to connect a Prowirl 72 or 73 with the service interface FXA 193.

 Warning!

The service connector may not be connected in a potentially explosive atmosphere.

**Technical Data****Dimensions**

The dimensions of the Ex transmitter housing and the sensor correspond to the standard versions. Please refer to the respective Technical Information for these dimensions:

- Prowirl 72F, 72W, 73F, 73W: TI00070D

[www.endress.com/worldwide](http://www.endress.com/worldwide)

---

**Endress+Hauser**   
People for Process Automation