




## Installation

### Installation locations

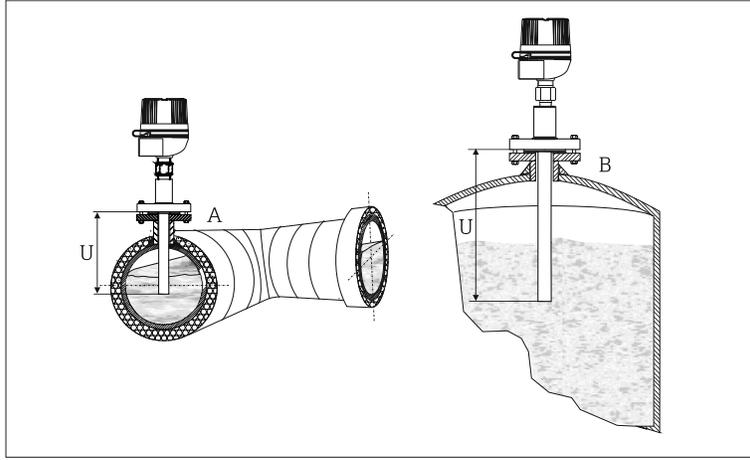

Examples of installation. In pipes of a small section the axis line of the duct must be reached and if possible slightly exceeded by the tip of the probe (=U).

- A: Pipe installation  
B: Container installation


For installation proceed as follows:

1. Attach thermowell to pipe or process container wall. Install and tighten the Thermowell before applying process pressure.
2. Make sure that the process fitting matches the maximum specified process pressure.
3. Seal the extension nipples with TFE tape before screwing the sensor into the thermowell.
4. Thermowells are used in measuring the temperature of a moving fluid in a conduit, where the stream exerts an appreciable force. The limiting value for the thermowells is governed by the temperature, the pressure and the speed of the medium, the immersion length, the materials of the thermowell and the medium, etc.

For operating conditions, a stress calculation should be carried out.

## Dimensions

With spring loaded insert and self contained nipple. All dimensions in inches.

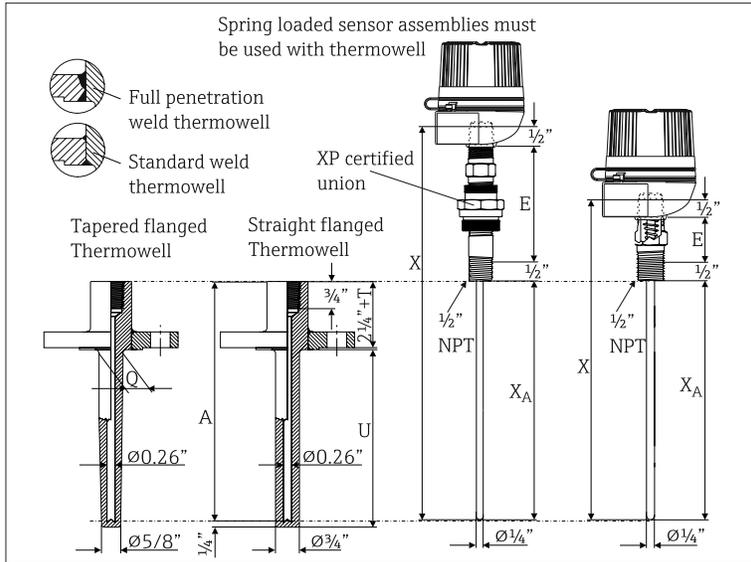

U	Thermowell Immersion length	Q	Thermowell diameter
E	Extension	$X_A = A$	Immersion length TC sensor = thermowell drilled depth ( $A = U + 2" + T$ )
T	Lag dimension	X	Insert overall length ( $X = A + E$ )

Recommended minimum immersion for thermowell:



Tapered TW = 4 1/2"	3/4" straight TW = 4"
---------------------	-----------------------

**i** Spare part insert, TU121. For replacement with additional option code (XP spare part) need to be used to assure approved classification, please contact Endress+Hauser!


## Electrical connection-wiring diagrams

### Head mounted transmitter (single/dual)

### Field mounted transmitter

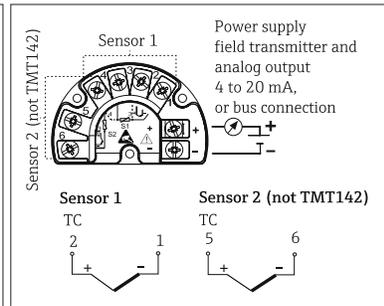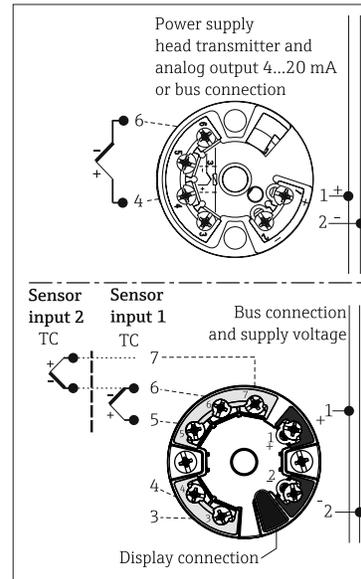

### Terminal block mounted

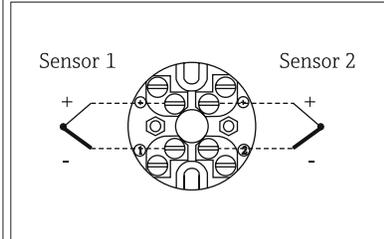

Wire specifications: Thermocouple grade, TFE insulated 20AWG, 7 strands with stripped ends

Flying leads, standard 3" for wiring in terminal head, head transmitter or terminal block mounted

Flying leads, 5 1/2" for wiring with field housing or field transmitter assembly

**i** The blocks and transmitters are shown as they will sit inside the heads in reference to the conduit opening. ALWAYS terminate leads to the outside screw!

Flange rating: ASME B16.5				
U	E (nom. dimension)	T	Flange size	ØQ
2", 4", 7", 10" 13", 16", 22"; specified length 2" to 18" in 1/2" increments	Hex nipple = 1" or Nipple Union Nipple (NUN) = 4" or 7" Material: Steel or 316SS	specified length 1" to 10" in 1/2" increments	1" 1 1/2" 2"	7/8" 1 1/16" 1 1/16"

## Technical data

Upper temperature limits for various thermocouple types in °F (°C)					
Sheath OD	Type T	Type J	Type E	Type K	Type N
Ø 1/4"	700 °F (370 °C)	1330 °F (720 °C)	1510 °F (820 °C)	2100 °F (1150 °C)	

Thermocouple color codes as per ASTM E-230

Ambient temperature limits\*

Housing without head-mounted transmitter	
Aluminium pressure die-cast housing	-58 to 212 °F (-50 to 100 °C)
Stainless steel housing	-58 to 212 °F (-50 to 100 °C)
Housing with head-mounted transmitter	
All types of housing	-40 to 185 °F (-40 to 85 °C)
Field transmitter	
with display	-40 to 158 °F (-40 to 70 °C)
without display	-40 to 185 °F (-40 to 85 °C)

\*For hazardous areas refer to the transmitter control drawing

Weight

From 1 to 10 lbs

Material	Max. temp. rating	Application notes
316SS	1700 °F (927 °C)	Superior corrosion resistance. Duplex version of type N is not available with 316SS sheaths.
Inconel 600	2100 °F (1149 °C) <sup>1</sup>	Excellent oxidation and corrosion resistance at high temperature. Not to be used in sulphurous atmospheres over 1000 °F (538 °C). Types T & J are not available with Inconel 600 sheaths.

1) Max. working temperature under oxidizing conditions: reducing conditions reduce max. temp. to 1900 °F (1038 °C).