

Housing without head-mounted transmitter	
Aluminium pressure die-cast housing	-58 to 212 °F (-50 to 100 °C)
Stainless steel housing	-58 to 212 °F (-50 to 100 °C)
Housing with head-mounted transmitter	
All types of housing	-40 to 185 °F (-40 to 85 °C)
Field transmitter	
with display	-40 to 158 °F (-40 to 70 °C)
without display	-40 to 185 °F (-40 to 85 °C)

*For hazardous areas refer to the transmitter control drawing

Performance Characteristics

Maximum measured error

Type	Temperature range		Standard Tolerance in % and °C* (whichever is greater)	
	°C	°F	IEC class 1	IEC class 2
E	0 to 870	32 to 1600	± 1.0 or ± 0.4%	± 1.7 or ± 0.5%
J	0 to 760	32 to 1400	± 1.1 or ± 0.4%	± 2.2 or ± 0.75%
K	0 to 1260	32 to 2300	± 1.1 or ± 0.4%	± 2.2 or ± 0.75%
T	0 to 370	32 to 700	± 0.5 or ± 0.4%	± 1.0 or ± 0.75%
N	0 to 1260	32 to 2300	± 1.1 or ± 0.4%	± 2.2 or ± 0.4%

* For measurement errors in °F, calculate using equation above in °C, then multiply the outcome by 1.8.


Dielectrical strength The units are factory tested with 850 V_{DC} for one second between live parts (leads/terminals) and exposed non-current-carrying metal parts (e.g. insert sheath)

Supplementary documentation

All important Temperature Operating Instructions, particularly with regard to head and field transmitters are available on CD-ROM, find enclosed or order by order number: **SONDTT-AG**.

www.addresses.endress.com

Compact Instructions Explosion proof Thermocouple Assembly in Thermowell T53

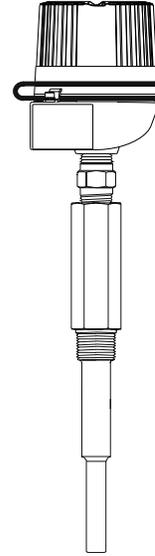

Measuring System

Explosion proof Thermocouple assembly in thermowell with spring loaded insert and enclosure for process industry.

The sensor is made up of a MgO insulated thermocouple as a measurement probe and a thermowell made of bar-stock material.

The thermocouple sensor complies with the ASTM E-230 and IEC60584 specifications. The sensor is designed to ensure highest accuracy and long term stability.

Though the information provided herein is believed to be accurate, be advised that the information contained herein is NOT a guarantee of satisfactory results. Specifically, this information is neither a warranty nor guarantee, expressed or implied, regarding performance, merchantability, fitness, or other matter with respect to the products; and recommendation for the use of the product/process information in conflict with any patent. Please note that Endress+Hauser reserves the right to change and/or improve the product design and specifications without notice.

Cautions draw attention to activities or procedures that can lead to persons being seriously injured, to safety risks or to the destruction of the device if they are not carried out properly.



Notes draw attention to activities or procedures that can have a direct influence on operation or trigger an unforeseen device reaction if they are not carried out properly.



Safety pictograms and symbols

Returns Please follow the Return Authorization Policy which is attached with this manual.

Installation and operation The unit is constructed using the most up to date production equipment and complies with the safety requirements of the local guidelines. However, if it is installed incorrectly or misused, certain application dangers can occur. Installation, wiring and maintenance of the unit must only be completed by trained, skilled personnel who are authorized to do so by the plant operator. The plant operator must make sure that the measurement system has been correctly wired to the connection schematics. Procedures indicated in these instructions must be followed.

For further information regarding connections, please refer to the corresponding Standards.

The accessories for pipe connections and the appropriate gaskets and sealing rings are not supplied with the sensors. These are the customer's responsibility. Depending on temperature and pressure operating conditions, the gaskets, the sealing and the applicable torques must be selected by the user.

Approval	Drawing code	XP DIP Class I, II, III Div. 1+2	XP NI DIP Class I, II, III Div. 1+2	FM	ZD062R/09/en
				FM	ZD057R/09/en
				CSA	ZD055R/09/en
				CSA	ZD053R/09/en

1. Install the unit according to the relevant NEC Code and local regulations.
2. Avoid any spark due to impact, friction and installation. Anti-sparking wrenches should be utilized.
3. Approved apparatus must be installed in accordance with manufacturer's instructions, see corresponding Control Drawing.

Installation Guidelines and Safety instructions

Correct use The manufacturer cannot be held responsible for damage caused by misuse of the unit. The installation conditions and connection values indicated in the operating instructions must be followed!

Safe and secure operation of the temperature sensor can only be guaranteed if the operating instructions of the used transmitters and all included safety notes are read, understood and followed. For Endress+Hauser temperature transmitters see enclosed CD-ROM.


Electrical shock could cause death or serious injury. If the sensor is installed in a high voltage environment and a fault or installation error occurs, high voltage may be present on the connection terminals or the probe itself.



Important Notice

Installation

Installation locations

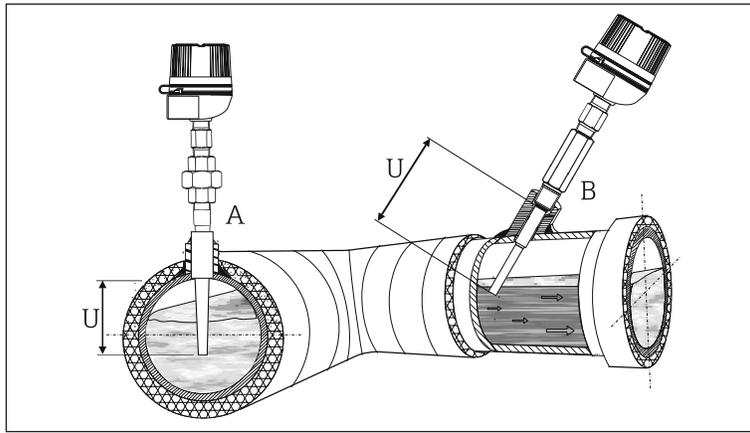

Examples of pipe installation. In pipes of a small section the axis line of the duct must be reached and if possible slightly exceeded by the tip of the probe (=U).

- A: Socket weld installation
B: Threaded, tilted installation


For installation proceed as follows:

1. Attach thermowell to pipe (see A and B) or process container wall. Install and tighten the Thermowell before applying process pressure.
2. Make sure that the process fitting matches the maximum specified process pressure.
3. Seal the extension nipples with TFE tape before screwing the sensor into the thermowell.
4. Thermowells are used in measuring the temperature of a moving fluid in a conduit, where the stream exerts an appreciable force. The limiting value for the thermowells is governed by the temperature, the pressure and the speed of the medium, the immersion length, the materials of the thermowell and the medium, etc.

For operating conditions, a stress calculation should be carried out.

Dimensions

with spring loaded insert and self contained nipple. All dimensions in inches

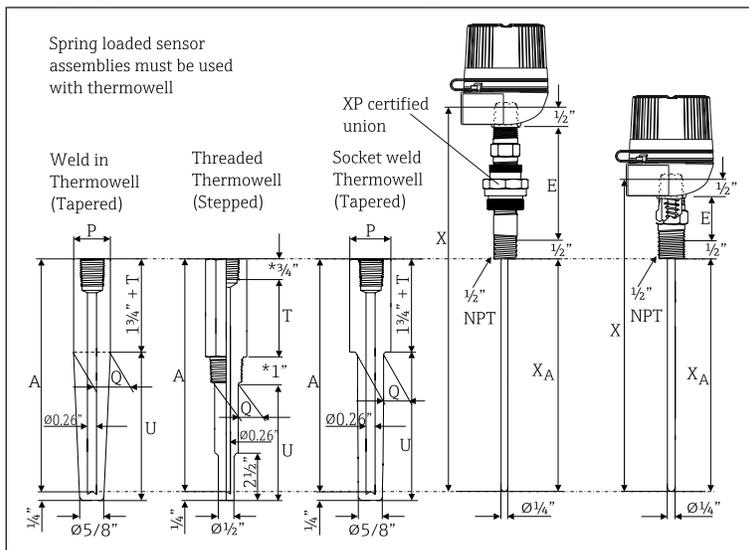

U = Thermowell Immersion length (see table)	T = Lag dimension (3" or specified length 1" to 6" in 1/2" increments)
E = Extension (see table)	X_A = A = Immersion length TC sensor = thermowell drilled depth ($A = U + 1\frac{1}{2} + T$)
Q = Thermowell diameter	X = Insert overall length ($X = A + E$)
P = Pipe size (Nom. 3/4"; Dia. = 1.050" - Nom. 1"; Dia. = 1.315")	

*For wells with 1/2" NPT - 1" Process thread length and 3/4" Hex length dimensions are reversed.


Recommended minimum immersion for thermowell:

Stepped TW = 2 1/2"	Tapered TW = 4 1/2"	Weld in TW = 4 1/2"
---------------------	---------------------	---------------------


i Spare part insert, TU121. For replacement with additional option code (XP spare part) need to be used to assure approved classification, please contact Endress+Hauser!

Electrical connection-wiring diagrams


Head mounted transmitter (single/dual)

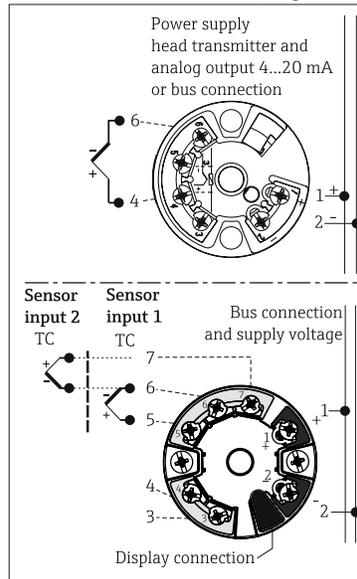

Field mounted transmitter

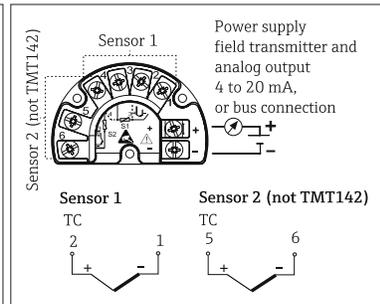

Terminal block mounted

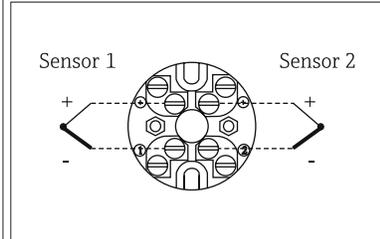

Wire specifications: Thermocouple grade, TFE insulated 20AWG, 7 strands with stripped ends

Flying leads, standard 3" for wiring in terminal head, head transmitter or terminal block mounted

Flying leads, 5 1/2" for wiring with field housing or field transmitter assembly

i The blocks and transmitters are shown as they will sit inside the heads in reference to the conduit opening. ALWAYS terminate leads to the outside screw!

U	E (nom. dimension)	Process connection	Shape of Thermowell	ØQ
2 1/2", 4 1/2", 7 1/2", 10 1/2"; specified length 2" to 18" in 1/2" increments	Hex nipple = 1" or Nipple Union Nipple (NUN) = 4" or 7" Material: Steel or 316SS	1/2" NPT	Stepped (Standard duty)	5/8"
			Tapered (Heavy duty)	1 1/16"
		3/4" NPT	Stepped (Standard duty)	3/4"
			Tapered (Heavy duty)	7/8"
		1" NPT	Stepped (Standard duty)	7/8"
			Tapered (Heavy duty)	1 1/16"
		3/4" Socket weld	Stepped (Standard duty)	3/4"
			Tapered (Heavy duty)	3/4"
		1" Socket weld	Stepped (Standard duty)	7/8"
Tapered (Heavy duty)	1"			
3/4" weld in	Tapered (Heavy duty)	1.050"		
	1" weld in	Tapered (Heavy duty)	1.315"	

Technical data

Upper temperature limits for various thermocouple types in °F (°C)					
Sheath OD	Type T	Type J	Type E	Type K	Type N
Ø 1/4"	700 °F (370 °C)	1330 °F (720 °C)	1510 °F (820 °C)	2100 °F (1150 °C)	

Thermocouple color codes as per ASTM E-230

Weight

From 1 to 10 lbs

Material	Max. temp. rating	Application notes
316SS	1700 °F (927 °C)	Superior corrosion resistance. Duplex version of type N is not available with 316SS sheaths.
Inconel 600	2100 °F (1149 °C) ¹	Excellent oxidation and corrosion resistance at high temperature. Not to be used in sulphurous atmospheres over 1000 °F (538 °C). Types T & J are not available with Inconel 600 sheaths.

¹ Max. working temperature under oxidizing conditions; reducing conditions reduce max. temp. to 1900 °F (1038 °C).

Shock and vibration resistance 4g/2 to 150 Hz as per IEC 60 068-2-6